



KARCHER G 180 Q Smart Control Plus Trigger Gun Instruction Manual

[Home](#) » [Karcher](#) » KARCHER G 180 Q Smart Control Plus Trigger Gun Instruction Manual 

KARCHER G 180 Q Smart Control Plus Trigger Gun



Contents

- [1 Instruction](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)

Instruction

The display/indicator for the pressure and detergent dosing levels on the high-pressure gun only works if used with a K5 / K7 Smart Control high-pressure cleaner and the original Smart Control spray lance included.

Alternatively the replacement spray lances listed in the device operating instructions can also be used.
Not all pressure levels can be achieved and correctly displayed with special accessories.



Documents / Resources

	KÄRCHER G 180 Q Smart Control Plus Trigger Gun [pdf] Instruction Manual G 180 Q Smart Control Plus Trigger Gun, G 180 Q, Smart Control Plus Trigger Gun, Trigger Gun, Gun
--	--