

karella®
CB-SMART
Electronic Soft
Dartboard



karella CB-SMART Electronic Soft Dartboard Instruction Manual

[Home](#) » [Karella](#) » karella CB-SMART Electronic Soft Dartboard Instruction Manual 

Contents

- 1 karella CB-SMART Electronic Soft Dartboard
- 2 Product Usage Instructions
- 3 FAQ
- 4 EXPLODED VIEW
- 5 ASSEMBLY INSTRUCTION
- 6 POWER CONNECTION
- 7 FUNCTIONS
- 8 DARTBOARD OPERATION
- 9 BLUETOOTH CONNECTION FUNCTION
- 10 GAME OVERVIEW
- 11 DECLARATION OF CONFORMITY
- 12 CONTACT
- 13 Documents / Resources
 - 13.1 References

karella®

karella CB-SMART Electronic Soft Dartboard



Product Usage Instructions

- The Karella Dartautomat CB Smart offers various game modes such as COUNT UP, CRICKET, BULL HUNTER, and more. The device also includes a computer opponent with adjustable difficulty levels.
- Make sure the dartboard is positioned at the correct height and distance from the Bull's Eye as specified in the manual. Connect the device to a power source.
- Choose a game mode from the list provided on the device. Each game has its own set of rules and objectives.
- Stand at the designated throwing line and take turns throwing darts at the board according to the rules of the selected game. The device will track scores and progress.

FAQ

- **How do I clean the dartboard?**
 - To clean the dartboard, use a soft cloth slightly dampened with water. Avoid using harsh chemicals or excessive moisture.
- **What should I do if a dart arrow gets stuck?**
 - If a dart arrow gets stuck in a segment, gently twist and pull it out. Avoid using excessive force to prevent damaging the board.
- **Can I play additional games on the device?**
 - Yes, there are additional games available in the accompanying app that can be accessed for more variety and entertainment.

CONGRATULATIONS ON YOUR PURCHASE OF THE KARELLA CB SMART DART MACHINE.

- Before assembling and using the device, please read the instruction manual carefully and keep it for future reference.

WARNING


- This sports equipment is designed exclusively for private use. In the event of commercial use or use not in accordance with the article of any kind, all warranty claims are void!

CONTENT

Carefully unpack your new electronic soft dartboard CB-Smart and check if all components are included. The delivery includes the following components:

- 1 electronic dartboard
- Easy-Fix Wall mount
- Replacement pack of soft tips
- 6 darts
- User manual
- USB-C Cabel


EXPLODED VIEW

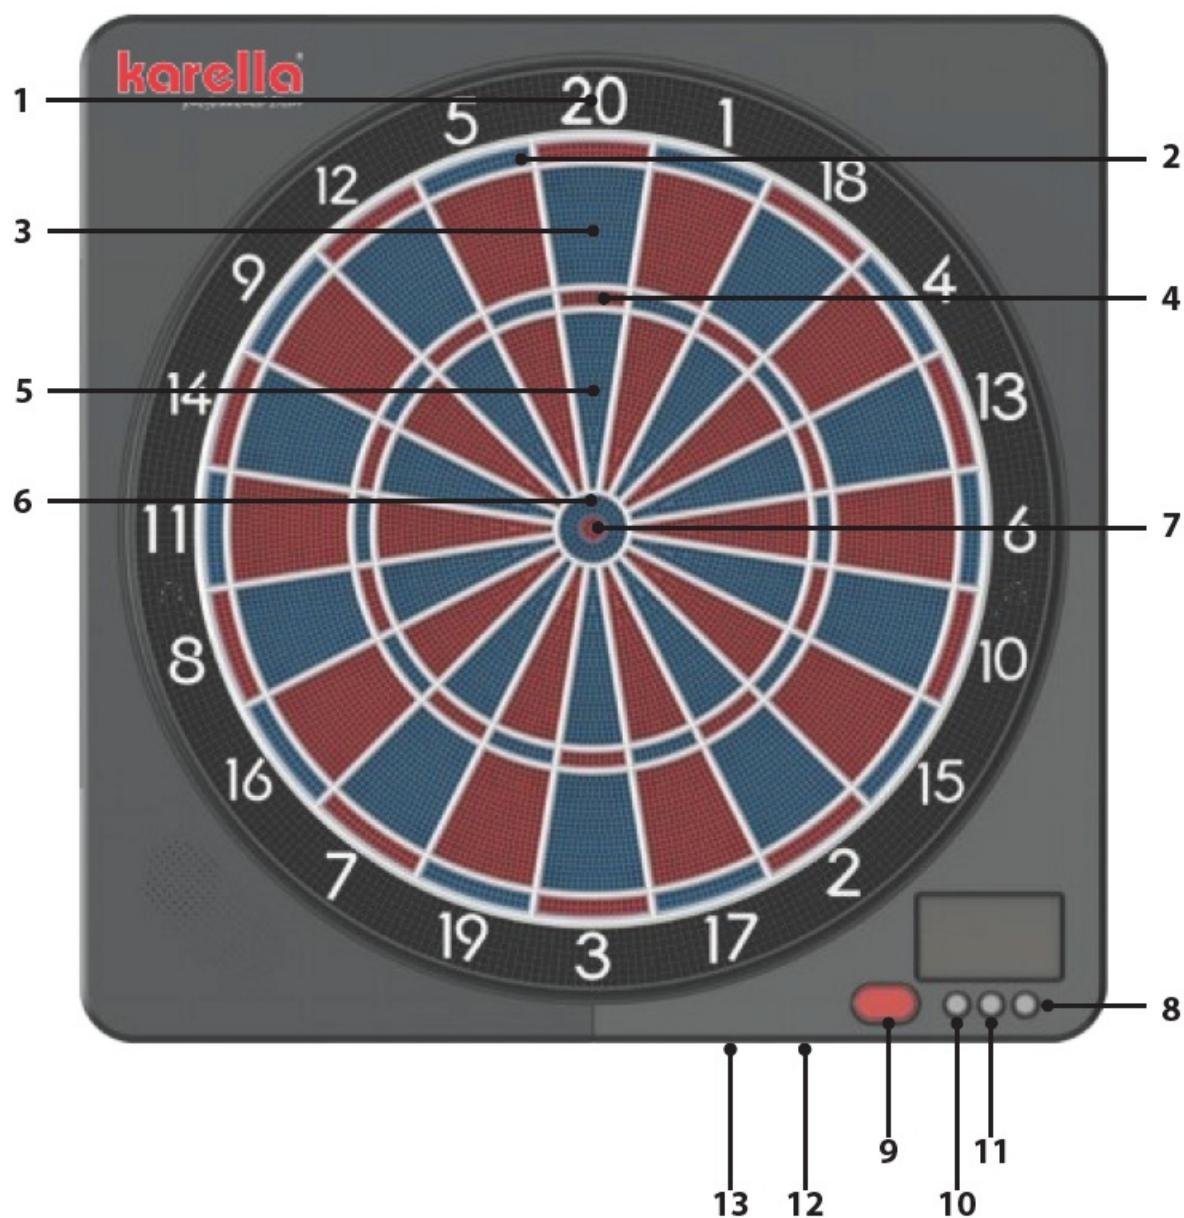

1. Outring
2. Double segments
3. Simple segments
4. Triple segments
5. Single segments
6. Bull's Eye = 25 Points
7. Double Bull's Eye = 50 Points
8. OPTION/BACK/POWER
9. OK/START-Key
10. Up selection key (▲)
11. Down selection key (▼)
12. On-/Off-Key
13. Type-C charging port

ASSEMBLY INSTRUCTION

Hang the electronic dartboard in a location where you have at least 3 meters of clearance for throwing. The Bulls Eye, the center of the board, should be positioned 1.73 meters above the ground to achieve the official tournament height. To mount the board at the correct height, mark a point on the wall using the center hole of the Easy-Fix wall bracket at a height of 173 cm from the ground. Then, mark and drill the positions for the four holes. Next, screw the Easy-Fix wall bracket onto the wall using four screws until the bracket is securely attached. Ensure that the wall bracket is level during installation. Afterward, the CB-Smart can be easily hooked into the bracket from above. If the bracket is slightly crooked, it can be adjusted using the integrated locking system by gently turning it.

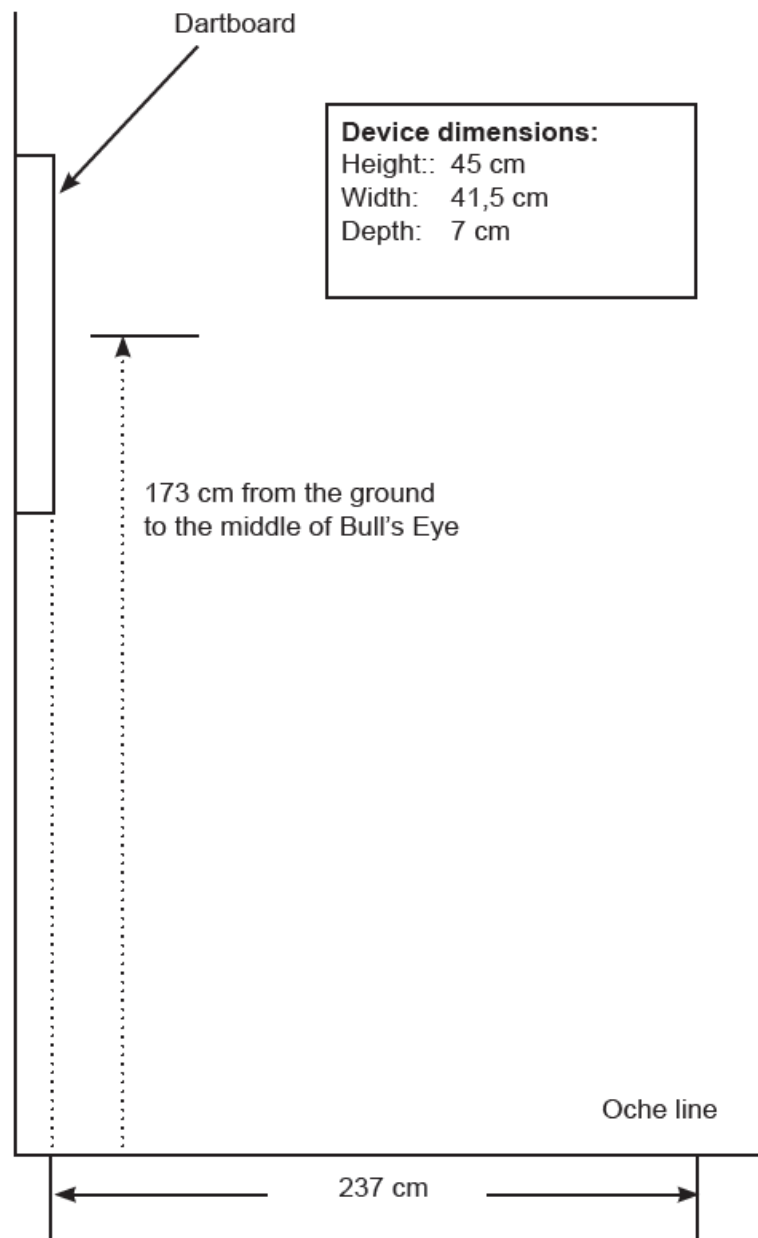

POWER CONNECTION

- The electronic soft dartboard CB Smart is powered by a USB- cable.
- Insert the cable into the socket on the dartboard, and plug the power adapter with a USB- port into the power outlet (not included).
- You can also operate the device with 3 AA batteries (not included).
- When using batteries, do not mix old and new batteries, and do not use alkaline, carbon zinc batteries, and rechargeable nickel-cadmium batteries simultaneously.

FUNCTIONS

Key Functions of the buttons:

OK/START Button:

- Start the game when all options are selected.
- During the game, press to skip the remaining darts in the current round and prompt for player change.
- Change players during the game.

Up selection key (▲):

- When selecting games and parameters, choose back.
- In the game, press and hold for 1 second to eliminate the current dart score and dart count.
- In the game, you can choose to page up to view player scores

Down selection key (▼):

- Forward selection when selecting games and parameters.
- In the game, you can scroll down to view player scores.

OPTION/BACK/POWER:

- Adjust the volume level by combining it with the UP/DOWN key.
- When selecting a game, you can return to the higher-level menu and exit the game by pressing the “START” button.
- Long press for 3 seconds to turn off the function, then press again to turn it on.
- When pressing and holding down the OPTION+ ▼ key at the same time, it is the volume up function.

Volume level selection (option + ▲/▼ adjustment)

- LV0-LV7, LV0 is silent, and LV7 has the highest volume.
- When pressing and holding the OPTION+ ▲ keys simultaneously, it is the volume reduction function.

Computer player difficulty level

- When selecting the number of players, you can choose a computer to compete with you in the game. There are 5 difficulty levels, and only one player can compete with the calculation at a time machine-to-machine combat.
- After the game starts, the “human” player shoots 3 darts, removes the darts, and presses the “start button”, and the computer opponent will start scoring, After the three darts are completed, it will automatically switch to starting with “human” players.

Computer Duel Difficulty Level:

- Level 1 (C1) Professional Level 2 (C2) Expert Level 3 (C3) Advanced
- Level 4 (C4) Intermediate Level 5 (C5) Junior

Setting the score of the outer circle center circle:

- When not in the game, you can switch the score of the outer circle center circle by pressing the Bullseye: 25 or 50 points.

MATCH Function Description

- Press the OK key to enter when displaying MAT flashing.

- When selecting this mode, you can freely choose the number of battles: 3, 5, 7, 9, 11 battle games are limited to 4 games: 01 GAME, COUNT UP, CRICKET, BULL HUNTER The rule of 2 wins in 3 games (3 wins in 5 games, 5 wins in 7 games, 5 wins in 9 games, 5 wins in 9 games, and 6 wins in 11 games) is used to determine the winner.
- If the player wins consecutive games in the previous few games and meets the rule, they will directly win without the need to continue with the number of games in the following games.

DARTBOARD OPERATION

DARTBOARD OPERATION (WITHOUT THE APP)

1. Press the up and down keys to select a game until the desired game is displayed (see the subsequent game list) or press "START".
2. (Optional) Press the "START button" to select the difficulty level of the game (applicable to small game changes).
Please refer to the game specifications for detailed explanations.
3. Press the 'Player Key' to select the number of players (1, 2,... 8, C1, C2, C3, C4, C5), with a default value of 2 players Press the "Start/Switch Player Key" to start the game and start playing.
4. Darts (3 darts per round)
 - Players will display a few darts on the display screen
 - When all three darts have been fired, a command tone indicates "remove darts" and the score will flash. At this time, the dart can be removed without affecting the electronic scoring. After all the darts have been removed from the surface, press the "start button" to start the game for the next player. The indicator tone will indicate which player is in turn.

SDBPLAY 2 APP



- To use the online function of the CB-Smart Dartboard, you need the free SDBplay 2 app, which is available on both the Google Play Store and the Apple App Store.
- The app is not included with the device or the Karella brand and is provided free of charge by the company SDB (www.smartdartboard.com).

BLUETOOTH CONNECTION FUNCTION


To establish a connection between your smartphone or tablet and the CB-Smart, please follow these steps:

1. Turn on the CB-Smart by pressing the power button located at the bottom.
2. Start the SDBplay2 app on your device.
3. The connection between the CB-Smart and your device is established automatically via Bluetooth Smart Connection. Note: Do not manually search for the device in your Bluetooth settings. It will be connected automatically when you start the app.
4. The connection between the CB-Smart and your device is established automatically via Bluetooth Smart

Connection. Note: Do not manually search for the device in your Bluetooth settings. It will be connected automatically when you start the app.



Note: Do not manually search for the device in your Bluetooth settings. It will connect automatically when the app is launched.

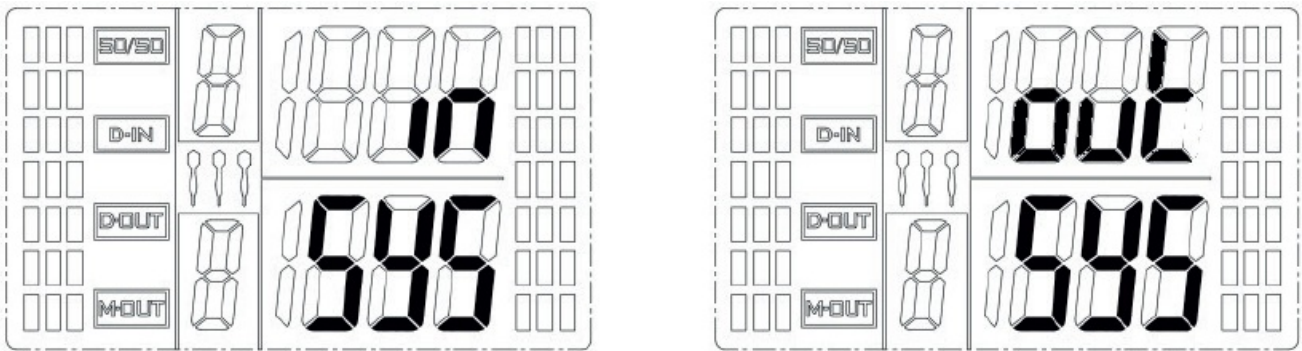

- Picture 1: Bluetooth successfully connected, Picture 2: Bluetooth disconnected

GAME OVERVIEW

GAME OVERVIEW (GAMES INCLUDED ON THE BOARD)

Nr.	Name
G01	Cound Down
G02	Cricket
G03	Count-Up
G04	Bull Hunter
G05	Scram
G06	Cut-Throat Cricket
G07	English Cricket
G08	Low Cricket
G09	Advanced Cricket
G10	Shooter
G11	Trapshoot
G12	Big Six
G13	Overs
G14	Unders
G15	High Score
G16	Round-the-Clock
G17	Killer
G18	Double Down
G19	Forty One

Nr.	Name
G20	All Fives
G21	Shanghai
G22	Golf
G23	Football
G24	Baseball
G25	Steeplechase
G26	Bowling
G27	Car Rallying
G28	Shove a Penny
G29	Nine Dart Century
G30	Blue vs. Red
G31	Gold Hunting
G32	Casino A
G33	Casino B
G34	Casino C
G35	Elimination
G36	Horse Shoes
G37	Battleground
	more games in the app

- The electronic dartboard comes pre-programmed with various games and game options. The order corresponds to the display on the screen when scrolling through the games. Each game is associated with a game number.

Note: All games are explained in the SDBplay 2 app and can be selected there. We recommend using the app to select the games.

IMPORTANT NOTES

Tips for Removing Dart Arrows

- Turn the arrows clockwise when removing them from the board. This makes them easier to pull out and prolongs the life of the tips.

Jammed Segment

- Occasionally, a segment may become jammed during play.
- If this happens, the game will pause, and the display will indicate that a segment is jammed.
- To release the segment, simply pull the dart arrow or broken dart tip out of the segment.
- If the issue persists, gently wiggle the segment until it loosens.
- The game will resume where it left off.

Broken Dart Tips

- Sometimes, a tip may break and become stuck in a segment. Attempt to grasp the broken tip with pliers or tweezers and remove it carefully.
- If this does not work, you can try pushing the broken tip through the segment to the backside.
- Use a blunt nail or similar tool smaller than the hole in the segment to gently push the broken tip backward until it falls out on the other side.
- Do not exert excessive force to avoid damaging the electronic components behind it.
- This minor “repair” should be done with the power cord unplugged.
- Please note that plastic dart tips may occasionally break.
- Replacement tips are included with the dart set, and additional ones can be purchased from specialty retailers as needed.

Darts

- Please use only dart flights that weigh a maximum of 18 grams with this dartboard.
- The included dart sets each weigh approximately 16 grams and have standard plastic tips.
- The dart game comes with spare tips and 6 dart arrows.
- Please note that additional dart arrows are not covered by the warranty, as they are consumable items.
- Additional arrows can be purchased from specialist retailers if needed.

Cleaning

- Use a dust cloth or a slightly damp cloth for cleaning.
- If necessary, mild cleaning agents can be used.
- Avoid using sharp or ammonia-based cleaning agents, as they can damage the dart set.
- Do not allow liquids to enter the dartboard, as this can cause permanent damage.
- These guidelines will help ensure that you enjoy the dart game safely and maintain the equipment for lasting use.

DECLARATION OF CONFORMITY

Warranty Conditions

- The current legal warranty conditions apply.
- For spare part orders and repair requests, please submit your requests exclusively in writing, along with the purchase receipt and specifying the desired part number, to your point of purchase or directly to the manufacturer.

Note of Disposal

- This electrical appliance must not be disposed of in household waste at the end of its life cycle.
- Please ensure that the device and all associated components are properly disposed of to prevent potential negative impacts on the environment and health that could result from improper disposal of the old appliance.
- The symbol on the product indicates that it should not be disposed of in regular household waste but must be handed over to the respective municipal collection systems for electrical and electronic waste.

EU DECLARATION OF CONFORMITY

Declaration number: **DOCIP 2857473**
Name and address of manufacturer / EU-AR: **WINSPORT GmbH & Co. KG
Waldstraße 21
86517 Wehringen
Germany**



THIS DECLARATION OF CONFORMITY IS ISSUED UNDER THE SOLE RESPONSIBILITY OF:

Name and address of manufacturer: **WINSPORT GmbH & Co. KG
Waldstraße 21
86517 Wehringen
Germany**
Product identification: **Dartautomat Karella CB- Smart
8180.01**



THE PRODUCTS MENTIONED IN THIS DECLARATION ARE IN CONFORMITY WITH:

EU Community Legislation: **Radio Equipment Directive (RED) 2014/53/EU [OJEU L153/62-106, 22.05.2014]
Restriction of Hazardous Substances (RoHS) Directive 2011/65/EU [OJEU L174/88-110, 01.07.2011]**
Harmonised standards: **Radio equipment
EN 300 328 V2.2.2

Safety of electrical equipment
EN 50106:2008
EN 60335-1:2012 + AC:2014 + A11:2014 + A13:2017 + A1:2019 + A2:2019 + A14:2019 + A15:2021
EN 60335-2-82:2003 + A1:2008 + A2:2020
EN 62471:2008

Exposure of humans to electromagnetic fields (EMF)
EN 62233:2008 + AC:2008
EN 62479:2010

Electromagnetic Compatibility (EMC)
EN 301 489-1 V2.2.3
EN 301 489-1 V1.9.2
EN 301 489-17 V3.2.4**

Additional information: 'u'

SIGNED FOR AND ON BEHALF OF:

Place and date of issue: **Wehringen, 22 October 2024**
Signature:

A handwritten signature in black ink, appearing to be 'Lasse Sadlo'.

Name, position: **Lasse Sadlo
Assistant to the Management Board**
Company name: **WINSPORT GmbH & Co. KG**


This declaration of conformity was generated using the ProductIP compliance platform

CONTACT

Hersteller / Manufacturer / Fabricant

- WINSPORT GmbH & Co. KG
- Waldstrasse 21
- DE-86517 Wehringen
- Germany
- www.winsport.de
- info@winsport.de
- +49 8234 90493-0
- WEEE-Reg.-No: DE 91046067

Documents / Resources

	<p>karella CB-SMART Electronic Soft Dartboard [pdf] Instruction Manual CB-SMART, CB-SMART Electronic Soft Dartboard, Electronic Soft Dartboard, Soft Dartboard, Dartboard</p>
---	---

References

-  [Home | Smart Dartboard](#)
-  [winsport.de](#)
- [User Manual](#)

Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.