



Contents [[hide](#)]

- [1 KARLSSON GUMMY KA5753 Alarm Clock](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 COMPONENTS](#)
- [5 Before use](#)
- [6 OPERATION AND TIME SETTING](#)
- [7 Warranty](#)
- [8 Maintenance](#)
- [9 FAQ](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)

KARLSSON

KARLSSON GUMMY KA5753 Alarm Clock



Product Information

Specifications

- **Model:** Alarm Clock Gummy KA5753
- **Power Source:** 3 LR03 (size AAA) alkaline batteries
- **Components:** Snooze/light button, Minute set button, Alarm ON/OFF button, Alarm set button, Hour set button, Battery compartment, Speaker, Time set button

Product Usage Instructions

Before Use

To ensure proper functioning, follow these steps before using the alarm clock:

1. Open the battery compartment located on the back of the device.
2. Insert three LR03 (size AAA) alkaline batteries with correct polarity.
3. Close the battery compartment securely.

Setting the Time

1. Push and hold the time set button (TIME SET).
2. Use the hour set button (H) to adjust the hour.
3. Use the minute set button (M) to adjust the minutes.
4. Release the time set button to confirm the setting.

Setting the Alarm Time

1. Push and hold the alarm set button (SET).
2. Use the hour set button (H) to set the alarm hour.
3. Use the minute set button (M) to set the alarm minutes.
4. Release the alarm set button to confirm the setting.

Activating/Deactivating the Alarm

To control the alarm:


- Push the alarm ON/OFF button to activate the set alarm. The display will show a bell

symbol and Zz.

- To deactivate the alarm, push the alarm ON/OFF button again.

COMPONENTS

1. Snooze/light button SNOOZE-LIGHT
2. Minute set button M
3. Alarm ON/OFF button
4. Alarm set button SET
5. Hour set button H
6. Battery compartment
7. Speaker
8. Time set button TIME SET

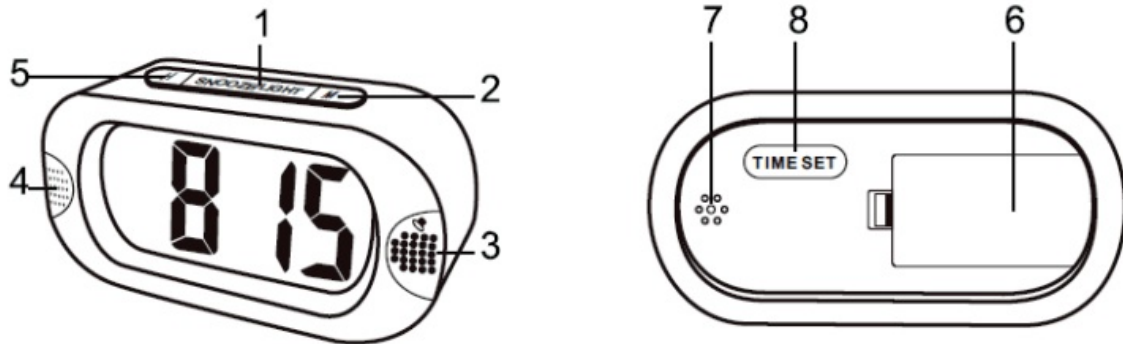

Before use

- Remove all packaging materials and check the product for defects.
- The batteries are already installed. Open the battery compartment and remove the product plastic strip to start using your new alarm clock.

Replacing the batteries

1. Open the battery compartment (6) located on the back of the device.
2. Insert three LR03 (size AAA) alkaline batteries with correct polarity.
3. Close the battery compartment. Make sure that the lid clicks into place.

OPERATION AND TIME SETTING

Setting the time

1. Push and hold the time set button TIME SET (8).
2. Push the hour set button H (5) to set the hour.
3. Push the minute set button M (2) to set the minutes.
4. Release the time set button TIME SET to confirm the setting.

Setting the alarm time

1. Push and hold the alarm set button SET (4).
2. Push the hour set button H (5) to set the hour.
3. Push the minute set button M (2) to set the minutes.
4. Release the alarm set button SET to confirm the setting.

Activating/deactivating the alarm

1. Push the alarm ON/OFF button (3) to activate the set alarm.
The display shows a bell symbol and Zz. The alarm sounds for 60 seconds at the set time.
2. Push the alarm ON/OFF button (3) to deactivate the set alarm.
The bell symbol and Zz are not visible when the alarm is deactivated.

Snooze (SNOOZE-LIGHT)

1. When the alarm sounds, push the snooze/light button SNOOZE-LIGHT (1) to turn off the alarm for 8 minutes.
2. After 8 minutes, the alarm goes off again.

Turning on the light

Push the snooze/light button SNOOZE-LIGHT (1) to turn on the light briefly.

Warranty

There is a two-year warranty against manufacture defects on all Karlsson clocks, valid from the date of purchase.

Maintenance

A soft cloth may be used to clean your clock. Do not use corrosive cleaner or chemical solution on the clock.

WEEE Symbol



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal.

Karlsson is a trademark of Present Time@

Televisieweg 16, 1322 AL, Almere

www.presenttime.com



FAQ

How do I replace the batteries?

To replace the batteries, follow these steps:

- 1. Open the battery compartment located on the back of the device.
- 2. Insert three LR03 (size AAA) alkaline batteries with correct polarity.
- 3. Close the battery compartment securely.

How long does the alarm sound?

The alarm will sound for 60 seconds at the set time before automatically stopping.

Documents / Resources

	<p>KARLSSON GUMMY KA5753 Alarm Clock [pdf] Instruction Manual</p> <p>KA5753WH, KA5753BB, KA5753BG, KA5753BK, KA5753BL, KA5753BP, KA5753GR, KA5753GY, KA5753LB, KA5753LO, KA5753LY, KA5753OR, KA5753PI, KA5753YE, GUMMY KA5753 Alarm Clock, GUMMY KA5753, Alarm Clock, Clock</p>
--	---

References

- [User Manual](#)

■ KARLSSON

🔍 Alarm Clock, Clock, GUMMY KA5753, GUMMY KA5753 Alarm Clock, KA5753BB, KA5753BG, KA5753BK, KA5753BL, KA5753BP, KA5753GR, KA5753GY, KA5753LB, KA5753LO, KA5753LY, KA5753OR, KA5753PI, KA5753WH, KA5753YE, KARLSSON

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.