

Contents [[hide](#)]

- [1 KARLSSON KA5601, KA5602 FLIP Clock](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 SETTING TIME](#)
- [5 INSTALLING THE BATTERY](#)
- [6 Warranty](#)
- [7 Maintenance](#)
- [8 CONTACT](#)
- [9 FAQ](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)

KARLSSON

KARLSSON KA5601, KA5602 FLIP Clock



Product Information

Specifications

- Model: Flip Clock No Case KA5601 KA5602
- Battery Type: D battery
- Rotation Direction: Left to turn off, Right to turn on


Product Usage Instructions

- Locate the battery compartment at the back of the flip clock, as shown.
- Open the battery cover by turning it to the OFF position (counterclockwise).
- Insert a Type D battery, ensuring the positive (+) side faces out, as shown.
- Close the battery cover by turning it to the ON position (clockwise).
- To set the time on your flip clock, follow these steps:
- Locate the setting wheel on the flip clock as shown.
- Turn the wheel in the desired direction to adjust the time.
- Make sure to set the correct time and ensure the clock is running accurately.

SETTING TIME

- Adjust the time by turning the “setting wheel” shown in Figure 1.

FIGURE 1
SETTING WHEEL

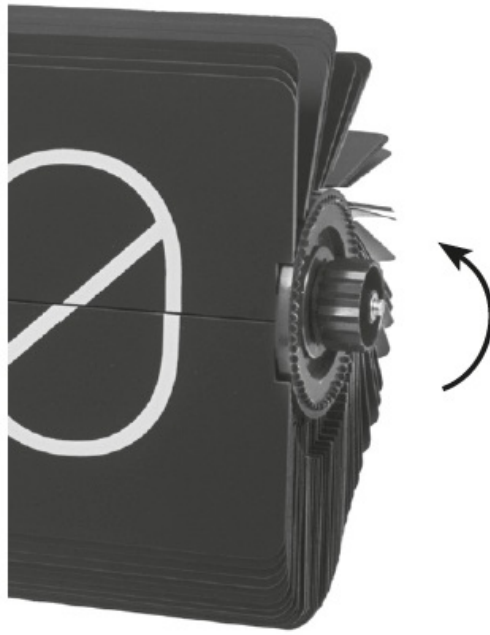

ROTATION DIRECTION

PLEASE NOTE

- The setting wheel can only be turned counterclockwise.
- Do not touch the flip panels to set the time!
- Turning the minute flips will automatically adjust the hour flips.
- Always set the time one minute ahead—this allows the clock mechanism one minute to start up correctly.


For example, if it's currently 10:10, set the flip clock to 10:11.

- When daylight saving time ends and the clock needs to be set back one hour, we recommend turning the clock off for one hour instead of turning the setting wheel 23 hours ahead.

INSTALLING THE BATTERY

1. Locate the battery compartment at the back of the flip clock, as shown in Figure 2.

FIGURE 2
BATTERY COMPARTMENT

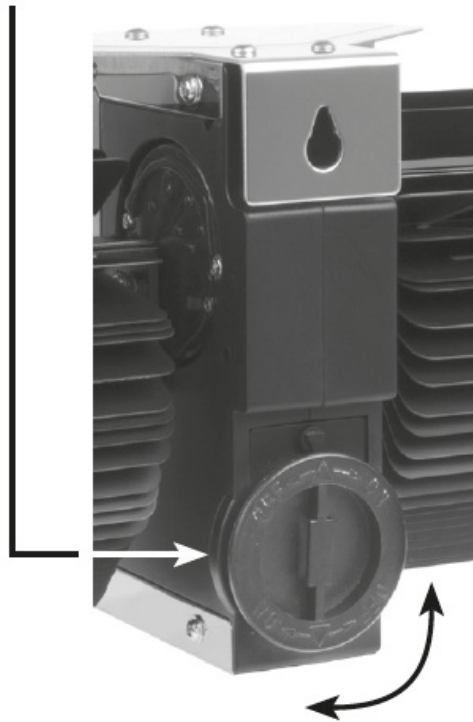

**LEFT TO TURN OFF
RIGHT TO TURN ON**

2. Open the battery cover by turning it to the “OFF” position (counterclockwise).
3. Insert a Type D battery, ensuring the positive (+) side faces out, as shown in Figure 3.

FIGURE 3
HANGING HOLE



BATTERY DIRECTION

4. Close the battery cover by turning it to the “ON” position (clockwise).

Warranty


- There is a two-year warranty against manufacturing defects on all Karlsson clocks, valid from the date of purchase.

Maintenance

- A soft cloth may be used to clean your clock.
- Do not use corrosive cleaners or chemical solution on the clock.

WEEE Symbol



-  The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste.
- The item should be handed in for recycling in accordance with local environmental regulations for waste disposal.

CONTACT

- Karlsson is a trademark of Present Time®
- Televisieweg 16, 1322 AL, Almere
- www.presenttime.com

FAQ

- **Q: What type of battery does the flip clock use?**
 - **A:** The flip clock uses a Type D battery for operation.
- **Q: How do I know which way to rotate the setting wheel?**
 - **A:** Rotate the setting wheel left to turn off the clock and right to turn it on.

Documents / Resources



[KARLSSON KA5601, KA5602 FLIP Clock \[pdf\]](#) Instruction Manual
KA5601, KA5602, KA5601 KA5602 FLIP Clock, KA5601 KA5602, FLIP Clock, Clock

References

- [User Manual](#)

📎 Clock, Flip Clock, KA5601, KA5601 KA5602, KA5601 KA5602 FLIP Clock, KA5602,

📁 KARLSSON KARLSSON

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.