



---

[Home](#) » [KARLSSON](#) » **KARLSSON KA5651DW Alarm Clock Owner's Manual** 

**Contents** [ [hide](#) ]

- [1 KARLSSON KA5651DW Alarm Clock](#)
- [2 Main Features](#)
- [3 Operating Instructions](#)
- [4 Time Setting](#)
- [5 Date Setting](#)
- [6 Temperature Display](#)
- [7 Other Functions](#)
- [8 Warranty](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)

**KARLSSON**  
Q U A L I T Y   T I M E


## KARLSSON KA5651DW Alarm Clock



## Main Features

- Time Display Mode: 12 or 24-hour time display
- Calendar Mode: Display month and date
- Alarm Mode: Triple alarm time setting
- Temperature Mode: Range from 0°C – 50 °C (32 °F – 122 °F)
- Display Modes: dp-1,dp-2 and dp-3
- Power saving mode: Activate the LED display by sound or touch
- Power supply: 3xAAA Batteries or USB Cable
- 3V built-in battery to keep time and memory
- Full-Screen Display

## Operating Instructions

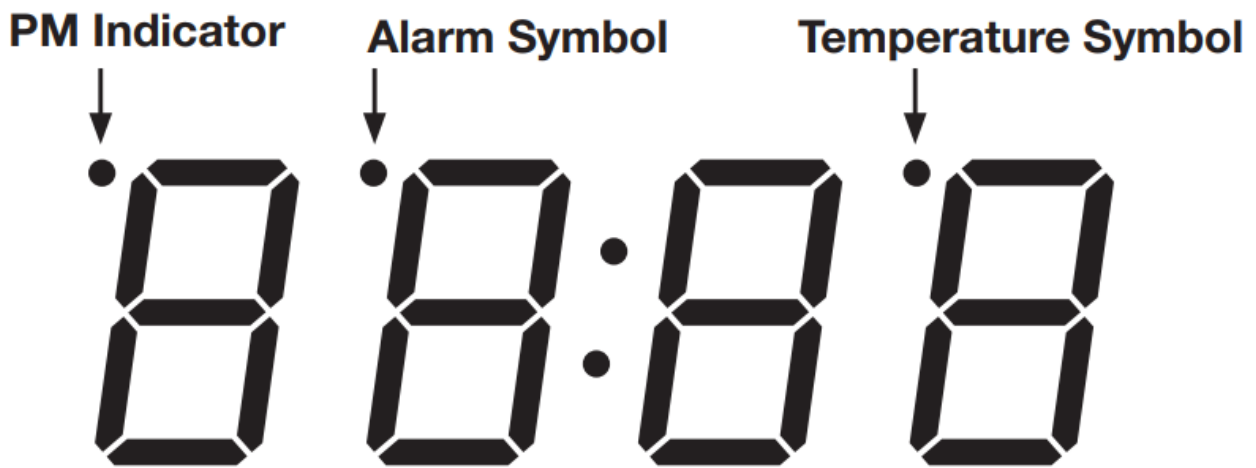

- After powering on, the LED turns on with a beeping sound and will enter the time setting mode.
- Under the time display mode, press the SET button to check below in sequence.
- Time → Calendar → A1 (Alarm 1), A2 (Alarm 2), A3 (Alarm 3).

## Time Setting

1. Under the Time Mode, press and hold the SET button for 2seconds to set the clock.
2. Press the SET button repeatedly to set the time in the following sequence: 12/24hr switch over → Hour → Minute →Exit.
3. Press the UP / DOWN buttons to adjust the hour and minute digits. Press and hold the UP / DOWN buttons to speed up the scanning of the digits.
4. When the 12-hour format is set, the PM indicator in the top left corner will appear in the afternoon.
5. The setting mode will return to time display mode if there is no operation for 15 seconds.

## Date Setting

1. Under the Calendar Mode, press and hold the SET button for 2 seconds to set the date.
2. Press the SET button repeatedly to set the date as The following sequence: Year → month → day → Ex.it.
3. Press the UP / DOWN buttons to adjust the year, month, and date. Press and hold the UP / DOWN buttons to speed d the scanning of the digits.
4. The setting mode will return to time display mode if there is no operation for 15

seconds..

Alarm Setting: 3 alarm time settings are possible;e, you can store 3 different alarm times in the memory.

1. Under the Alarm Mode A1, press the UP button to turn on the alarm and press it again to turn it off.
2. When A1 is activated, 'ON A1' will appear on the display, quickly, then it will enter to alarm time display.
3. Press the SET button for 2 seconds, and the display will flash. Now you can set the alarm time.
4. Press the UP/DOWN buttons to adjust the alarm time. Press and hold the UP/DOWN button to speed up the scanning of the digits.
5. When the Alarm is activated, the Alarm Symbol will turn on.
6. The setting mode will exit if there is no operation for 15 seconds.
  - 2 and A3 alarms can be set in the same way as A1.
  - The alarm will ring for 1 minute at the set time. Press any button to stop the alarm.
  - Please note that the alarm symbol will stay on and will ring the next day at the same time unless deactivated in the alarm settings.

## **Temperature Display**

- After the power is turned on, the clock will automatically detect the current room temperature and update the temperature every 60 seconds.
- Press the DOWN button for 2 seconds to switch between Celsius(°C) and Fahrenheit(°F)

## **Other Functions**

### **Display Modes**

- Under clock, calendar, or temperature mode, press the UP button to switch between DP-1, DP-,22 aDP-3P-3 display modes.
- DP-1 mode: LED alternately displays time and date.
- Time will display for 10 seconds, and the date will display for 2 seconds.

- For example, press the UP button to enter the DP-1
- Mode, after setting it, returns to the time display. Under display mode, the LED display will alternate in the following sequence: → time(10 seconds) → date(2 seconds).
- dp-2 mode: Press the UP button to enter the dp-2
- Mode: Set your desired mode (Time, Date, or Alarm) to keep this mode on the screen.
- For example: press the UP button to enter the DP-2 Mode, after settings are finished, it returns to the time display.
- If you always want to keep the Time display showing, press
- When the SET button is pressed to enter Time mode, the screen will keep the Time display.
- If you always want to keep the Date display showing, press
- Press the SET button to enter Date mode, and the screen will keep
- The Date display.
- If you always want to keep the Alarm display showing, press
- Press the SET button to enter Alarm mode, and the screen will
- Keep the Alarm display DP-3-33 mode: Press the UP button to enter DP-3-33 mode. under this mode, the screen's default Time will always display after

## **Power saving and Touch control mode**

- The default mode is SD (power saving off).

## **Under Time**

- Press the DOWN key to turn on the Power Saving.
- Mode. The clock will then display 'ON SD', press DOWN again to turn off the Power Saving Mode.
- Under Power Saving Mode, without any operation for 10 seconds, the LED display will automatically turn off..
- Under Power Saving Mode, touch the LED clock or touch the table to turn on the LED display.
- Under Power Saving Mode, whether the alarm is ringing
- LED display will automatically turn on.

## Built-in Time Memory

- Built-in 1PC x CR2032 battery to keep the time running when power is off, but other functions cannot be used.
- If time memory doesn't work anymore, please replace the built-in battery behind the battery compartment.

## Warranty

There is a two-year warranty against manufacturing defects on all Karlsson clocks, valid from the date of purchase.

## Maintenance


A soft cloth may be used to clean your clock. Do not use corrosive cleaners or chemical solutions on the clock.

## WEEE Symbol



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling by the local environmental regulations for waste disposal.


## Documents / Resources

	<a href="#">KARLSSON KA5651DW Alarm Clock [pdf]</a> Owner's Manual KA5651DW, KA5651BK, KA5653BK, KA5653DW, KA5654BK, KA5654DW, KA5655BK, KA5655DW, KA5651DW Alarm Clock, KA5651DW, Alarm Clock, Clock
---	--

## References

- [User Manual](#)

 KARLSSON

 Alarm Clock, Clock, KA5651BK, KA5651DW, KA5651DW Alarm Clock, KA5653BK, KA5653DW, KA5654BK, KA5654DW, KA5655BK, KA5655DW, KARLSSON

---

# Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

e.g. whirlpool wrf535swhz

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.