



# KARLSSON

Q U A L I T Y   T I M E

## INSTRUCTION MANUAL | ALARM CLOCK SILVER MIRROR KA5876-77

### Contents [ [hide](#) ]

#### [1 MAIN FEATURES](#)

#### [2 Warranty](#)

#### [3 Maintenance](#)

#### [4 Documents / Resources](#)

##### [4.1 References](#)

## MAIN FEATURES

- Time Display Mode: 12- or 24-hour display
- Calendar Mode: Displays month and date
- Alarm Mode: Alarm setting with snooze
- Temperature Mode:  $-10^{\circ}\text{C}$  to  $50^{\circ}\text{C}$  ( $14^{\circ}\text{F}$  to  $122^{\circ}\text{F}$ )
- 3 Display Modes: Time | Calendar | Temperature
- Adjust Brightness: 3 dimmer levels
- Automatic Brightness: Automatically dims from 18:00 to 6:00 (adjustable)
- Power Supply: 3 AAA batteries or USB cable

## DISPLAY MODE SELECTION

- Press and hold the MODE button until the display cycles through time, date, and

indoor temperature. The default display is TIME.

### **TIME SETTING (12HR/24HR | HOUR – MINUTE):**

- At the TIME display, press and hold the MODE button.  
When the 24Hr indicator flashes, use the UP or DOWN button to select the 12Hr display.
- Press the MODE button again. When the hour digit flashes, use the UP or DOWN button to select the correct hour.
- Press the MODE button again. When the minute digit flashes, use the UP or DOWN button to select the correct minute.
- Press the MODE button to exit time settings.

### **DATE SETTING:**

- At the TIME display, press the MODE button once to switch to the MONTH/DATE display. Then press and hold the MODE button. When the year flashes, use the UP or DOWN button to select the correct year.
- Press the MODE button again. When the month flashes, use the UP or DOWN button to select the correct month.
- Press the MODE button again. When the day flashes, use the UP or DOWN button to select the correct day.
- Press the MODE button to exit date settings.

### **ALARM SETTING:**

- Press and hold the ALARM button. When the hour digit flashes, use the UP or DOWN button to select the alarm hour.
- Press the ALARM button again. When the minute digit flashes, use the UP or DOWN button to select the alarm minute.
- Press the ALARM button again. When the snooze minute flashes, use the UP or DOWN button to set the snooze time (default is 5 minutes).
- Press the ALARM button again. When the alarm period flashes, use the UP or DOWN button to select the alarm period:
  - 1-5 (Mon.-Fri.)

- 1-6 (Mon.-Sat.)
- 1-7 (Mon.-Sun.)
- Press the ALARM button to exit the alarm settings.

## **USING THE ALARM:**

- Press the ALARM button to activate the alarm; the alarm clock icon appears on the screen.
- Press the ALARM button again to deactivate the alarm; the alarm clock icon disappears.
- When the alarm sounds, press the LIGHT/SNOOZE button to activate snooze—the alarm icon will flash continuously.
- The alarm will automatically repeat the next day if enabled.

## **LED DIMMER SETTING:**

- The dimmer automatically darkens from 18:00 to 6:00.
- To adjust the dimmer time:
  - At the TIME display, press the MODE button three times until the display shows “OFF” or “ON.”
  - Use the UP or DOWN button to select “ON.”
  - Press and hold the MODE button to activate the dark dimmer start time. When the hour flashes, use the UP or DOWN button to select the hour.
  - Press the MODE button again. When the minute flashes, use the UP or DOWN button to select the minute.
  - Press the MODE button again to set the dimmer end time. When the hour flashes, use the UP or DOWN button to select the hour.
  - Press the MODE button again. When the minute flashes, use the UP or DOWN button to select the minute.
  - Press the MODE button to exit the settings.
- Press the UP button to adjust the brightness of the dimmer.

## **Celsius/Fahrenheit Setting:**

- At the TIME display, press the MODE button twice to access the indoor temperature

display.

- Press the DOWN button to select either Celsius or Fahrenheit.



<https://qr1.be/78ER>

## Warranty

There is a two-year warranty against manufacture defects on all Karlsson clocks, valid from the date of purchase.

## Maintenance

A soft cloth may be used to clean your clock. Do not use corrosive cleaner or chemical solution on the clock.

## WEEE Symbol



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal.

Karlsson is a trademark of Present Time®

Televisieweg 16, 1322 AL, Almere

[www.presenttime.com](http://www.presenttime.com)



## Documents / Resources



## [KARLSSON KA5876 Alarm Clock \[pdf\]](#) Instruction Manual

KA5876, KA5877, KA5876 Alarm Clock, KA5876, Alarm Clock, Clock

## References

- [User Manual](#)

Alarm Clock, Clock, KA5876, KA5876 Alarm Clock, KA5877,

KARLSSON KARLSSON

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

## Search:

e.g. whirlpool wrf535swhz

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.