



**Contents** [ [hide](#) ]


- [1 KARLSSON KA5934 Alarm Clock](#)
- [2 Product Parameters](#)
- [3 Functions:](#)
- [4 Setting instructions](#)
- [5 Warranty](#)
- [6 Maintenance](#)
- [7 WEEE Symbol](#)
- [8 FAQ](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)

**KARLSSON**

**KARLSSON KA5934 Alarm Clock**



**INSTRUCTION MANUAL ALARM CLOCK KA5934**

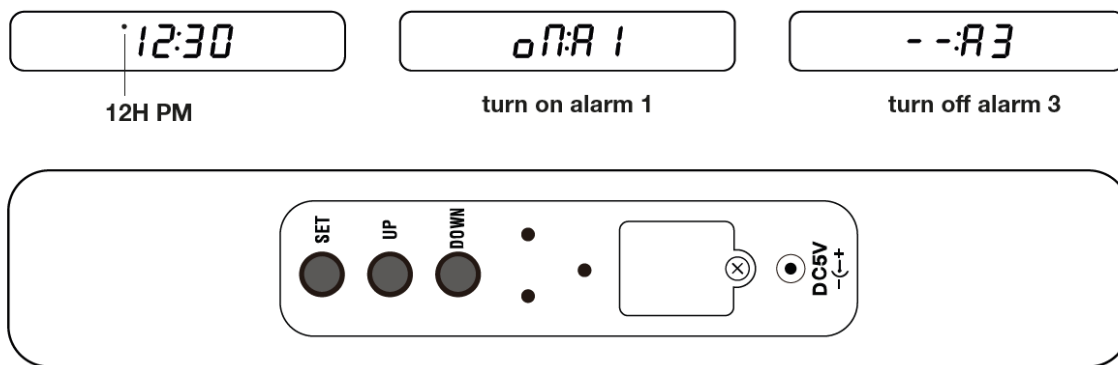

## Product Parameters

- Power Supply: DC 5V—2A, AC 100-240V 50/60Hz USB cable (included) and DC 5V/2A power adapter (not included) required
- Power: 5W
- Charging Distance: 2-10mm (The closer the distance between the mobile phone and the product, the faster the charging)
- Phone charging time: Approximately 1 hour longer compared to plug-in charging.
- Usage: When the clock is plugged in, place the phone on top of the clock to charge your phone. Please note that phone covers may interfere with charging your phone and not all phones support wireless charging.

## Functions:

### 1. Display Mode

1. Dp-1: Time, month, and day display change orderly (Carousel mode).
2. Dp-2: Only time displayed mode).

### 2. Brightness modes

- LO: Weakest brightness
- LI : Weak brightness
- L2: Less bright
- L3: Bright

### 3. Power Supply

The clock requires a USB cable for power supply.

A plugged-in power supply is when charging the phone.

The clock has a built-in cell battery, which automatically remembers the time when the power is off, so resetting the time is not required.

#### **4. Alarm Setting**

User can set 3 alarm times every day.

Each alarm lasts for one minute and makes three quick beeping sounds one after the other. To stop the alarm, press any button on the back of the clock.

### **Setting instructions**

Press the “SET” button (while the numbers are flashing) to enter the setting mode. The setting order is as follows:

- **Setting of Date**

When entering the set mode, the letters flashing in the order “Month” and “Day.”

Press the “UP” or “DOWN” button to change the number.

- **12H/24H Setting**

After finishing the date setting, press “SET” to enter the 12H/24H setting mode.

Use the “UP” and “DOWN” buttons to switch between 12H and 24H.

PM lights on in the 12H setting mode.

- **Time Setting**

After setting the date, press “SET” to enter the time mode setting.

Use the “UP” and “DOWN” buttons to adjust the time.

- **Alarm Setting**

After setting the time, continue pressing “SET” to enter the alarm setting mode.

Use the “UP” and “DOWN” buttons to set the alarm time for each of the three alarms (A1 , A2, A3).

Press “UP” and “DOWN” to toggle between (on) or closing (-) the alarm. When the letters “on: A1 ” appear, press “SET” to enter A1

- **Alarm clock Setting**

You can continue setting the Alarms of A2/A3 following the same steps as for A1.

### **Warranty**

There is a two-year warranty against manufacture defects on all Karlsson clocks, valid from the date of purchase.

### **Maintenance**

A soft cloth may be used to clean your clock. Do not use corrosive cleaner or chemical solution on the clock.

## WEEE Symbol



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal.

## FAQ


- **How many alarms can be set?**

The clock allows setting up to 3 alarms per day.

- **How long does each alarm last?**


Each alarm lasts for one minute and makes three quick beeping sounds.

## Documents / Resources

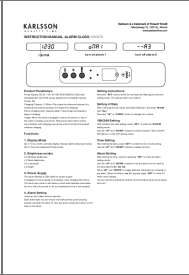	<a href="#">KARLSSON KA5934 Alarm Clock [pdf]</a> Instruction Manual KA5593344, KA5934 Alarm Clock, Alarm Clock, Clock
---	---

## References

- [User Manual](#)

 Alarm Clock, Clock, KA5593344, KA5934 Alarm Clock,  
 KARLSSON KARLSSON

---

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.