



---

[Home](#) » [KARLSSON](#) » **KARLSSON KA5955 Flip Clock Small Flip Instruction Manual** 

## **Contents** [ [hide](#) ]

- [1 KARLSSON KA5955 Flip Clock Small Flip](#)
- [2 Product Information](#)
- [3 Specifications](#)
- [4 Product Usage Instructions](#)
- [5 WARRANTY POLICY](#)
- [6 SETTING TIME](#)
- [7 INSTALLING THE BATTERY](#)
- [8 Warranty](#)
- [9 Maintenance](#)
- [10 WEEE Symbol](#)
- [11 Frequently Asked Questions](#)
- [12 Documents / Resources](#)
  - [12.1 References](#)

# KARLSSON

## **KARLSSON KA5955 Flip Clock Small Flip**



## Product Information

- **Product Name:** Flip Clock Small Flip KA5955
- **Brand:** Karlsson
- **Manufacturer:** Present Time
- **Warranty:** 2-years warranty against factory defects from the date of purchase
- **Website:** [www.karlsson-clocks.com](http://www.karlsson-clocks.com)

## Specifications

- Setting the wheel for time adjustment
- The battery compartment is at the back
- Requires a DD-type battery
- Rotation direction: Left to turn off, Right to turn on

## Product Usage Instructions

### Setting the Time

Adjust the time by turning the Setting wheel shown in Figure 1.

### Installing the Battery

1. The battery compartment is located at the back of the flip clock, as shown in Figure 2.
2. Open battery cover: Turn the cover into the OFF position (counterclockwise).
3. Insert battery: Type D, ensure the + side is facing out as shown in Figure 3.


4. Close battery cover: Turn the cover to the ON position (clockwise).

## INSTRUCTION MANUAL FLIP CLOCK SMALL FLIP KA5955

### WARRANTY POLICY


- There is a two-year warranty against manufacturing defects on all Karlsson clocks, valid from the date of purchase.
- Never immerse the product in water. This can damage the product.
- Do not tamper with the internal components.
- Do not subject the product to extreme force, shock, or fluctuations in temperature or humidity.
- Never touch the flips. Set the time only with the setting wheel.
- The operating temperature range of the clock is best between -10 °C and +50 °C
- The direction of the battery must be installed correctly. 1 x size D battery (excl) replace every 6 months. The accuracy of the flip clock is an average monthly difference of  $\pm 90$  seconds.
- Damage caused by improper use, including being immersed in water, being broken, or high impact, is not covered by the warranty policy.

FIGURE 1  
SETTING WHEEL

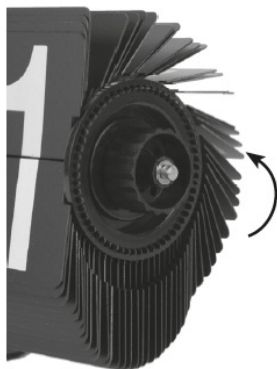

ROTATION DIRECTION

FIGURE 2  
BATTERY COMPARTMENT

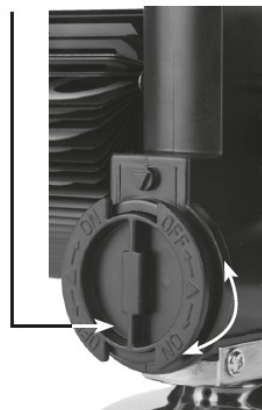

LEFT TO TURN OFF  
RIGHT TO TURN ON

FIGURE 3



### SETTING TIME

Adjust the time by turning the “Setting wheel” shown in figure 1.

### PLEASE NOTE

- It's only possible to turn the "setting wheel" in a counterclockwise direction.
- Do not touch the flip to set the time!
- By turning the minute flips, the hour flips will follow automatically.
- Always set the time to 1 minute. The clock mechanism will take 1 minute to start up correctly. For example, if the time now is 10:10, adjust the flip clock to 10:11..
- When daylight saving time ends and the clock must be set back one hour, we recommend that you turn the clock off for one hour. It's easier than turning the setting wheel 23 hours ahead.

## INSTALLING THE BATTERY

1. The battery compartment is located at the back of the flip clock as shown in figure 2.
2. Open battery cover: Turn the cover into the "OFF" position (counterclockwise)
3. Insert battery: Type D, ensure the + side is facing out as shown in figure 3
4. Close battery cover: Turn the cover to the "ON" position (clockwise)

## Warranty

There is a two-year warranty against manufacturing defects on all Karlsson clocks, valid from the date of purchase.

## Maintenance

A soft cloth may be used to clean your clock. Do not use corrosive cleaners or chemical solutions on the clock.

## WEEE Symbol



■ The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling by local environmental regulations for waste disposal.

## Frequently Asked Questions

- **Q: What type of battery does the flip clock require?**

A: The flip clock requires a AAA D-type battery.


• **Q: How long is the warranty period for this product?**

A: The product comes with a 2-year warranty against factory defects from the date of purchase.

• **Q: What is the rotation direction to turn the clock on and off?**

A: Rotate left to turn off and right to turn on the flip clock.

Documents / Resources

|   |  |
|---|--|
|  | <p><a href="#">KARLSSON KA5955 Flip Clock Small Flip [pdf]</a> Instruction Manual</p> <p>KA5955BK, KA5955SI, KA5955_IM-all languages, KA5955 Flip Clock Sm<br/>all Flip, KA5955, Flip Clock Small Flip, Clock Small Flip, Small Flip</p> |
|---|--|

References

- [User Manual](#)

■ KARLSSON

◆ Clock Small Flip, Flip Clock Small Flip, KA5955, KA5955 Flip Clock Small Flip, KA5955\_IM-all languages, KA5955BK, KA5955SI, KARLSSON, Small Flip

Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.