



Contents [[hide](#)]

- [1 KARLSSON KA6039 Alarm Clock](#)
- [2 Product Specification](#)
- [3 Features](#)
- [4 Packing List](#)
- [5 Functions](#)
- [6 Setting Instructions](#)
- [7 Precautions](#)
- [8 Warranty](#)
- [9 Maintenance](#)
- [10 WEEE Symbol](#)
- [11 FAQ](#)
- [12 Documents / Resources](#)
 - [12.1 References](#)

KARLSSON
Q U A L I T Y T I M E

KARLSSON KA6039 Alarm Clock



Product Specification

- **Power Supply:** DC 5V / 2A, AC100-240V 50/60Hz (not included), 3 x LR1130 (not included), 1 x USB cable (1.5m 2A included).
- **Requirements:** To ensure charging speed and product function stability, the product requires a USB cable with a 2A electric current and DC 5V/2A power adaptor.
- **Power:** 5W.
- **Charging Distance:** 2-10mm (the closer the distance between the mobile phone and the product, the faster the charging).
- **Phone Charging Time:** Approximately one hour longer compared to plug-in charging.
- **Usage:** When the clock is plugged in, place the phone on top of the clock to charge. Note that phone covers may interfere with charging, and not all phones support wireless charging.

Features

- **Display Modes:** DP-1/DP-2:
- **DP-1:** Time and date displayed in sequence (carousel mode).
- **DP-2:** Fixed time display.
- **Calendar:** Covers 1 January 2000 to 31 December 2099 (default: 1 January 2016).
12/24-Hour Format Selection: Default 24-hour format, 12:00.
- **Alarms:** Set up to 3 alarms, each lasting 1 minute, with the sound “Beep Beep Beep”.
- **Night Mode:** Automatic dimming from 18:00 to 6:59.
- **Brightness Levels:** 4 adjustable levels (L0 to L3, where L3 is the brightest and L0 the dimmest).
- **Sound Control Mode (Power-Saving Mode):** Activates the display upon sound or touch.
- **Time Memory:** Powered by 3 x LR1130 button cells (not included). These maintain the internal time program, but the display will not be visible externally.

Packing List

- Ensure all items are present upon opening the packaging:
- Digital wooden clock: 1pc.
- User Manual: 1pc.
- USB cable (2A, 1.5m): 1pc.
- Keys: SET, UP, DOWN.

Functions

- **Display Mode:**

- Press the “SET” button to change between:
- DP-1: Time and date displayed in sequence (carousel mode).
- DP-2: Fixed time display.

- **Sound Mode (Power-Saving Mode):**

- Press the “DOWN” button to toggle between: “ON: Sd” (sound mode activated):
The display will turn off after a few seconds. The display will wake up if the sound is louder than 60 decibels or if the clock is tapped. “—: Sd” (sound mode deactivated): The constant light function will be activated.

- **Brightness Setting:**

- Hold the “UP” button for 2 seconds to enter brightness adjustment mode.
- Adjust brightness using the “UP” button (brighter) or the “DOWN” button (dimmer):
- L3: Brightest.
- L2: Less bright.
- L1: Weak brightness.
- L0: Dimmest.

- **Alarm Setting:**

- Set up to 3 alarms daily, each lasting 1 minute with the sound “Beep Beep Beep”.
- To stop the alarm, press any key on the back of the clock.

Setting Instructions

- Hold the “SET” button for 2 seconds to enter setting mode. The setting order is as follows:
- Date Setting: Year → Month → Date (use the “UP” or “DOWN” button to change values). 12/24-Hour Format Setting: After setting the date, press “SET” to toggle between 12-hour and 24-hour formats using the “UP” and “DOWN” buttons. In 12-hour format, “PM” will be displayed for the afternoon.
- Time Setting: After setting the format, press “SET” again to adjust the time.
- Alarm Setting: After setting the time, press “SET” again to set the alarms. Use the “UP” and “DOWN” buttons to toggle alarms (ON:A1, ON:A2, ON:A3). Press “SET” to adjust each alarm’s hour and minute.

Reset Function:

If the functions or display do not work properly, press the “RESET” button using a thin object (e.g., a needle) located on the back of the product.

Precautions

- Use the clock in a dry area. Prolonged exposure to moisture, vibration, high temperatures, or fluctuating temperatures may damage the product.
- Avoid dropping the clock to prevent damage.
- Use a compatible 5V/2000mA AC adapter for optimal performance.

Warranty

There is a two-year warranty against manufacture defects on all Karlsson clocks, valid from the date of purchase.

Maintenance

A soft cloth may be used to clean your clock. Do not use corrosive cleaner or chemical solution on the clock.

WEEE Symbol



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal.

Karlsson is a trademark of Present Time@

16, 1322 AL, Almere

www.presenttime.com

FAQ


• **Q: What should I do if my phone cover interferes with wireless charging?**

A: Remove the phone cover before placing it on top of the clock for charging.

• **Q: How do I change the brightness level?**



A: Hold the UP button for 2 seconds to enter brightness adjustment mode, then use the UP or DOWN buttons to adjust brightness levels.

Documents / Resources

	KARLSSON KA6039 Alarm Clock [pdf] Instruction Manual KA6039, KA6039 Alarm Clock, Alarm Clock, Clock
---	--

References

- [User Manual](#)

 Alarm Clock, Clock, KA6039, KA6039 Alarm Clock,
 KARLSSON KARLSSON

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.