



Contents [[hide](#)]

- [1 KARLSSON KA6040 Alarm Clock](#)
- [2 Features](#)
- [3 Operation](#)
- [4 Time setting](#)
- [5 Alarm & Snooze setting](#)
- [6 Temperature display](#)
- [7 Warranty](#)
- [8 Maintenance](#)
- [9 WEEE Symbol](#)
- [10 Frequently Asked Questions](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)

KARLSSON
Q U A L I T Y T I M E

KARLSSON KA6040 Alarm Clock



Features

- LED time display.
- 12/24-hour format selection.
- Alarm (1-minute duration).
- Snooze function (5-60 minutes).
- Temperature display in C° or F°.
- Temperature range: 0°C to 50°F.
- Night mode setting (default: 18:00-06:00).
- Two luminance levels for the LED display.
- Five function buttons (MODE, ALARM, SNOOZE/LIGHT, UP, DOWN).
- Time memory function (powered by 3 x AAA batteries).
- Power consumption: 3 x AAA batteries (not included) or USB cable (1 metre included).
- When powered by batteries or USB cable, a “BI” sound will be heard, and the LED light will turn on.
- When powered by batteries, pressing any button will activate the LED light for 10 seconds.
- When powered via USB cable, the LED light will remain on.

Operation

- Press the MODE button once to view the temperature.
- While viewing the temperature, press the DOWN button to switch between C° and F°.
- Press the MODE button twice to view the night mode ON/OFF status.
- While in time mode, press the ALARM button to activate or deactivate the alarm function.
- When the alarm is ringing, press the SNOOZE/LIGHT button to activate the snooze function.
- Press the UP button to switch between two luminance levels.

Time setting

- While in time mode, hold the MODE button for 3 seconds to enter the time setting mode. The setting sequence is: Hour > Minute > 12Hr/24Hr format.
- During the setting process, the setting element will flash.
- Press the UP button once to increase the value. Hold the UP button to scroll faster.
- Press the DOWN button once to decrease the value. Hold the DOWN button to scroll

faster.

- If the 12-hour format is selected, “PM” will be displayed during the afternoon, but there is no “AM” indicator for the morning.
- Press the MODE button or wait 10 seconds without any operation to confirm the settings and return to normal time display.

Alarm & Snooze setting

- While in time mode, hold the ALARM button for 3 seconds to enter the alarm time setting mode. The setting sequence is: Alarm Hour > Alarm Minute > Snooze Interval (5-60 minutes).
- During the setting process, the AL icon and the setting element will flash.
- Press the UP button once to increase the value. Hold the UP button to scroll faster.
- Press the DOWN button once to decrease the value. Hold the DOWN button to scroll faster.
- Press the ALARM button or wait 10 seconds without any operation to confirm the settings and return to normal time display.
- While in time mode, press the ALARM button to activate or deactivate the alarm function.
- When the alarm is ringing, the AL icon will flash, and a buzzer will sound for 1 minute (BIBIBIBI).
- To stop the alarm, press any button except the SNOOZE/LIGHT button.
- Pressing the SNOOZE/LIGHT button will stop the alarm and activate the snooze function. The AL icon will continue to flash until the next alarm time is reached.

Night mode setting

- Default night mode is OFF with a time period of 18:00 to 06:00.
- While in time mode, press the MODE button twice to view the night mode ON/OFF status.
- Use the UP or DOWN button to toggle night mode ON or OFF.
- When night mode is ON, hold the MODE button for 3 seconds to enter night mode time setting. The setting sequence is: Start Hour > Start Minute > Stop Hour > Stop Minute.
- When night mode is ON, the LED display will automatically dim during the set night

time period.

Luminance setting

- Two luminance levels are available.
- The default luminance level is bright.
- Press the UP button to switch between the two levels.

Temperature display

- While in time mode, press the MODE button once to view the temperature.
- Press the DOWN button to toggle between C° and F°.
- While in temperature mode, hold the MODE button for 3 seconds until a “BI” sound is heard. The LED display will switch between:
 - Temperature (5 seconds).
 - Time (10 seconds).
 - Repeat.
- To return to time mode, hold the MODE button again until the “BI” sound is heard.

Warranty

There is a two-year warranty against manufacture defects on all Karlsson clocks, valid from the date of purchase.

Maintenance

A soft cloth may be used to clean your clock. Do not use corrosive cleaner or chemical solution on the clock.

WEEE Symbol



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in


accordance with local environmental regulations for waste disposal.

Karlsson is a trademark of Present Time@
Televisieweg 16, 1322 AL, Almere
www.presenttime.com

Frequently Asked Questions



- **Q: How do I switch between 12-hour and 24-hour formats?**
A: While in time mode, hold the MODE button for 3 seconds to enter the time setting mode. Use the UP or DOWN button to toggle between the 12-hour and 24-hour formats.
- **Q: How do I activate or deactivate the alarm function?**
A: While in time mode, press the ALARM button to toggle the alarm function on or off.

Documents / Resources

	KARLSSON KA6040 Alarm Clock [pdf] Instruction Manual KA6040, KA6040 Alarm Clock, Alarm Clock, Clock
---	--

References

- [User Manual](#)

 Alarm Clock, Clock, KA6040, KA6040 Alarm Clock,
 KARLSSON KARLSSON

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.