



Contents [[hide](#)]

- [1 KARLSSON KA6054 Alarm Clock](#)
- [2 Specifications](#)
- [3 Night light](#)
- [4 Back light](#)
- [5 Alarm and Snooze Time Set](#)
- [6 Alarm Function](#)
- [7 Wireless Charging](#)
- [8 Specifications](#)
- [9 Warranty](#)
- [10 Maintenance](#)
- [11 WEEE Symbol](#)
- [12 FAQ](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)

KARLSSON

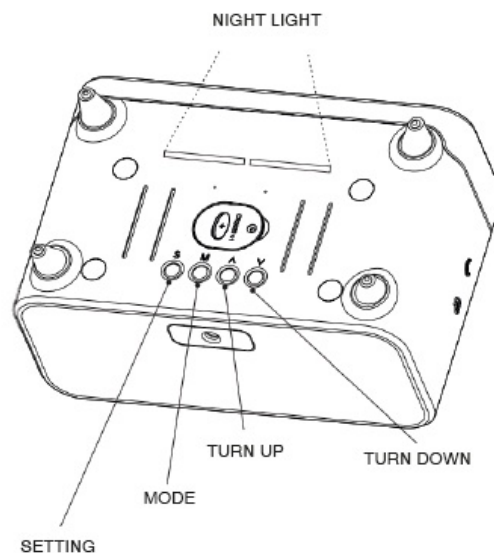 
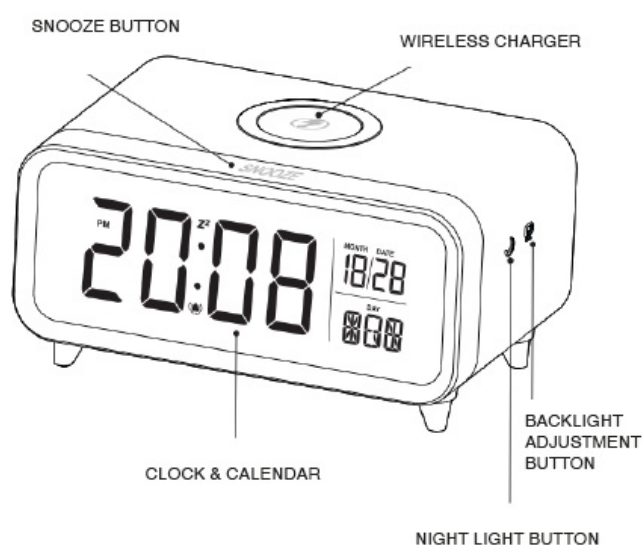 
KARLSSON KA6054 Alarm Clock



Specifications

- Model: KA6054
- Features: Snooze Button, Wireless Charger, Night Light, Clock & Calendar
- Buttons: Backlight Adjustment, Night Light, Setting

INSTRUCTION MANUAL ALARM CLOCK CHUNKY KA6054



Power

- Using a suitable adapter, connect it to the clock.

Note

- Please use the original adapter.
- If the light blinks randomly or the clock makes unusual noises, turn off the power.
- The original adapter is only to be used for this clock; do not use it with other products.

Night light

- Touch the button on the side of the clock to adjust the brightness.
- The brightness levels: are High–Middle–Low–Off.

Back light

- Touch the button on the side to adjust the brightness of the display panel.

- The brightness levels are High–Middle–Low–Off.

Set

Press the “S” button (Set) to enter time setting mode. The adjustment order is Hour > Minute > Year > Month > Day. Use the Up button to increase or the Down button to decrease the values.

Alarm and Snooze Time Set

Press the “M” button (Mode) to enter the alarm setting mode. Use the Up or Down button to enable or disable the alarm. The corresponding icon will appear when the alarm is active.

To set the hour, minute, and snooze duration, press the “S” button (Set), then adjust with Up to increase or Down to decrease.

Alarm Function

- When the alarm is sounding, press the “S”, “M”, “Up”, or “Down” buttons to stop the alarm. If no action is taken, the alarm will automatically stop after 1 minute.

Snooze Function

- When the alarm sounds, press the snooze button to activate snooze mode.
- The snooze icon will light up. 12/24-Hour Format
- In time mode, press the “^” (Up) button to toggle between the 12-hour and 24-hour formats.

Wireless Charging

- Place electronic devices (compatible with wireless charging) on the center of the clock for charging.

Note

- When the device is charging, a red light will appear on the screen.
- When fully charged, a green light will appear on the screen.

- If charging fails or an anomaly occurs, the red light will blink.

Specifications

- Product power: 18W \pm 10%
- Working temperature: 0 to 50°C
- Adapter: 9V/2A
- Wireless power rate: 10W
- Dimensions: 17 x 11 x 7.35 cm

Warranty

There is a two-year warranty against manufacture defects on all Karlsson clocks, valid from the date of purchase.

Maintenance

A soft cloth may be used to clean your clock. Do not use corrosive cleaner or chemical solution on the clock.

WEEE Symbol



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal.

FAQ

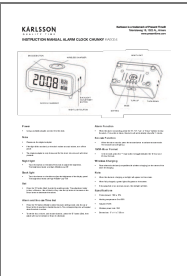 
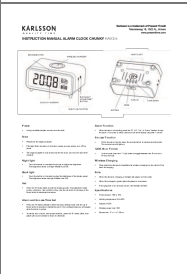 
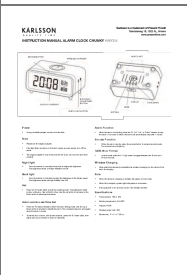 
• How do I adjust the brightness of the display panel?

To adjust the brightness of the display panel, touch the backlight adjustment button on the side of the clock.

• How can I activate snooze mode when the alarm goes off?

Simply press the snooze button on top of the clock when the alarm sounds to activate snooze mode.

Documents / Resources

	<p>KARLSSON KA6054 Alarm Clock [pdf] Instruction Manual</p> <p>KA6054, KA6054GR, KA6054 Alarm Clock, KA6054, Alarm Clock, Clock</p>
	<p>KARLSSON KA6054 Alarm Clock [pdf] Instruction Manual</p> <p>KA6054, KA6054YE, KA6054 Alarm Clock, KA6054, Alarm Clock, Clock</p>
	<p>KARLSSON KA6054 Alarm Clock [pdf] Instruction Manual</p> <p>KA6054, KA6054BL, KA6054 Alarm Clock, KA6054, Alarm Clock, Clock</p>

References

- [User Manual](#)

Alarm Clock, Clock, KA6054, KA6054 Alarm Clock, KA6054GR, KARLSSON KARLSSON

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.