



[Home](#) » [KARLSSON](#) » **KARLSSON KA6054 LED Alarm Clock Chunky Instruction Manual** 

Contents [[hide](#)]

 
 
- [1 KARLSSON KA6054 LED Alarm Clock Chunky](#)
- [2 PRODUCT IDENTIFICATION](#)
- [3 FUNCTION](#)
- [4 Specifications](#)
- [5 Warranty](#)
- [6 Maintenance](#)
- [7 WEEE Symbol](#)
- [8 Frequently Asked Questions](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)

KARLSSON
Q U A L I T Y T I M E

KARLSSON KA6054 LED Alarm Clock Chunky



PRODUCT IDENTIFICATION

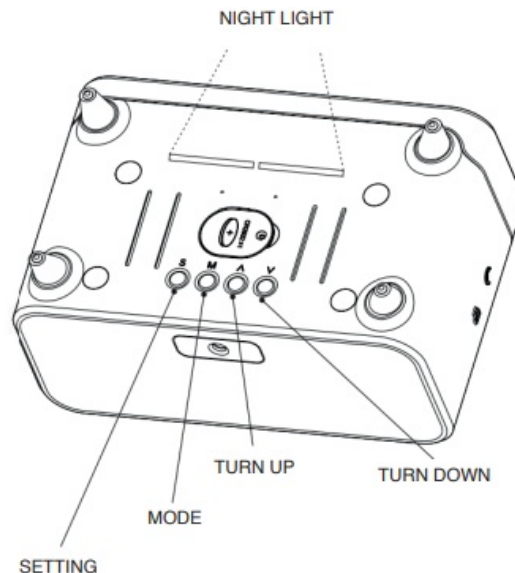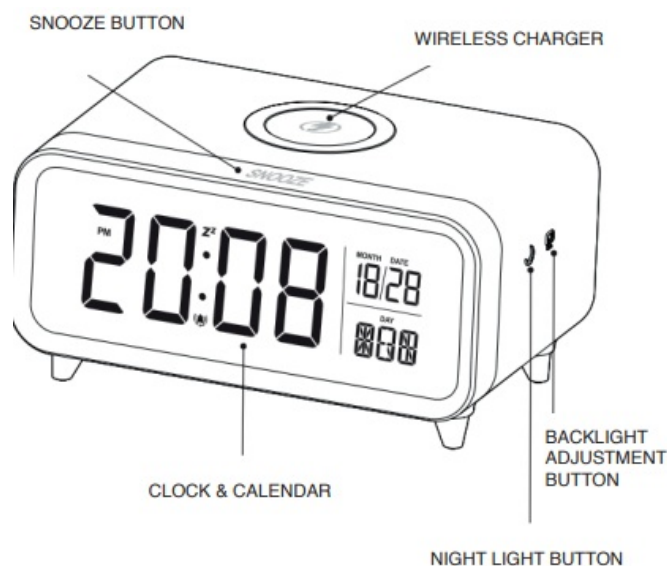

FUNCTION

• Power

Using a suitable adapter, connect it to the clock.

• Note

- Please use the original adapter.
- If the light blinks randomly or the clock makes unusual noises, turn off the power.
- The original adapter is only to be used for this clock; do not use it with other products.

• Night light

- Touch the button on the side of the clock to adjust the brightness.
- The brightness levels: are High–Middle–Low–Off.

• Back light

- Touch the button on the side to adjust the brightness of the display panel.
- The brightness levels are High–Middle–Low–Off.

• Set

Press the “S” button (Set) to enter time setting mode. The adjustment order is Hour > Minute > Year > Month > Day. Use the Up button to increase or the Down button to decrease the values.

• Alarm and Snooze Time Set

- Press the “M” button (Mode) to enter the alarm setting mode. Use the Up or Down button to enable or disable the alarm. The corresponding icon will appear when the alarm is active.
- To set the hour, minute, and snooze duration, press the “S” button (Set), then

adjust with Up to increase or Down to decrease.

- **Alarm Function**

When the alarm is sounding, press the “S”, “M”, “Up”, or “Down” buttons to stop the alarm. If no action is taken, the alarm will automatically stop after 1 minute.

- **Snooze Function**

When the alarm sounds, press the snooze button to activate snooze mode.

The snooze icon will light up.

- **12/24-Hour Format**

In time mode, press the “^” (Up) button to toggle between the 12-hour and 24-hour formats.

- **Wireless Charging**

Place electronic devices (compatible with wireless charging) on the center of the clock for charging.

- **Note**

- When the device is charging, a red light will appear on the screen.
- When fully charged, a green light will appear on the screen.
- If charging fails or an anomaly occurs, the red light will blink.

Specifications

- **Product power:** 18W \pm 10%
- **Working temperature:** 0 to 50°C
- **Adapter:** 9V/2A
- **Wireless power rate:** 10W
- **Dimensions:** 17 x 11 x 7.35 cm

Warranty

There is a two-year warranty against manufacture defects on all Karlsson clocks, valid from the date of purchase.

Maintenance

A soft cloth may be used to clean your clock. Do not use corrosive cleaner or chemical solution on the clock.

WEEE Symbol



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal.

Karlsson is a trademark of Present Time

Televisieweg 16, 1322 AL, Almere

www.presenttime.com



Frequently Asked Questions

 
- **How do I adjust the brightness of the night light and backlight?**

To adjust the brightness of the night light, press the night light button on the side of the clock. To adjust the backlight brightness, touch the backlight adjustment button on the side.

- **How do I set the alarm and snooze functions?**

To set the alarm time, use the designated buttons. When the alarm sounds, press the snooze button to activate snooze mode.

Documents / Resources

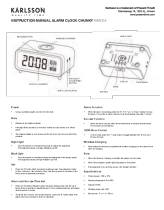	<p>KARLSSON KA6054 LED Alarm Clock Chunky [pdf] Instruction Manual</p> <p>KA6054, KA6054 LED Alarm Clock Chunky, LED Alarm Clock Chunky, Alarm Clock Chunky, Clock Chunky</p>
---	---

References

- [User Manual](#)

■ KARLSSON

🔍 Alarm Clock Chunky, Clock Chunky, KA6054, KA6054 LED Alarm Clock Chunky, KARLSSON, LED Alarm Clock Chunky

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.

