



KARLSSON KA6061 LED Cuckoo Alarm Clock Instruction Manual

July 4,
2025

KARLSSON
Q U A L I T Y T I M E

Karlsson is a trademark of Present Time®

Televisieweg 16, 1322 AL, Almere

www.presenttime.com

Contents [[hide](#)]

1 INSTRUCTION MANUAL ALARM CLOCK KA6061

1.1 Functions

1.2 Initial Setup

1.3 Setting the Time and Calendar

1.4 Setting the Alarm

1.5 Activating/Deactivating the Snooze Alarm

1.6 Hourly Cuckoo Chime

1.7 Temperature Display

1.8 12/24-Hour Format

1.9 Viewing Year, Month, Date, Alarm, and Temperature

1.10 Brightness Levels

1.11 Backup Battery

1.12 TEST (4) Button

1.13 RESET (3) Button

1.14 Warnings

1.15 Warranty

1.16 Maintenance

1.17 WEEE Symbol

2 Documents / Resources

2.1 References

INSTRUCTION MANUAL ALARM CLOCK KA6061

Thank you for purchasing this LED Cuckoo Alarm Clock. Please read the following instructions and warnings carefully before use to ensure the safe and satisfactory operation of this product.

Functions

Time and Calendar (Year, Month, and Date)

Snooze Cuckoo Alarm

Temperature (selectable in °C/°F)

Hourly Cuckoo Chime

Initial Setup

Connect the cable to a 5V adapter (not included) and the Type-C DC-5V (5) jack. The clock will start at “12:00”.

Setting the Time and Calendar

In the normal display mode, press the SET (1) button. The hour digits will flash. Use the UP (6) or DOWN (7) button to set the hour. Ensure AM/PM is set correctly. A ‘PM’ LED in the top-left corner of the time display indicates PM time in 12-hour format.

Press the SET (1) button again to set the minutes. Use the UP (6) or DOWN (7) button to adjust.

Continue in the sequence: hour -> minute -> year -> month -> date.

Press the MODE (2) button to return to the main time display. The time and calendar are now set.

Setting the Alarm

- Press and hold the SET (1) button for 3 seconds. The hour digits will flash. Use the UP (6) or DOWN (7) button to set the alarm hour (ensure AM/PM is correct).
- Press the SET (1) button again to set the minutes, using the UP (6) or DOWN (7) button.
- Press the MODE (2) button to return to the main display.

Activating/Deactivating the Snooze Alarm

- Press and hold the MODE (2) button for 3 seconds. An alarm LED above the colon will light up, indicating the snooze alarm is active.
- When the alarm sounds, press any button on the back of the clock to temporarily stop the alarm. The cuckoo sound will repeat after the snooze interval (default: 5 minutes). This cycle repeats up to 4 times.
- If no button is pressed, the alarm will sound for 1 minute per snooze interval, up to 4 times, before deactivating.
- To stop the snooze function permanently, press and hold the MODE (2) button for 3

seconds until the alarm LED turns off.

Hourly Cuckoo Chime

The clock chimes every hour, except between 22:00 and 06:00. The first chime occurs at 07:00. If an alarm overlaps with the chime, the alarm takes priority. During the silent period (22:00-06:00), alarms remain active.

Temperature Display

The display alternates between time and temperature. To switch between °C and °F, press the DOWN (7) button. For a continuous time display, press and hold the DOWN (7) button until the cuckoo sound plays, then release.

12/24-Hour Format

Press the UP (6) button in the normal display mode to toggle between 12-hour and 24-hour formats.

Viewing Year, Month, Date, Alarm, and Temperature

Press the MODE (2) button repeatedly to cycle through year -> month -> date -> alarm time -> temperature. Press MODE (2) again to return to the time display.

Brightness Levels

The clock adjusts brightness automatically:

- 07:00–18:59: High
- 19:00–22:59: Medium
- 23:00–06:59: Low

Backup Battery

A CR2032 button cell (not included) serves as a backup power source. To install:

1. Open the battery compartment (9) using a flat screwdriver or coin.
2. Insert the cell with the positive (+) side facing out.
3. Close the compartment securely.

TEST (4) Button

Press the TEST button at any time to hear the cuckoo chime.

RESET (3) Button

If the clock becomes unresponsive, use a blunt object (e.g., pen tip or toothpick) to press the RESET hole. The clock will reset to the initial display.

Warnings

1. Do not expose this product to liquids.
2. Clean with a soft cloth or paper towel only.
3. Avoid using corrosive cleaners or chemical solutions.
4. Keep this instruction manual for future reference.

Warranty

There is a two-year warranty against manufacture defects on all Karlsson clocks, valid from the date of purchase.


Maintenance

A soft cloth may be used to clean your clock. Do not use corrosive cleaner or chemical solution on the clock.


WEEE Symbol



— The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal.

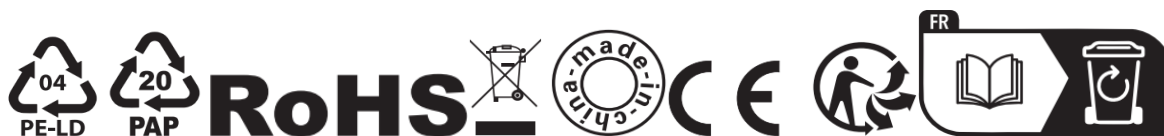



Documents / Resources

	KARLSSON KA6061 LED Cuckoo Alarm Clock [pdf] Instruction Manual KA6061WH, KA6061BK, KA6061DW, KA6061 LED Cuckoo Alarm Clock, KA6061, LED Cuckoo Alarm Clock, Alarm Clock, Clock
--	---

References

- [User Manual](#)

 KARLSSON

 Alarm Clock, Clock, KA6061, KA6061 LED Cuckoo Alarm Clock, KA6061BK, KA6061DW, KA6061WH, KARLSSON, LED Cuckoo Alarm Clock

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.