



# kaysun KID-05 S Remote Controller User Manual

[Home](#) » [Kaysun](#) » kaysun KID-05 S Remote Controller User Manual 

## Contents

- [1 kaysun KID-05 S Remote Controller](#)
- [2 Remote Controller Specifications](#)
- [3 Quick Start Guide](#)
- [4 Handling the Remote Controller](#)
- [5 Buttons and Functions](#)
- [6 Remote Screen Indicators](#)
- [7 How to Use Basic Functions](#)
- [8 Setting the TIMER](#)
- [9 How to Use Advanced Functions](#)
- [10 LED DISPLAY](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)



**kaysun KID-05 S Remote Controller**



 
### IMPORTANT NOTE

Thank you for purchasing our air conditioner. Please read this manual carefully before operating your new air conditioning unit. Make sure to save this manual for future reference.

### Remote Controller Specifications

model	KID-05 S
rated voltage	3.0V( Dry batteries R03/LR03×2)
single receiving range	8m
environment	-5°C~60°C(23°F~140°F)

### Quick Start Guide

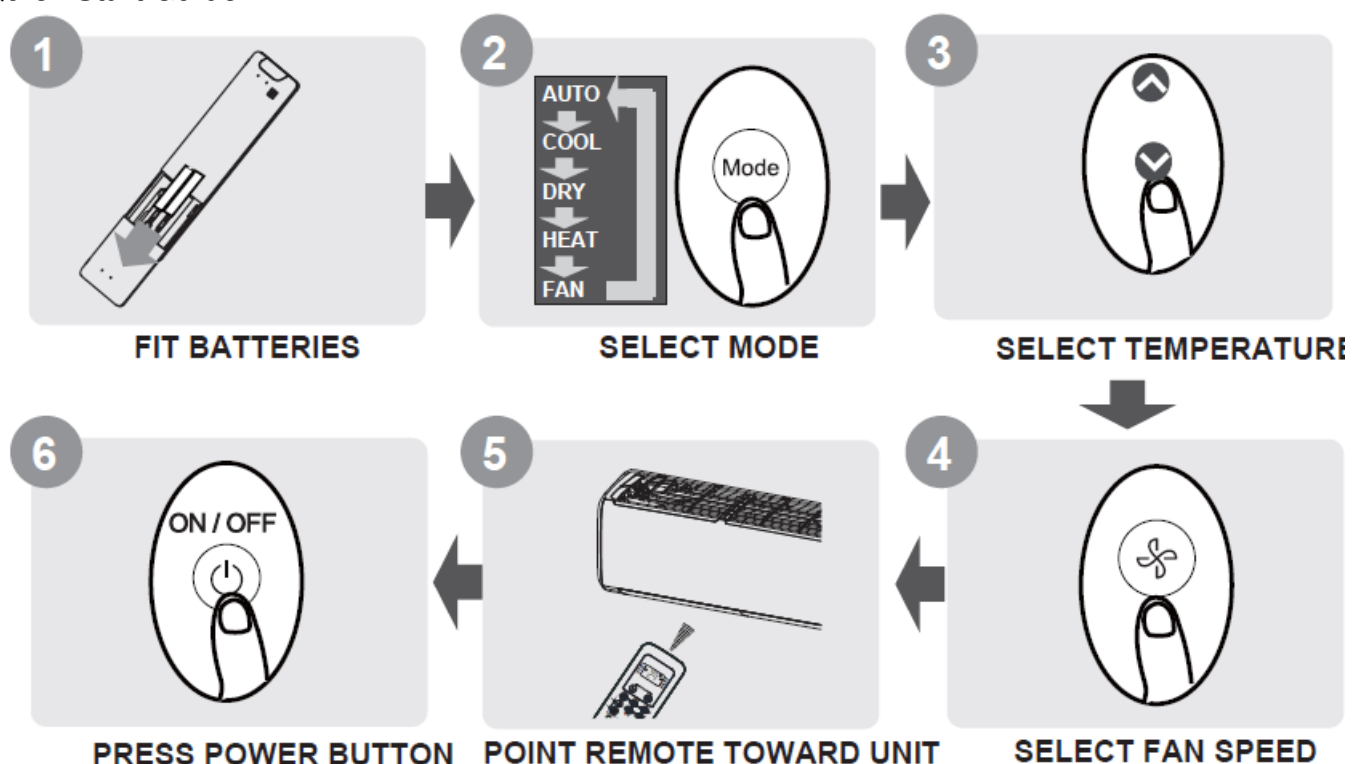

## NOT SURE WHAT A FUNCTION DOES?

Refer to the How to Use Basic Functions and How to Use Advanced Functions sections of this manual for a detailed description of how to use your air conditioner.

 
## SPECIAL NOTE

- Button designs on your unit may differ slightly from the example shown.
- If the indoor unit does not have a particular function, pressing that function's button on the remote control will have no effect.
- When there are wide differences between "Remote controller Manual" and "USER'S MANUAL" in the function description, the description of "USER'S MANUAL" shall prevail.

## Handling the Remote Controller

**Inserting and Replacing Batteries** Your air conditioning unit may come with two batteries(some units). Put the batteries in the remote control before use.

1. Slide the back cover from the remote control downward, exposing the battery compartment.
2. Insert the batteries, paying attention to match up the (+) and (-) ends of the batteries with the symbols inside the battery compartment.
3. Slide the battery cover back into place.

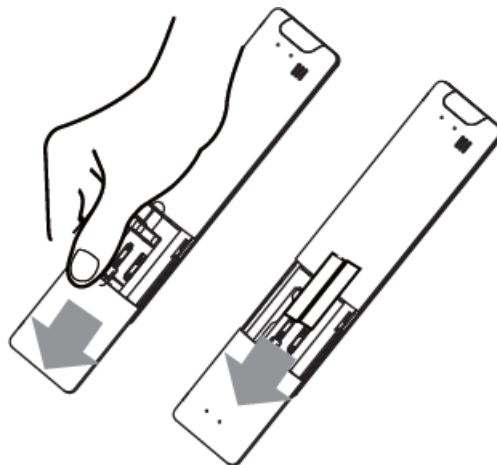

## BATTERY NOTES

For optimum product performance

- Do not mix old and new batteries or batteries of different types.
- Do not leave batteries in the remote control if you don't plan on using the device for more than 2 months.

## BATTERY DISPOSAL

Do not dispose of batteries as unsorted municipal waste. Refer to local laws for proper disposal of batteries.

## TIPS FOR USING REMOTE CONTROL

- The remote control must be used within 8 meters of the unit.
- The unit will beep when a remote signal is received.
- Curtains, other materials, and direct sunlight can interfere with the infrared signal receiver. Remove batteries if

 
the remote will not be used for more than 2 months.

## NOTES FOR USING REMOTE CONTROL

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna. Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not approved by the party responsible for compliance could void the user's authority to operate the equipment.

## Buttons and Functions

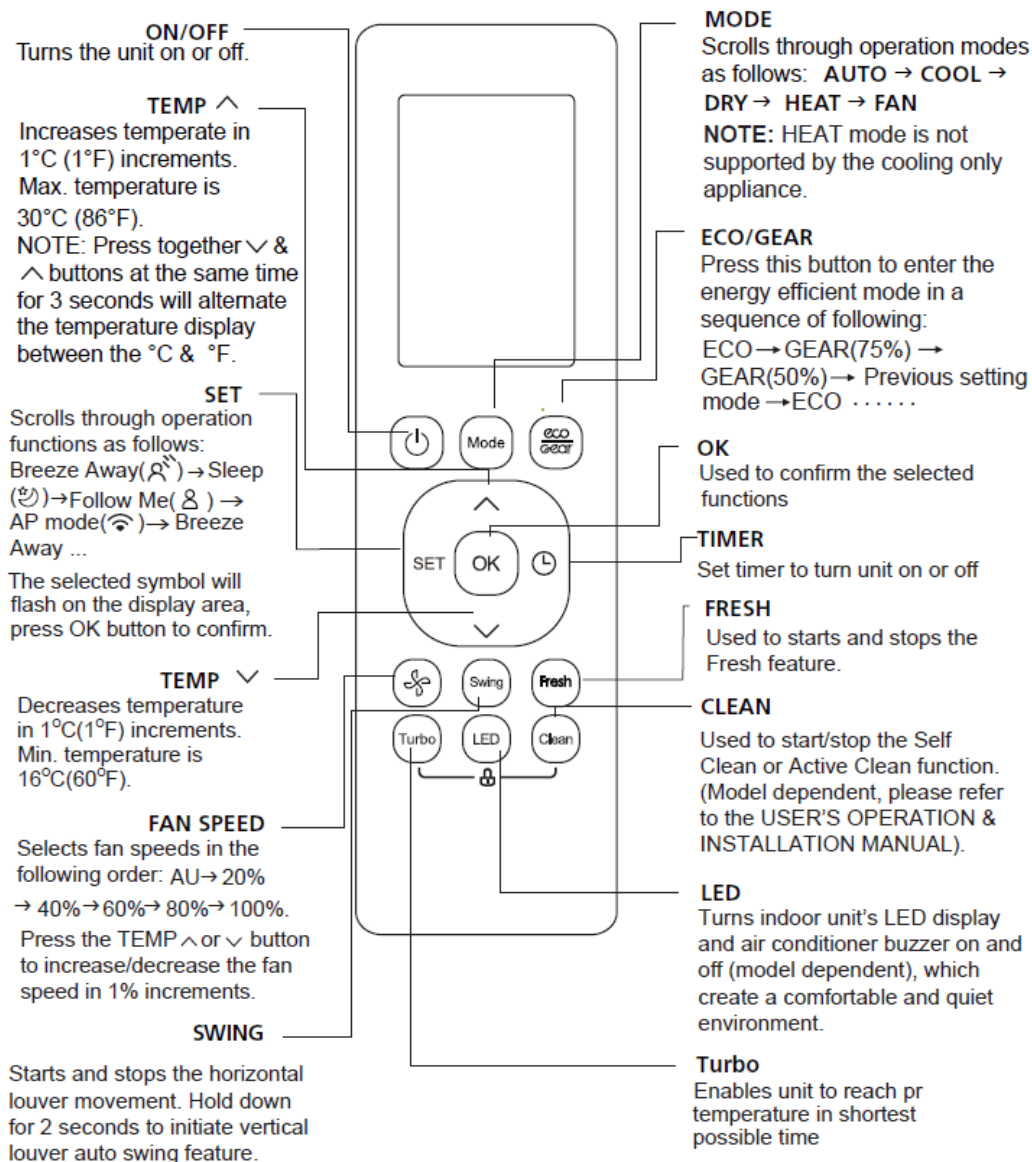

## Remote Screen Indicators

 Information are displayed when the remote controller is powered up.

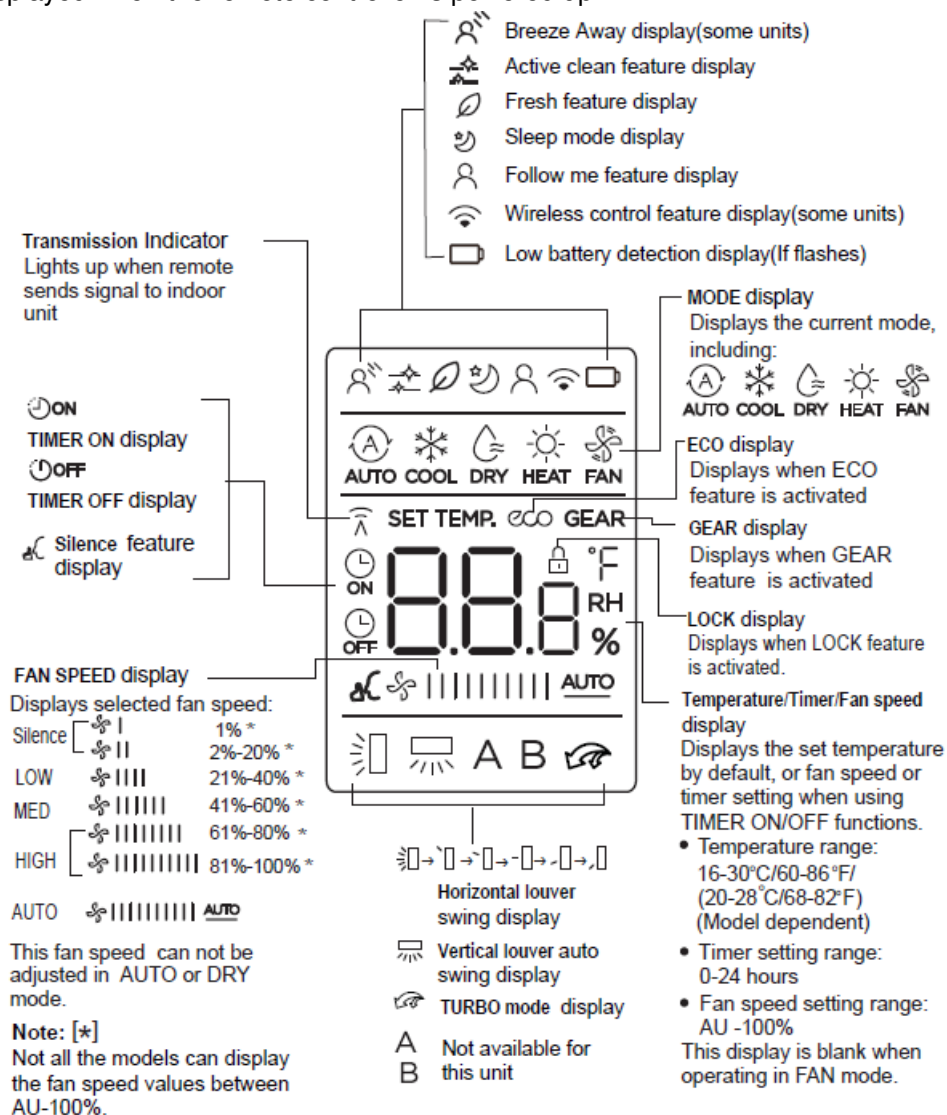


## Note

All indicators shown in the figure are for the purpose of clear presentation. But during the actual operation, only the relative function signs are shown on the display window.

## How to Use Basic Functions

**ATTENTION** Before an operation, please ensure the unit is plugged in and power is available.

 
### AUTO Mode

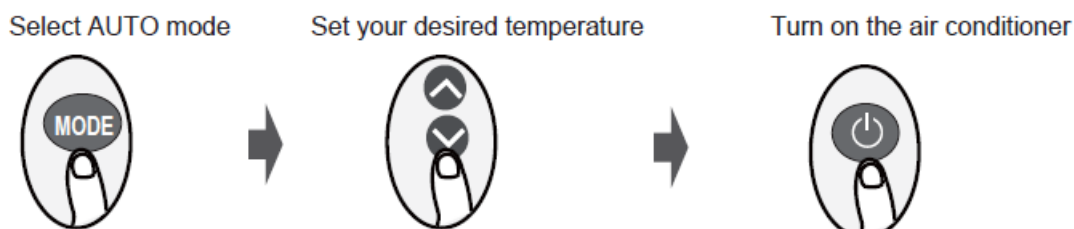


## NOTE

1. In AUTO mode, the unit will automatically select the COOL, FAN, or HEAT function based on the set temperature.
2. In AUTO mode, the fan speed can not be set.
 
## COOL or HEAT Mode

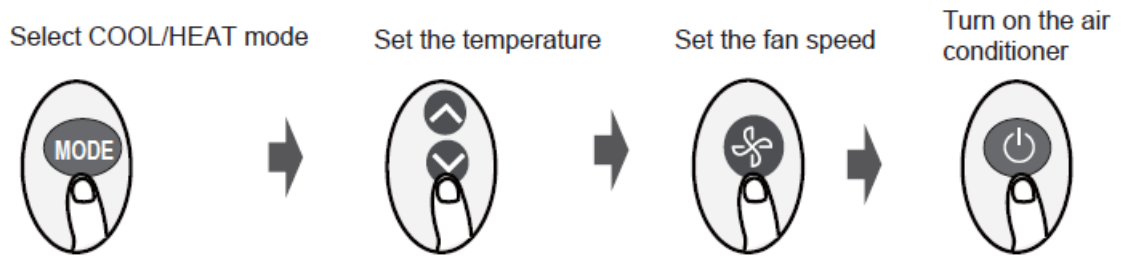

## DRY Mode

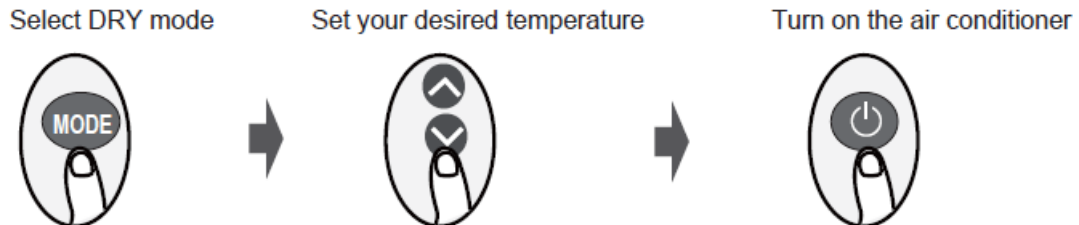 

**NOTE:** In DRY mode, fan speed can not be set since it has already been automatically controlled.

## FAN Mode

 


**NOTE:** In FAN mode, you can't set the temperature. As a result, no temperature displays on the remote screen.


## Setting the TIMER

**TIMER ON/OFF** – Set the amount of time after which the unit will automatically turn on/off.

### TIMER ON setting

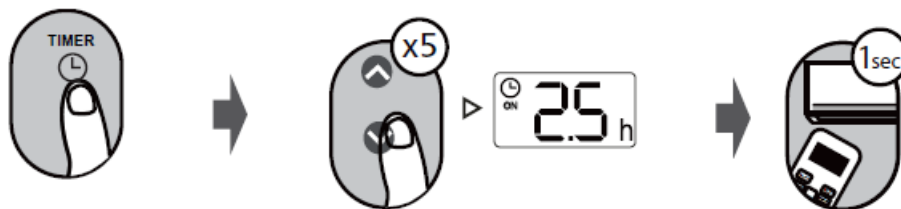

### TIMER OFF setting

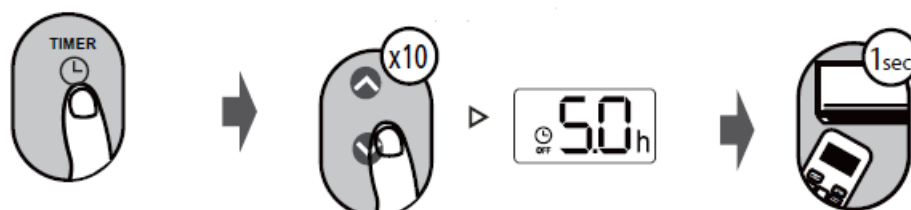 


**NOTE**

- ### TIMER ON & OFF setting(example)

Example: If current timer is 1:00PM, to set the timer as above steps, the unit will turn on 2.5h later (3:30PM) and turn off at 6:00PM.

## Swing function

Press Swing button



The diagram illustrates the sequence of actions for the Swing button. It starts with a finger pressing the 'Swing' button on a device. This is followed by a vibration icon. Then, a finger presses the 'Swing' button for 2 seconds (indicated by a '2s' icon). This is followed by a more intense vibration icon, represented by two curved arrows.

 
**NOTE:** When the unit is off, press and hold the MODE and SWING buttons together for one second, the louver will open for a certain angle, which makes it very convenient for cleaning. Press and hold the MODE and SWING buttons together for one second to reset the louver(Model dependent).

## LED DISPLAY



Press this button to turn on and turn off the display on the indoor unit. Keep pressing this button for more than 5 seconds, the indoor unit will display the actual room temperature. Pressing more than 5 seconds again will revert back to displaying the set temperature.

## ECO/GEAR function

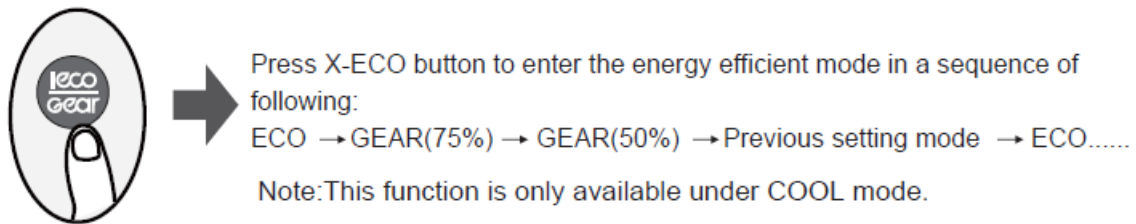

## ECO operation

Under cooling mode, press this button, and the remote controller will adjust the temperature automatically to 24 C/75 F, the fan speed of Auto to save energy (only when the set temperature is less than 24 C/75 F). If the set temperature is above 24 C/75 F, press the ECO button, O O the fan speed will change to Auto, the set temperature will remain unchanged.

 
## NOTE

Pressing the ECO button, or modifying the mode, or adjusting the set temperature to less Than 24 C/75 F will stop ECO operation. Under ECO operation, the set temperature should be 24 C/75 F or above, it may result in O O insufficient cooling. If you feel uncomfortable, just press the ECO button again to stop it.

## GEAR operation

- Press the ECO/GEAR button to enter the GEAR operation as follows:
- 75%(up to 75% electrical energy consumption)
- 50%(up to 50% electrical energy consumption)
- Previous setting mode. Under GEAR operation, the display on the remote controller will alternate between electrical energy consumption and set temperature.

## Silence function

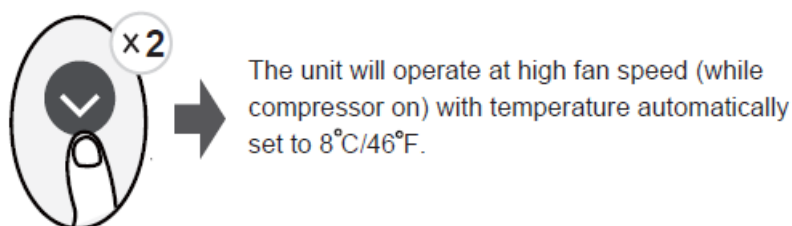


Keep pressing the Fan button for more than 2 seconds to activate/disable the Silence function(some units). Due to the low-frequency operation of the compressor, it may result in insufficient cooling and heating capacity. Press the ON/OFF, Mode, Sleep, Turbo, or Clean button while operating will cancel the silence function.




### FP function

 Press this button 2 times during one second under HEAT Mode and set the temperature of 16 C/60 F or 20 C/68 F.

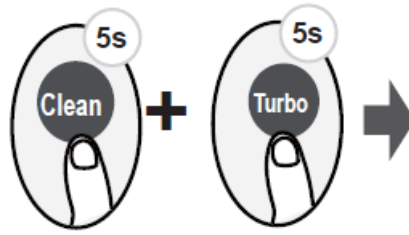

**Note:** This function is for heat pump air conditioner only. Press this button 2 times during one second under HEAT Mode and set the temperature of 16 C/60 F or 20 C/68 F to activate the FP function. Press On/Off, Sleep, Mode, Fan, and Temp. button while operating will cancel this function.

### SET function

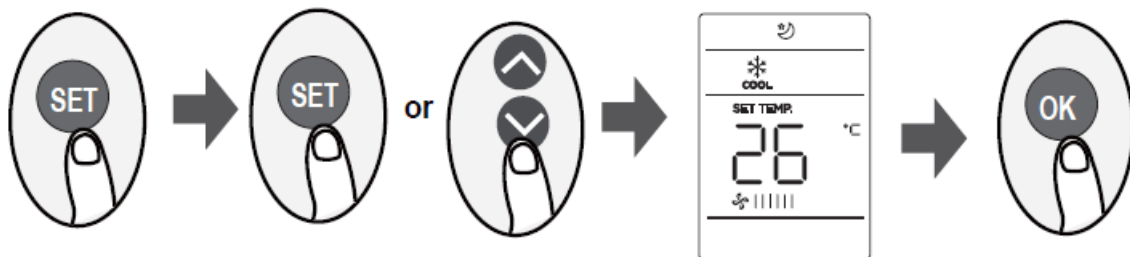 

- Press the SET button to enter the function setting, then press the SET button or TEMP or TEMP button to select the desired function. The selected symbol will flash on the display area, press the OK button to confirm. To cancel the selected function, just perform the same procedures as above.

Press the SET button to scroll through operation functions as follows:

- This feature avoids direct airflow blowing on the body and makes you feel indulging in silky coolness.

**NOTE:** This feature is available under cool, Fan, and Dry modes only.

FRESH function (some units): When the FRESH function is initiated, the ion generator is energized and will help to purify the air in the room.

Sleep function

The SLEEP function is used to decrease energy use while you sleep (and don't need the same temperature settings to stay comfortable). This function can only be activated via remote control., For the detail, see sleep operation

### Follow me function

The FOLLOW ME function enables the remote control to measure the temperature at its current location and send this signal to the air conditioner 3 minutes intervals. When using AUTO, COOL or HEAT modes, measuring ambient temperature from the remote control (instead of from the indoor unit itself) will enable the air conditioner to optimize the temperature around you and ensure maximum comfort.


**NOTE:** Press and hold the Turbo button for seven seconds to start/stop the memory feature of Follow Me function.

- If the memory feature is activated, On displays for 3 seconds on the screen.
- If the memory feature is stopped, OF displays for 3 seconds on the screen.
- While the memory feature is activated, press the ON/OFF button, shift the mode or power failure will not cancel the Follow me function.

**AP function some units)**

Choose AP mode to do wireless network configuration. For some units, it doesn't work by pressing the SET button. To enter the AP mode, continuously press the LED button seven times in 10 seconds. The design and specifications are subject to change without prior notice for product improvement. Consult with the sales agency or manufacturer for details.

**Documents / Resources**

	<p><a href="#">kaysun KID-05 S Remote Controller</a> [pdf] User Manual KID-05 S Remote Controller, KID-05 S, Remote Controller, Controller</p>
---	--