



KE2EM-Cell Edge Manager Cell Instruction Manual

[Home](#) » [KE2](#) » KE2EM-Cell Edge Manager Cell Instruction Manual 

Contents

- [1 KE2EM-Cell Edge Manager Cell](#)
- [2 OVERVIEW](#)
- [3 Factory Reset](#)
- [4 Technical Support](#)
- [5 WARRANTY](#)
- [6 FCC](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)




KE2EM-Cell Edge Manager Cell



OVERVIEW

Model: KE2EM-Cell

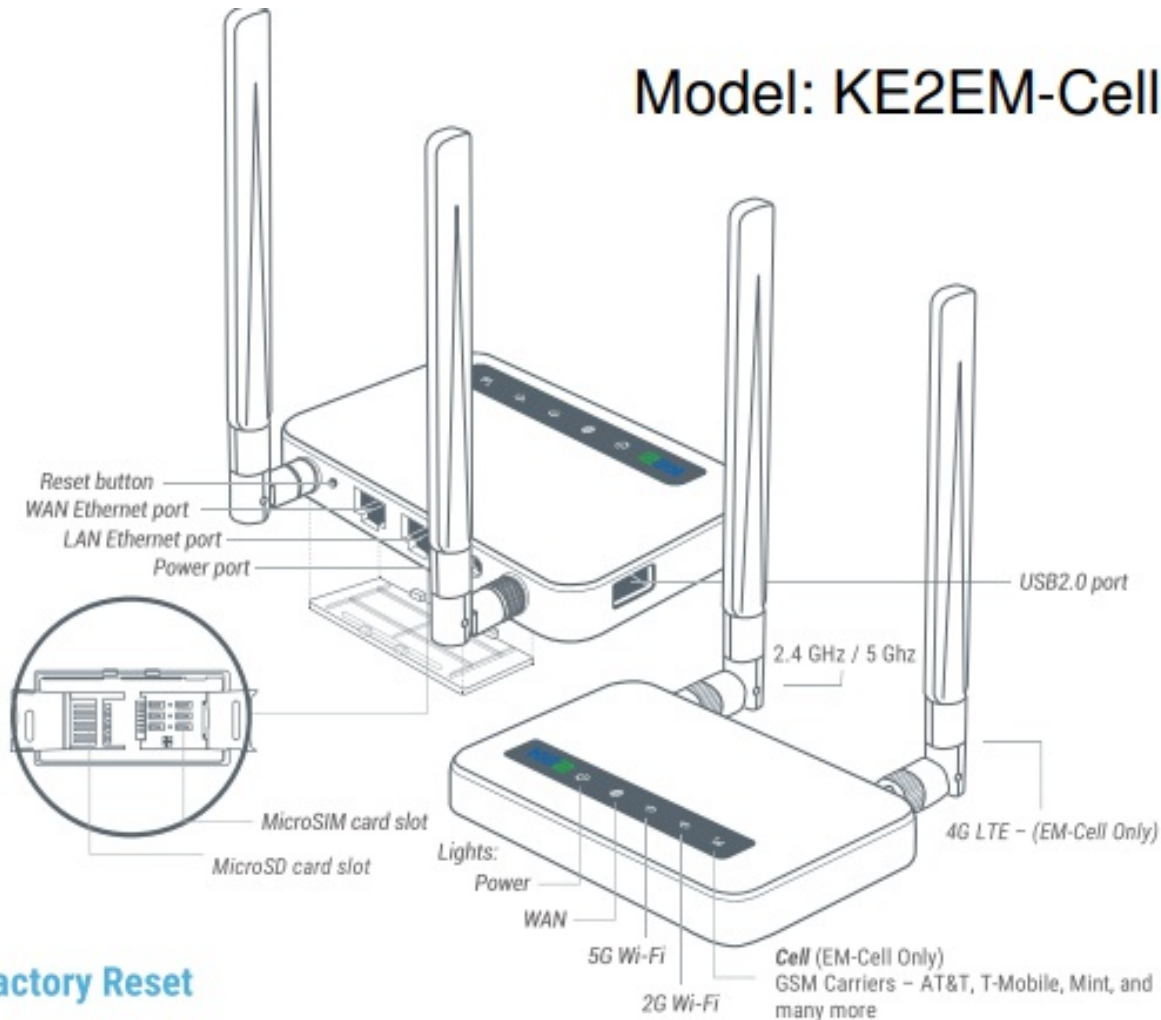

Factory Reset

Factory Reset

If you are unable to access the KE2 Dashboard or cannot connect to the Edge Manager (EM), you can press the button

- Press and hold for 3 seconds and then release to reset the EM
- Press and hold for 10 seconds and then release to reset the EM to factory settings. Caution – all User Data will be cleared

Technical Support

If you are unable to access the KE2 Dashboard or cannot connect to the Edge Manager, you can press the reset button

- For more detailed/ updated Instructions, please visit our website ke2therm.com
- For additional questions, you can get help using the following
 - Email to techsupport@ke2therm.com
 - Our YouTube channel <http://www.youtube.com/111er/KE2Tlenn/vdeo1>
 - If your product is still under warranty, call us at 63H66-0T40 (8 am – 5pm CST)

If calling, please make sure you are running the latest version and have access to the EM

WARRANTY

- We provide a one-year limited warranty for KE2 Edge Manager and a 3-month limited warranty for accessories.
- We recommend using the included I ZV/I .5A power adapter.
- Any damage to the KE2 Edge Manager caused by not following the instructions will render this warranty null and void.
- Any damage to the KE2 Edge Manager caused by any modification including: ~lacernent of the external antenna(s), replacement of MicroSim cant, replacement of MicroSD card, will render this warranty is null and void.
- Any damage to the KE2 Edge Manager caused by inappropriate use, e.g. inappropriate voltage input, high temperature, low temperature, water damage, or enclose damage will render this warranty null and void.
- Pictures used in the instructions are for reference only. We reserve the right to change or modify these materials without further notice.
- Issues caused by the third-party device may nat n,receive official support from KE2 Therm\ KE2 Connect.

FCC

FCC standards: FCC CFR Title 47 Part 15 Subpart C Section 15.247 Integral antenna with antenna gain 2.5dBi This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.—
Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement This modular complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

 
Radiation Exposure Statement

This equipment complies with FCC/ISED RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

For ISED Only

the device for operation in the band 5150–5250 MHz is only for indoor use

Documents / Resources



[KE2 KE2EM-Cell Edge Manager Cell](#) [pdf] Instruction Manual
21903, 2AOPP-21903, 2AOPP21903, KE2EM-Cell Edge Manager Cell, KE2EM-Cell, Edge Manager Cell