



[Home](#) » [KECAG](#) » **KECAG KC-807 Desktop CD Player with Speakers User Manual** 

Contents [[hide](#)]

[1 KECAG KC-807 Desktop CD Player with Speakers](#)

[2 SAFETY INFORMATION](#)

[3 Accessories](#)

[4 Specifications](#)

[5 Main Features](#)

[6 OVERVIEW](#)

[7 REMOTE](#)

[8 Bluetooth transmission](#)

[9 Basic Operation](#)

[10 Repeat Function](#)

[11 Sleep timer operation](#)

[12 Trouble shooting](#)

[13 FCC](#)

[14 FAQs](#)

[15 Documents / Resources](#)

[15.1 References](#)



KECAG KC-807 Desktop CD Player with Speakers



SAFETY INFORMATION

WARNING

1. Never play a cracked CD or a CD is NOT clean, that would damage the laser.
2. Please remove the protective paper CD from the CD Player before powering on, otherwise, the laser could be damaged.
3. Never touch the laser of the device. Always use the dust cover to prevent dust from collecting on the laser.
4. If the device is unable to scan discs properly, use a standard commercially available cleaner to clean the laser optics. Other cleaning methods may damage the laser optics.

Accessories

1. CD player x 1

2. 5V-2A USB adaptor x 1
3. Remote control x 1
4. User manual x 1
5. Type-C Power cord x 1

 
Specifications

1. CD format support: CD, CD-R, CD-RW, MP3, WMA.
2. FM Radio Range: 76.0MHz-108.0MHz
3. Speaker: 40mm X 2
4. Rated impedance: 40
5. Speaker output: 3W x 2
6. Power supply: AC100-240V, 50Hz/60Hz
7. Power/Switch cable length: 1 m
8. Dimension of main unit/package: 189x189x69mm/207x215x77mm
9. Net weight/Gross weight: 520g/900g
10. Color: white/blue/pink/black

Main Features

1. LED screen display
2. USB flash reading/playing
3. Full-band FM radio
4. Bluetooth V5.0
5. Standard 3.5mm audio input/output port
6. Loop Playback modes: Repeat One, Repeat All, Shuffle, Normal
7. Support A-B repeat
8. Support scheduled shutdown


OVERVIEW

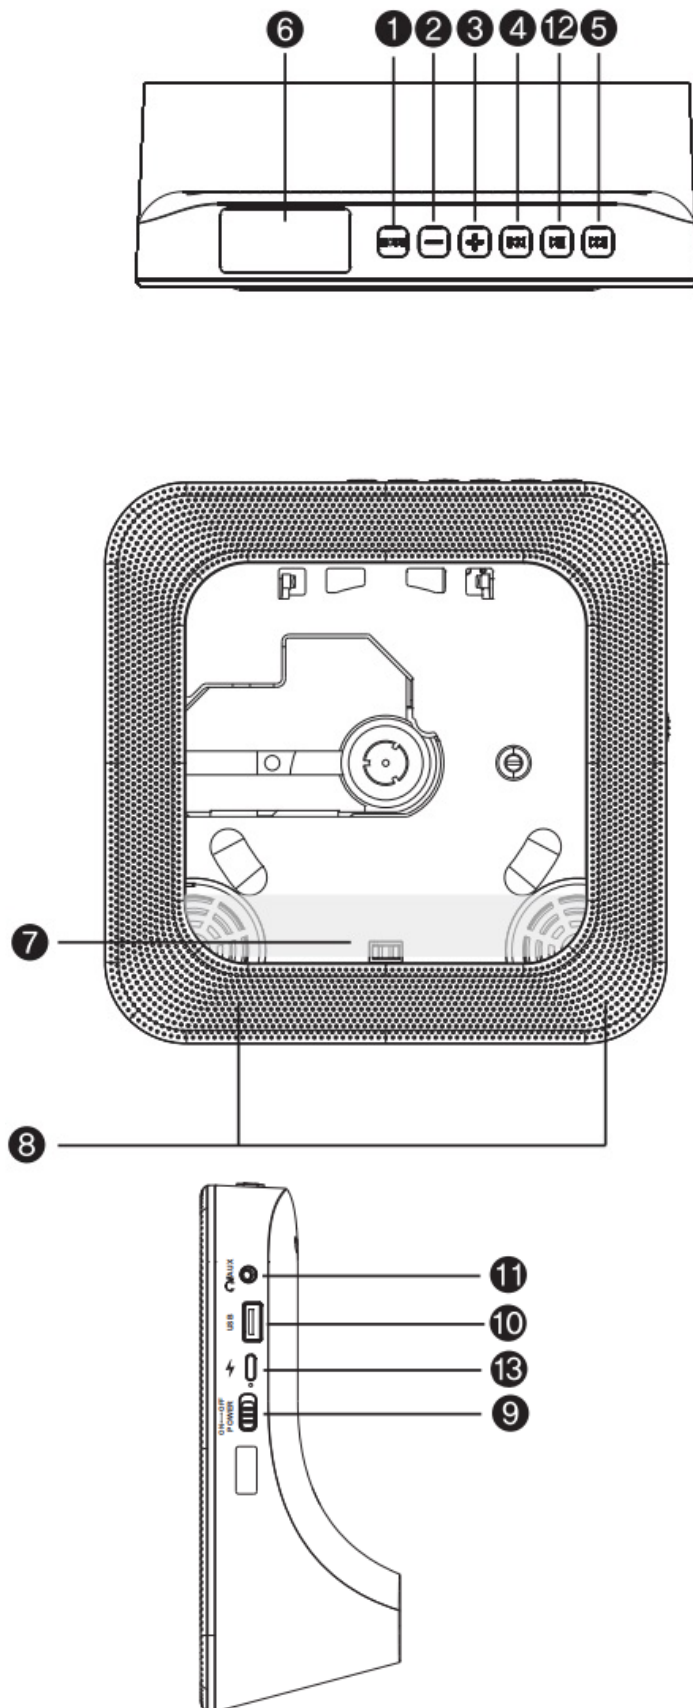

1. Mode switch
2. Volume-
3. Volume+
4. prev
5. Next

6. LED screen
7. CD lid
8. Loudspeaker
9. POWER ON/OFF
10. USB port
11. AUX port
12. Play/Pause
13. DC-5V IN

 REMOTE

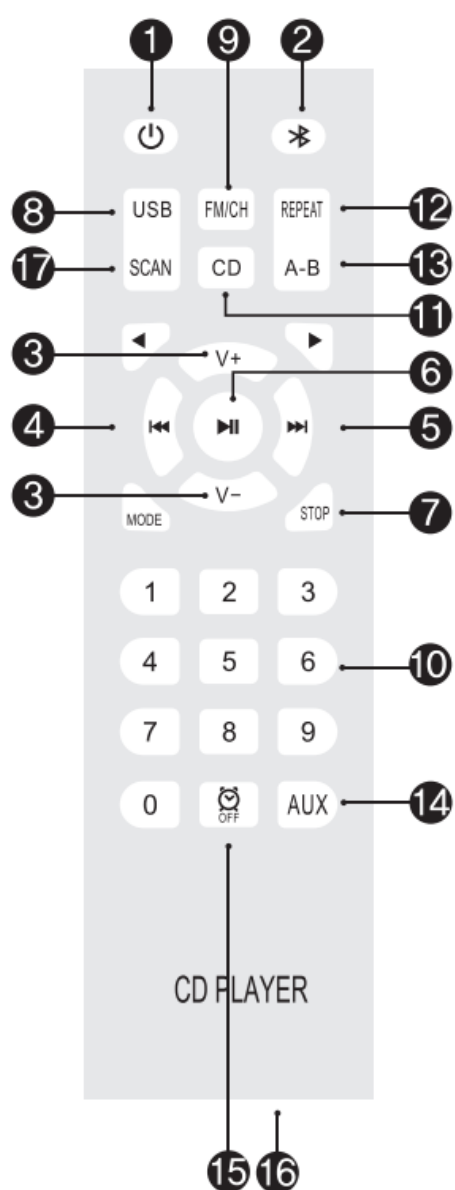

1. ON/OFF
2. Bluetooth mode
3. Volume +/-

4. prev
5. Next
6. Play/Pause
7. Stop playing
8. USB mode
9. FM/Searching
10. Selection digital area
11. CD mode
12. Normal / Repeat One /
13. Repeat All / Shuffle
14. A-B Repeat
15. AUX mode
16. Time / Alarm clock
17. Battery

 
Bluetooth transmission

1. Insert a disc that conforms to the format and short-press the mode switch button to enter the CD mode (default is CD mode) to start playing.
2. Turn on the headset that needs to receive Bluetooth signals, and press and hold the Bluetooth mode button of the remote control for three seconds until the Bluetooth icon player on the CD LED display flashes, and the CD player enters Bluetooth Transfer method.

1. Insert a disc that conforms to the format and short press the mode switch button to enter the CDMode (default is CD mode) to start playing.



2. Turn on the headset that needs to receive Bluetooth signals, and press and hold the Bluetooth mode button of the remote control for three seconds until the Bluetooth icon player on the CD LED display flashes, and the CD player enters Bluetooth Transfer method.

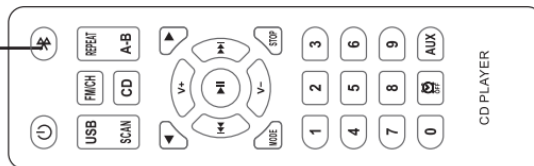

3. When the Bluetooth icon on the LED display of the CD player no longer flashes but is always showing Bluetooth pairing succeeded.



Note: It is best not to turn on other Bluetooth devices within ten meters during pairing. If the pairing is unsuccessful, please check if there are other Bluetooth devices within ten meters. Open.

Basic Operation

1. Plug in the power cable to the USB adaptor.
2. Remove the protection paper CD from the CD Player before powering on, otherwise, the laser could be damaged.
3. Put a CD into the CD Player.
4. Press the ON/OFF button to power on, and then it will play the CD in 5-12s.
5. Press the topside "MODE" button to switch among 5 modes: "CD", "USB", "Bluetooth", "FM" and "AUX".

Power On/Off Instructions

1. Power On

- Press the ON/OFF button to Power on the CD Player, the CD Player will play the CD automatically (the Compact Disk must be inserted to the CD Player before turn on).

2. Power off

- Press the ON/OFF button again to Power off the CD Player. Please do not touch the Compact Disk before turn off the device.

CD Mode Instructions

Press the CD button on the remote to switch to CD mode or switch the “Mode” key (on the device) to CD mode, then the Compact Disk will run automatically and its indicator light color will change to blue, the CD icon will appear on the screen.

Bluetooth Mode Instructions

1. Press Bluetooth button on the remote to switch to Bluetooth mode or switch the “Mode” key (on the device) to the Bluetooth mode, then the CD Player will be ready to pair other Bluetooth devices such as mobile phones, pads etc., and its indicator light color will change to dark blue, the Bluetooth icon will appear on the screen.
2. Activate the Bluetooth in your mobile phone and it will automatically search for nearby Bluetooth devices to pair.
3. Choose the named “co PLAYER” device in your mobile phone Bluetooth device list to pair.
4. Your mobile phone will be paired/connected to the CD Player in a few seconds.
5. Playing music on your mobile phone and the audio will be transmitted to the CD Player speaker through Bluetooth.

FM Mode Instructions

1. Press FM/CH button on the remote to switch to FM mode or switch the “Mode” key (on the device) to the FM mode.
2. Press <Prev> or <Next> button to go to the previous station or next station; or press the digital keys to change to a certain station pre-stored.
3. Press FM/CH button again to search all radio stations and it will automatically store

the first 40 stations if there are such enough stations around; After completed the searching, it will play the first station.

Usb Mode Instructions

1. Plug in a USB drive to the CD Player USB port.
2. Press the USB button on the remote to switch to USB mode or switch the “Mode” key (on the device) to USB mode.
3. The CD Player will read and play the music in the U-disk, and its indicator light color will change to green, the “USB” icon will appear on the screen.

Repeat Function

Press the repeat button on the remote to cycle between playback modes, available playback modes are: “Repeat One”, “Repeat ALL” or “Shuffle play”, will appear “ONE”, “ALL”, “SFL” and “OFF” on the screen.

A-B Repeat Function

The A-B Repeat function enables playback to a specific section repeatedly by setting the start point (A) and end point (B) for the section.

1. Press A-B button on the remote to set the start point (A) while playing, and will appear the “A” on the screen.
2. Press A-B button on the remote to set the end point (B) while playing, and will appear the “B” on the screen.
3. Then the specified section from A to B will be played back repeatedly.
4. Press A-B button again to exit AB repeat, and will appear the “OFF” on the screen.
5. **Note:** A-B Repeat function only works on CD and USB mode.

 
AUX Mode

1. Connect the CD Player to other Audio player devices with the included 3.5mm male-to-male audio cable.
2. Press AUX button on the remote to switch to AUX IN mode or switch the “Mode” key (on the device) to the AUX IN mode, then the audio will be transmitted to the CD

Player speaker, the indicator light color will be green this time and will appear the “LINE” on the screen.

Sleep timer operation

Use the clock key on the remote to set the sleep timer.

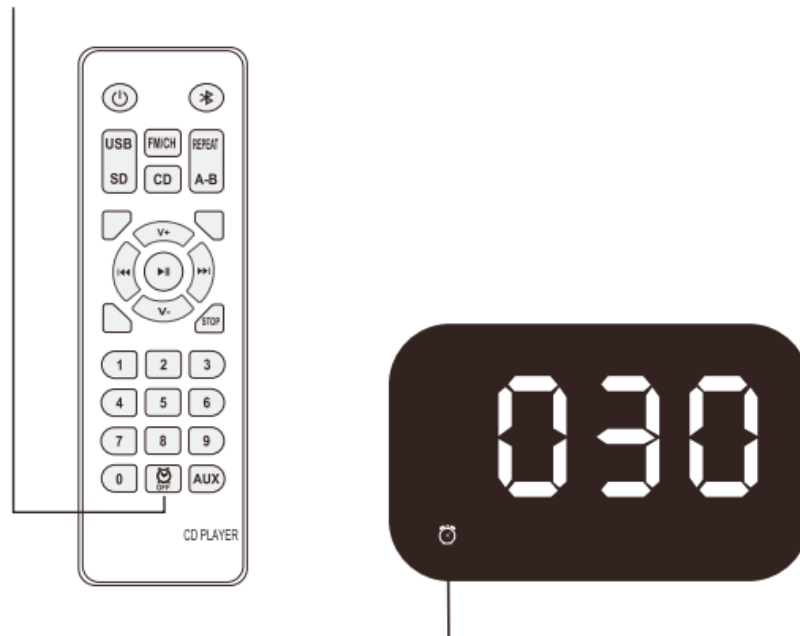

A clock icon comes out on the display while the sleep timer is activated

- Time set range: 30 – 180 minutes.
- The sleep timer is activated by pressing the clock key once and it sets starting with 30 mins
- It adds 30 mins by each press which shows on the display when you are setting, the sleep timer can be set maximum 180 mins.then press one more time to turn off the sleep timer.

Trouble shooting

1. Cannot be turned on.

- **Reason 1:** The Switch is not turned on.
- **Solution 1:** Please check if the pull switch is powered on.
- **Reason 2:** The player is damaged.
- **Solution 2:** Please contact us or ask a professional for repairs.

2. Cannot read discs.

- **Reason 1:** The disc is installed incorrectly.
- **Solution 1:** Make sure the label side of the disc is facing up; Ensure the disc is inserted fully into the place.
- **Reason 2:** The disc cannot be recognized.
- **Solution 2:** The player is only compatible with CD format.
- **Reason 3:** The disc is dirty or damaged.
- **Solution 3:** Make sure the disc is not heavily scratched or damaged; Wipe the disc gently from the center radially out to the edge with a clean & soft cloth; Try another new disc to check if the disc is faulty.
- **Reason 4:** The loader is dirty.
- **Solution 4:** Wipe the laser gently with a degreasing cotton swab. Note: DO NOT TOUCH THE LASER WITH YOUR HANDS.

3. Remote does not work.

- **Reason 1:** The insulation sheet is not removed.
- **Solution 1:** Check if the insulation sheet is removed from the battery slot.
- **Reason 2:** The remote is out of power.
- **Solution 2:** Check if the remote battery is running out.
- **Reason 3:** The remote is too far from the CD player.
- **Solution 3:** Make sure the remote is in the range of a reasonable distance (within 6 meters).

4. Noisy and screaming when it plays.

- **Reason 1:** The Usage time of the disk may be too long, so the disk is not smooth.
- **Solution 1:** Make sure the disc is not heavily scratched or damaged; Wipe the disc gently from the center radically out to the edge with a clean & soft cloth; Try another new disc to check if the disc is faulty.
- **Reason 2:** If there is a “Jiji” sound inside the earphone, it may be caused by the scratching of the disc.
- **Solution 2:** Please change to another disc, and do not use the old one again to prevent the player from damage.

FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device

must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 
FCC Radiation Exposure Statement

The device has been evaluated to meet the general RF exposure requirement. The device can be used in portable exposure conditions without restriction.

FAQs

- **Q: What should I do if the device is not powering on?**
 - A: Check if the power switch is in the ON position and ensure that the device is properly connected to a power source.
- **Q: How can I connect my phone to this device?**
 - A: You can connect your phone using a compatible USB or AUX cable depending on your phone's connectivity options.

Documents / Resources

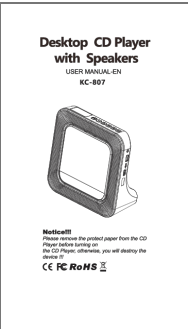	KECAG KC-807 Desktop CD Player with Speakers [pdf] User Manual 2BNCY-KC807, 2BNCYKC807, kc807, KC-807 Desktop CD Player with S peakers, KC-807, Desktop CD Player with Speakers, CD Player with Spea kers, Player with Speakers, Speakers, Player
---	--

References

- [User Manual](#)

KECAG

2BNCY-KC807, 2BNCYKC807, CD Player with Speakers, Desktop CD Player with Speakers, KC-807, KC-807 Desktop CD Player with Speakers, kc807, KECAG, player, Player with Speakers, Speakers

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.