



KEESON RF396C Remote Control User Manual

[Home](#) » [KEESON](#) » KEESON RF396C Remote Control User Manual 

Contents


- [1 KEESON RF396C Remote Control User](#)
- [2 Item](#)
- [3 FCC](#)
- [4 ISED RSS Warning](#)
- [5 ISED RF exposure statement](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

KEESON-logo

LEESON RF396C Remote Control User



	Issue Department Bedding Division	Date	2021-12-11
	System Instruction	Author	
User Manual of RF396C		Edition	1.0
		Page 1 of 5	

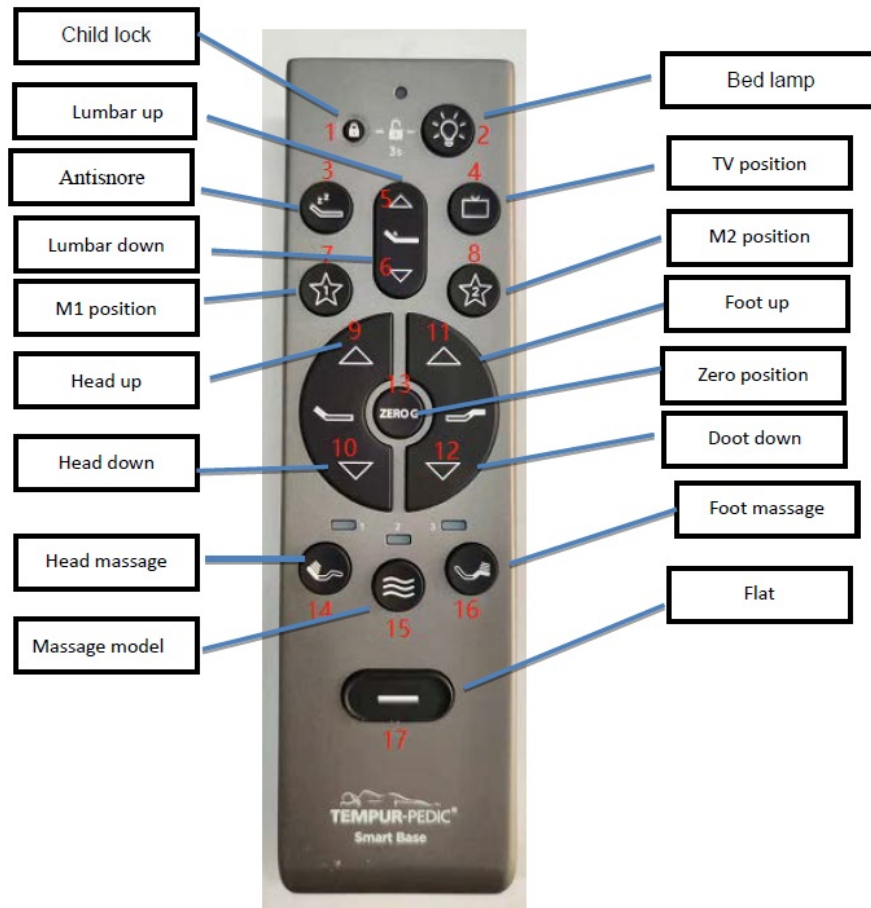

Item

- **Child Lock 1**

Click the Child Lock button for 3 second to lock or unlock the remote.

- **Bed lamp 2**

Click the bed lamp button to open or shut the light under the bed.

- **Antisnore 3**

Click the Antisnore button, the bed moves to Antisnore position, press and hold Antisnore button for 5s, until backlight flashes, the control set the current position as Antisnore position

- **TV 4**

Click the TV button, the bed moves to TV position, press and hold TV button for 5s, until backlight flashes, the control set the current position as TV position.

- **LUMBAR UP 5**

Press and hold the LUMBAR UP button, Lumbar actuator moves out, stop when released.

- **LUMBAR DOWN 6**

Press and hold the LUMBAR DOWN button, Lumbar actuator moves in, stop when released.

- **M1 7**

Click the M1 button, the bed moves to M1 position, press and hold M1 button for 5s until backlight flashes, the control set the current position as M1 position

- **M2 8**

Click the M2 button, the bed moves to M2 position, press and hold M2 button for 5s until backlight flashes, the control set the current position as M2 position

- **HEAD-UP 9**

Press and hold HEAD UP button, head actuator moves out, stop when released.

- **HEAD DOWN 10**

Press and hold HEAD DOWN button, head actuator moves in, stop when released.

- **FOOT UP 11**

Press and hold FOOT UP button, foot actuator moves out, stop when released.

- **FOOT DOWN 12**

Press and hold FOOT DOWN button, foot actuator moves in, stop when released.

- **ZG 13**

Click the ZG button, the bed moves to zeroG position, press and hold zeroG button for 5s until backlight flashes, the control set the current position as zeroG position

- **HEAD MESSAGE 14**

Click the HEAD MESSAGE button, head message motor switches message intensity, message intensity switches among 0-1-2-3

- **MESSAGE model 15**

Click the MESSAGE MODEL button to change the message model.

- **FOOT MESSAGE 16**

Click the FOOT MESSAGE button, foot message motor switches message intensity, message intensity switches among 0-1-2-3

- **FLAT 17**

Click the FLAT button, the bed goes flat.

FCC

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

ISED RSS Warning


This device complies with Innovation, Science and Economic Development Canada licence exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. brouillage est susceptible d'en compromettre le fonctionnement.

ISED RF exposure statement

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirements.

Documents / Resources

KEESON	RF396C Remote Control	Rev. 1.0
Model	RF396C	Part No.
Rev.	1.0	Rev.

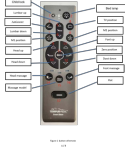

[KEESON RF396C Remote Control](#) [pdf] User Manual

RF396C, 2AK23RF396C, RF396C Remote Control, Remote Control