



Keilton EFSX16YY Fixture Sensor Instructions

[Home](#) » [Keilton](#) » Keilton EFSX16YY Fixture Sensor Instructions 

Keilton EFSX16YY Fixture Sensor Instructions



WARNING: TURN THE POWER OFF AT THE CIRCUIT BREAKER BEFORE INSTALLING THE SENSOR.

Contents


- [1 ELECTRICAL RATINGS:](#)
- [2 INSTALLTION](#)
- [3 FCC Statement](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

ELECTRICAL RATINGS:

Input: voltage:DC12V, current:0.035A,power:0.5w
Oupt: 10V 10mA 0.1W.


Unit:inch/mm

Unit:inch/mm

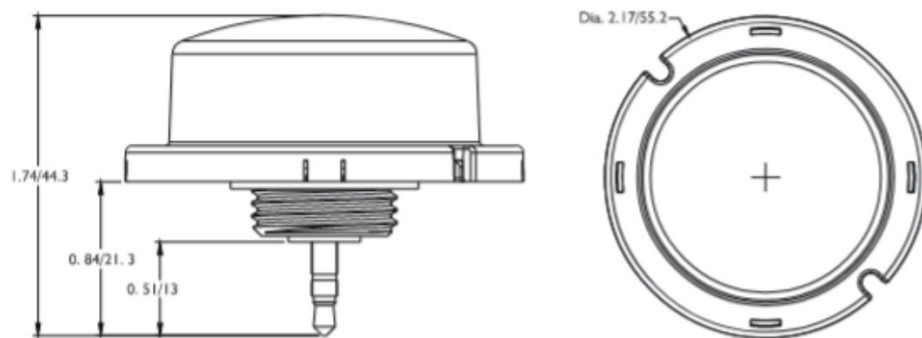

INSTALLTION

1. Install the sensor face down, parallel to the mounting surface. The size of the space that needs to be reserved in the installation of the luminaire: 55•21•11mm space;
2. Please power off before installation 3.The sensor can be fixed by magnets or screws.

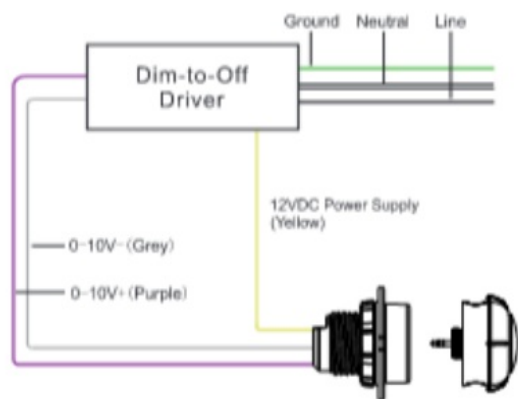

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:


1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try correct the interference by one or more of the following measures:

- Reorient the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into and outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.
The distance between user and products should be no less than 20cm
The EUT is In door use only

Documents / Resources

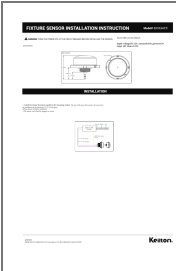	<p>Keilton EFSX16YY Fixture Sensor [pdf] Instructions LTKTVT2022, 2A26YLTCTVT2022, EFSX16YY, Fixture Sensor, EFSX16YY Fixture Sensor</p>
---	--