

K
kelton
kitchenware
**Complete
4-in-1
stackable
non-stick
pan set**



Kelton Complete 4-in-1 stackable non-stick pan set User Guide

[Home](#) » [Kelton](#) » Kelton Complete 4-in-1 stackable non-stick pan set User Guide 

Contents

- [1 Kelton Complete 4-in-1 stackable non-stick pan set](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Important safety instructions](#)
- [5 Before first use](#)
- [6 Clean and care](#)
- [7 Insta release power grip handle](#)
- [8 Slicing set](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)



Kelton Complete 4-in-1 stackable non-stick pan set



Product Information

Specifications:

- **Product:** Kelton Complete Stackable Cookware Set
- **Handle:** Detachable Insta Release Power Grip Handle
- **Coating:** EverNon non-stick coating technology (PFAS, PFOS, PFOA free)
- **Lids:** Air tight lids for food storage
- **Slicing Set:** Lid for 16, 18, and 20cm pots

Product Usage Instructions

Detachable Handle Usage:

1. Attach the Insta Release Power Grip Handle to the rim of the cookware.
2. Grip the lever beneath the handle and squeeze it completely to secure the handle.
3. To detach, press the oval-shaped button on the top side of the handle.
4. Release the lever on the bottom of the handle to detach it.

Important: Always remove the handle from the pans while cooking on the stove or in the oven to prevent damage.

Air Tight Lids Usage:

1. Place the airtight lid on the pot after it has completely cooled down to keep food fresh in the fridge.
2. Do not use airtight lids in the freezer; they are suitable for refrigerator use only.

Important: Check water level regularly during steaming to prevent pot from boiling dry due to water evaporation.

Slicing Set Usage:

1. Securely place the slicing lid on 16, 18, or 20cm pots for slicing.
2. Use hand guard for protection when changing blade thickness.

Important: Do not use the slicing lid on a hot pan; it is only suitable for use on a cool pan.

FAQ:

- **Q: Can I use the cookware in the freezer?**

A: The airtight lids are not suitable for freezer use. Avoid placing the cookware in the freezer.

- **Q: How should I clean the detachable handle?**

A: Wash the handle by hand to maintain its stability and usability for a longer period.

- **Q: Can I use metal utensils with the cookware?**

A: It is recommended to use non-metal utensils to avoid damaging the non-stick coating.

Congratulations with your purchase of the Kelton Complete Stackable Cookware set. With its innovative detachable handle, you can efficiently organize your kitchen space while still having all the cookware you need. Our removable handle provides ultimate flexibility, allowing you to easily move your cookware from stove to oven to table to fridge with ease. Our unique, non-stick EverNon coating technology is free from harmful chemicals like PFAS, PFOS and PFOA, ensuring a safe and long-lasting cookware experience.

Important safety instructions

- Read the instructions carefully before use.
- Ensure that the pans are never left unattended on the stove, or used near children.
- Never leave the cookware empty on a hot burner. This could ruin the pan and cause damage to your stove top.
- Be careful with handling hot pans to avoid injury.
- Always remove the Power Grip handle from the pan during cooking.

Before first use

- Remove all packaging and labels, and clean pans in hot, soapy water. Then rinse and dry thoroughly.
- Rub the inside of the pan with a little oil upon first use. Repeat this process from time to time.
- Safe for use on gas, electric, ceramic and induction cooktops.
- Ensure the pan always matches or exceeds the size of the cooking surface. When using a gas stove, adjust the flame to prevent it from flaring over the edges of the pan.
- The cookware is temperature-resistant, up to 250 °C. Never overheat the pans.
- Always cook on medium or low heat.
- The Kelton Complete Cookware heats up quickly. Due to its rapid and even heat distribution, cooking at high temperatures is not advised. Best results are achieved with moderate heat settings.
- Preheat the pan for 2 to 3 minutes using a medium heat setting. The food should sizzle when placed in the pan. DO NOT rush the preheating process by using high heat.
- All pans are oven-safe up to 250 °C except the large cooking pot. The large cooking pot (with fixed handles), handle and lids cannot be used in the oven.
- Do not allow oil to burn in the pan.
- Use only silicone, plastic or wooden utensils. Never cut food in the pan, using sharp, hard objects.

Clean and care


- Always use a clean pan when you begin cooking. Make sure that all cooking residues are removed before

storing the pan.

- Kelton Cookware is dishwasher safe, but to extend the life of the cookware, we recommend hand washing only. Cleaning in a dishwasher may lead to a reduction in the non-stick properties caused by aggressive detergents.
- Always allow the pans to cool before cleaning, as large heat variations can cause permanent deformation. Never immerse a hot pan in cold water.
- For cleaning, use hot water and a non-abrasive sponge or soft nylon brush. Do not use steel wool or scouring pads!
- Do not use harsh or abrasive cleaners to remove grease and food residues from the pan's non-stick coating.
- Should dark deposits form on the coating due to high temperatures, do not remove them with a scouring pad or sharp-edged objects, but rather soak the pan in hot water and remove the deposits carefully and gently with a soft nylon brush or a soft cloth.
- Food residues that are not removed can, with further use, lead to discolorations, which can hurt the non-stick surface. Therefore, the surface should always be cleaned very carefully.
- Always use a pan protector between cookware when nesting.

Insta release power grip handle

The Insta Release Power Grip Handle provides excellent grip when attached onto the cookware. Attach the handle to the rim of the cookware, then grip the lever located beneath the handle and squeeze it completely. To detach, press the oval shaped button on the top side of the handle.

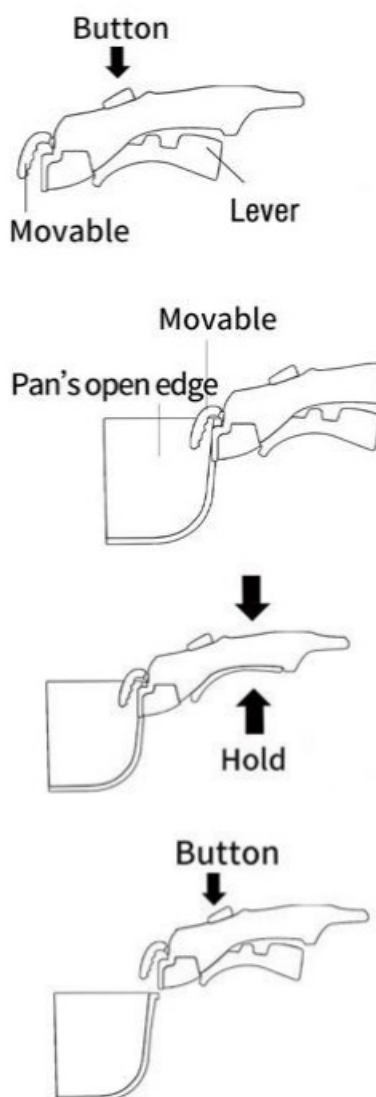

After pressing the button, release the lever on the bottom of the handle. The handle will detach when the lever is fully released.

Important: Always remove the handle from the pans while cooking on the stove and in the oven. The handle or the outer coating may be damaged because of the heat.

Caution: Never press on the unlocking button while handling the pan. Keep the lever closed with your fingers. Wash the handle by hand. When the handle becomes unstable, stop using it at replace it.

Air tight lids

The air tight lids are the perfect way to keep your food fresh when storing leftovers in your fridge. The airtight lids are not heat-resistant. Place the airtight lid on the pot once the pot has completely cooled down. The air tight lids are safe to use in the fridge, but not suitable to use in the freezer. We recommend hand washing the lids.

Cooking pot with build in strainer

The strainer can be used to wash and rinse your food the easy way. To use the strainer for cooking, hang the strainer in the pins and place the food in the basket. Keep the food under water while cooking. When you're ready to drain, take the pot by its handles, turn upside down and pour off the cooking water and flip back. For steaming, add water to the bottom of the pot, just below the bottom side of the basket, place the basket on the pins, allow the water on the bottom of the pot to cook and steam your food.


Important: ensure the pot does not boil dry due to water evaporation! Check the water level regularly during steaming and add water if necessary!

Slicing set

The slicing lid is designed to fit securely on the 16, 18 and 20cm pots. Place the blade of your choice to change the thickness or style of cut. Always use the hand guard to protect your fingers from cuts. The slicing lid is not heat resistant. Only use the lid on a cool pan. It's not suitable to use on a hot pan while cooking.

Distribution: Your Products BV De Langkamp 6 3961 MS Wijk bij Duurstede The Netherlands
www.keltonkitchenware.com

Documents / Resources

 <p>Kelton Complete Stackable Cookware</p> <p>User Guide Gebruiksaanwijzing</p>	<p>Kelton Complete 4-in-1 stackable non-stick pan set [pdf] User Guide</p> <p>Complete 4-in-1 stackable non-stick pan set, Complete, 4-in-1 stackable non-stick pan set, stackable non-stick pan set, non-stick pan set, pan set, set</p>
--	---

References

- [TransIP - Reserved domain](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.