



## Kenmore 127.96050610 Oscillating Fan Heater User Guide

[Home](#) » [Kenmore](#) » Kenmore 127.96050610 Oscillating Fan Heater User Guide 



Oscillating Fan Heater®



Model/Modelo: 127.96050610  
**Use & Care Guide**

## Contents

- 1 BEFORE USING YOUR NEW HEATER
- 2 IMPORTANT SAFETY INSTRUCTIONS
- 3 PARTS AND FEATURES
- 4 OPERATING INSTRUCTIONS
- 5 CARE AND MAINTENANCE
- 6 IKENMORE LIMITED WARRANTY
- 7 Documents / Resources

## BEFORE USING YOUR NEW HEATER

Please read this guide. It will help you to operate your new Kenmore Heater in the safest and most effective way. Keep this book and your sales check (receipt) in a safe place for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

Read all instructions in this guide before using your Heater.

This product is intended for indoor residential, office and personal shop use only, not for industrial or other commercial applications. Use only with electrical wiring that is in good working order and that meets applicable codes and ordinances.

If you have any questions whether your wiring is adequate, consult a qualified electrician.

While using your Heater, you should follow the IMPORTANT SAFETY INSTRUCTIONS listed below. As part of

those instructions, we have used the word  **WARNING** “ to indicate the level of hazard:  **WARNING:** indicates a hazard which, if not avoided, could result in injury or death.

## IMPORTANT INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using this Heater.
2. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause electrical shock, fire, or injury to persons.
3. Do not operate the heater with a damaged power cord or after the heater malfunctions or has been dropped in any manner.
4. Do not use heater unattended. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Do not place the heater on a small, unlevel, uneven or any surface which might allow Heater to tip or fall.
6. For proper operation, the heater should be placed on a smooth, non combustible surface.
7. Always unplug the heater when not in use.
8. Do not operate heater with blade guards or any safety device remove.
9. Do not run power cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over.
10. Avoid the use of extension cords due to risk of fire. If an extension cord must be used, the cord must be a minimum 14AWG and rated not less than 1875 watts.
11. Do not insert or allow any object to enter any openings on the heater. Doing so may cause electric shock and

/or fire hazard.

12. This product is intended for indoor residential, office and personal shop use only, not for industrial or other commercial applications. This warranty is void if this product is ever used for other than private household purposes.



**WARNING: SHOCK HAZARD**

Use your heater only in dry environments. This heater is not intended for use in bathroom, laundry area, or similar locations, or near sinks, washing machines, swimming pools or other sources of water. Never locate heater where it may fall into a bathtub or other water container. Do not use heater outdoors. Do not use in damp environments such as flooded basements.



**WARNING: HOT SURFACES**

Do not touch body of heater when in use. This heater is hot when in use, to avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater.



**WARNING: FIRE HAZARD**

Heater has hot and arcing or sparking parts inside. Do not use near combustible materials or flammable gases or sources of heat. DO NOT USE in areas where gasoline, paint or flammable materials are used or stored. Keep combustible materials such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked. Do not place the heater near a bed because objects such as pillows or blankets can fall off the bed and be ignited by the heater. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage the heater.

**SAVE THESE INSTRUCTIONS!**



**WARNING: ELECTRICAL SHOCK HAZARD**

Do not use with damaged cord or plug. Use with adequate electrical system that is up to code. The supply cord has a polarized plug. As a safety feature this plug will fit in a polarized outlet only one way. To prevent electric shock, match wide blade of plug to wide slot, fully insert plug. If the plug does not fit contact a qualified electrician. Never use an extension cord. DO NOT attempt to defeat this safety feature. Do not operate any heater with a damaged cord or plug or after heater malfunctions, has been dropped or damaged in any manner. Do not operate heater with a broken heating element or ceramic cone or any visual imperfections. For all repairs contact a qualified service dealer. Do not operate heater with its ventilation obstructed.

**PET OWNERS NOTE**


The health of birds and some small pets are extremely sensitive to the fumes given off during the initial use of many appliances. Although these fumes are not harmful to humans, it is recommended that this heater not be used around birds and small pets during its initial use until the manufacturing corrosion coatings burn off.

## **PARTS AND FEATURES**

It is important to know your heater's parts and features to ensure its proper and safe use. Review these before using your heater.

### **OSCILLATING FAN HEATER**

 Fig. 1

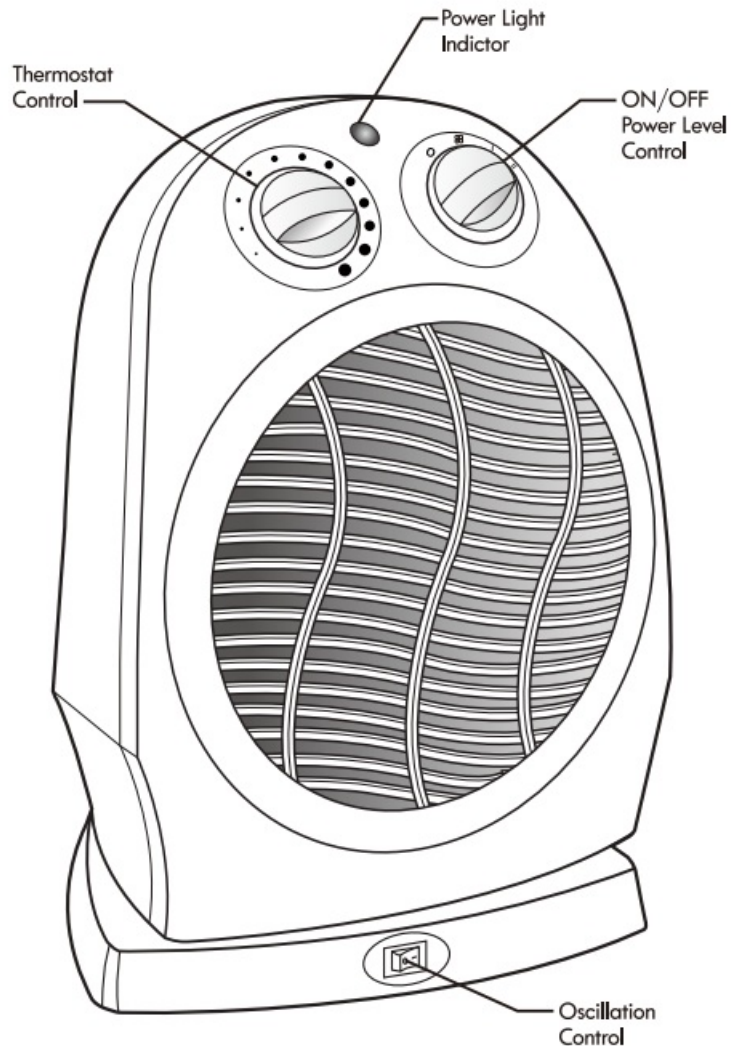

## OPERATING INSTRUCTIONS

### HEATER OPERATION

Always operate the heater in the upright position following all instructions and recommendations listed in this manual.

#### HEATER LOCATION

Place the heater in the area of the room that is coldest.

 
#### HEATER CONNECTION

Plug heater directly into 120 volt A.C. 60 Hz outlet. Be sure the plug fits tightly in outlet. A loose connection may cause overheating and damage to the plug or heater.

**NOTE:** To prevent overloading a circuit, do not plug the heater into a circuit that is servicing other electrical needs.

### TURNING THE HEATER ON

To start the heater, turn the On/Off Power Level Control from the OFF position "O" to the "I" or "II" setting. Then rotate the Thermostat Control clockwise to the largest "e" position. (During initial heater use, you may experience a slight odor or smoking. This is the result of the heating element lubrication "burning off". This is normal and will go away after a few minutes of use.)

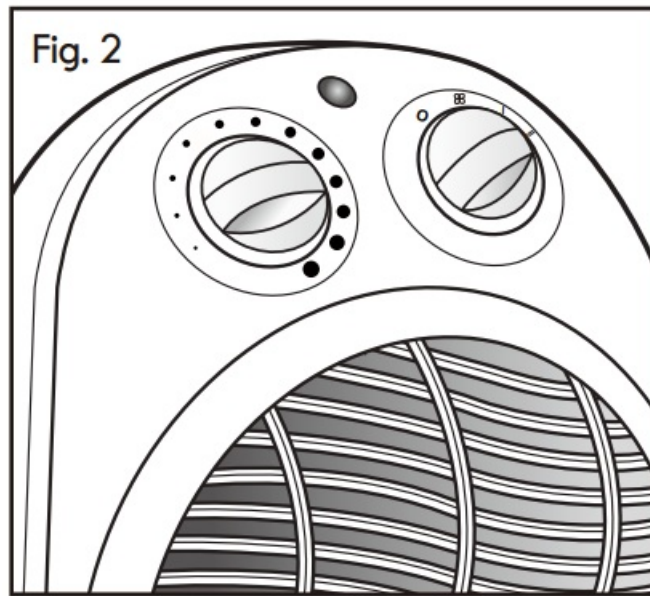

### **POWER LEVEL CONTROL**

This heater has two heat settings: HIGH “II” and LOW “I”. Use the higher setting (1500 watt) to raise the room temperature quickly. When the desired temperature is reached turn the control to the LOW “I” setting (750 watt). It is usually sufficient to maintain a comfortable temperature.

### **SETTING THERMOSTAT**

After heater has been turned on and the area has reached the desired temperature, slowly rotate the Thermostat Control counterclockwise from the largest “ ” until the heater shuts off (you should hear a faint “click”) By leaving the thermostat at this setting it will automatically maintain this temperature. To maintain a lower temperature, rotate the control further counterclockwise. To maintain a higher temperature, rotate the control clockwise.

### **TURNING OFF**

To discontinue use, turn the Power Switch to the O position. Always turn the heater OFF before unplugging or plugging in the heater. Heater should be unplugged when not in use.

### **OSCILLATION CONTROL**

You can control the Oscillation feature on the Fan Heater by moving the Oscillation switch located on the heater base to the “-” or “O” position. In the “-” setting the heater body will swing slowly back and forth.

### **TO OPERATE FAN ONLY**

Turn the On/Off Power Level Control dial to the Fan “88” setting. Turn thermostat control fully clockwise to MAX position so that the fan will run continuously. Oscillation will function while in fan mode.

### **IMPORTANT SAFETY FEATURES**

The power indicator light, located above the control panel, lights whenever the heater/ fan is plugged in to tell you that the heater has power. The heater is equipped with an automatic overheat protection device located inside the body of the heater. If the heater grill is obstructed, or if the heater gets too hot for any reason, the automatic overheat protection device will turn the heater off. To reset the unit, turn the ON/OFF Power Level Control to “O” and unplug the heater. Wait for 10 minutes for the heater to cool down. Plug the heater back in and turn the ON/OFF Power Level Control to an operating position. To prevent further automatic shut-off, locate the heater with the air inlet grill (back of heater) spaced far enough away from a wall or other object to allow for sufficient airflow. Always place the heater on a smooth level surface. The heater is also equipped with a safety tip-over switch to turn power off to the heater when the heater tips over. To resume heater functions simply stand heater upright. With tip over protection, the heater will only operate when placed upright on a level surface.

## **CARE AND MAINTENANCE**

### **CLEANING**



**CAUTION:** Before cleaning the heater be sure to disconnect power cord and allow the heater to cool completely.

The heater should be cleaned at least once a year to maintain proper performance.

Clean the outside surface with a damp cloth. Allow heater to dry completely before use. Do not use harsh

chemical or abrasive cleaners.

**WARNING:** To prevent personal injury or heater malfunction, NEVER immerse the heater in water.



**CAUTION:** Do not operate the heater without the grill in place. Do not use the heater if it has malfunctioned or become damaged in any way.

#### **REPAIR**

Do not attempt to open the heater to clean or otherwise service the inside. If the heater does not function normally, call the following customer assistance number or arrange for possible heater service and repair: 1-866-877-1889

#### **STORAGE**

Keep original carton for storage of the Fan Heater. Coil and tie the power cord to avoid damage during storage.

### **IKENMORE LIMITED WARRANTY**

FOR ONE YEAR from the date of sale this product is warranted against defects in material or workmanship. WITH PROOF OF SALE, return a defective product to the retailer from which it was purchased for free replacement.

This warranty is void if this product is ever used for other than private household purposes.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Sears Brands Management Corporation, Hoffman Estates, IL 60179



**Customer Assistance**

1-866-877-1889

Sears Brands Management Corporation

 
Hoffman Estates, IL 60179 U.S.A.

[www.kenmore.com](http://www.kenmore.com)

[www.sears.com](http://www.sears.com)

P/N CZ50SRMAN

### **Documents / Resources**



[Kenmore 127.96050610 Oscillating Fan Heater](#) [pdf] User Guide

KNM-EB65004\_iom.pdf v 1645835868417, Markup\_06-07-16\_127 96050610, 127.96050610, 127.96050610 Oscillating Fan Heater, Oscillating Fan Heater, Fan Heater, Heater