



 
Kenmore Top Loading Washing Machine Control Panel And Feature User Manual

[Home](#) » [Kenmore](#) » Kenmore Top Loading Washing Machine Control Panel And Feature User Manual 

Contents

- [1 QUICK REFERENCE GUIDE KENMORE TOP LOADING WASHING MACHINE](#)
 - [1.1 WARNING](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)

QUICK REFERENCE GUIDE KENMORE TOP LOADING WASHING MACHINE CONTROL PANEL AND FEATURE

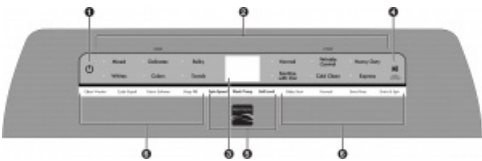

Appearance may vary depending on the model.

1. POWER

Touch to turn on/off or to stop/cancel a cycle.

2. LOAD/CYCLE

“First select a load type from the “Load” section and then select the cycle from the “Cycle” section to get the best combination cycle available for the type of items you are going to wash. See “Cycle Guide” for cycle details.”

3. LCD TIME/STATUS DISPLAY

The display shows the time required for the cycle to complete.

Factors such as load size and water pressure may affect the time shown in the display. Tightly packed loads, unbalanced loads, or excessive suds may cause the washer to adjust the cycle time as well.

If you have set a delay start to the cycle, the display will show the delay time adjusted.

ADD GARMENT

When Add Garment is lit, you may pause the cycle, open the lid, and add items. Touch and hold the START/PAUSE button to start the cycle again.

4. START/PAUSE

Touch and hold the START/PAUSE to start cycle. Touch during a cycle to pause cycle and unlock lid.

NOTE: If machine is spinning it may take longer to unlock lid.

5. CYCLE MODIFIERS (Not all modifiers are available on all cycles)

SPIN SPEED

Touch to modify the cycle's available spin speeds (Off, Medium, Fast).

WASH TEMP

Touch to modify the cycle's available water temperatures (Tap Cold, Cold, Cool, Warm, Hot).

SOIL LEVEL

Touch to modify the cycle's available soil levels. Increase soil level for heavily soiled items and decrease soil level for lightly soiled items (Extra Light, Light, Normal, Heavy, Extra Heavy).

6. CYCLE OPTIONS (Not all options are available on all cycles)

CLEAN WASHER

This washer has a special cycle that uses higher water volumes in combination with affresh® Washer Cleaner or liquid chlorine bleach to clean the inside of the washer.

CYCLE SIGNAL

Touch to turn the end of cycle signal on/off and adjust the tone volume when a button is touched.

FABRIC SOFTENER

Touch "Fabric Softener" button twice to let the machine know when you have added fabric softener to the appropriate dispenser.

DEEP FILL

Touch "Deep Water" button to add more water to the washer from the cycle's auto sensed level (Auto, Medium, High, Max Fill).

NOTE: Expect longer cycle times due to extended fill times when using the Deep Water option.

DELAY START

Touch to delay the start of the wash cycle for up to 12 hours.

PREWASH

Touch to add a prewash period to any cycle to help loosen tough stains. The washer will fill, pause to soak, and then begin the selected cycle (15 mins, 30 mins, 60 mins, 120 mins).

EXTRA RINSE

Touch to automatically add a second rinse available on most cycles.

DRAIN AND SPIN

This cycle uses a spin to shorten drying times for heavy fabrics or special-care items washed by hand. Use this cycle to drain washer after canceling a cycle or completing a cycle after a power failure.

NOTE: Touch EXTRA RINSE button after selecting the Drain & Spin to change this cycle into a Rinse & Spin. A Rinse & Spin cycle combines a rinse and spin for loads requiring an additional rinse cycle or to complete a load

after power interruption. Also use for loads that require rinsing only.

W11445526A

USING YOUR WASHER



WARNING



Fire Hazard

Never place items in the washer that are dampened with gasoline or other flammable fluids.

No washer can completely remove oil.

Do not dry anything that has ever had any type of oil on it (including cooking oils).

Doing so can result in death, explosion, or fire.

1. SORT & LOAD LAUNDRY


See Loading Recommendation section below.

2. ADD HE DETERGENT & LAUNDRY PRODUCTS TO DISPENSERS*



Dispenser Drawer

Remove inside tray for powder HE detergent.

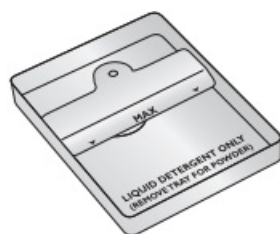

Follow manufacturer's instructions to determine amount of laundry products to use.




3. TOUCH POWER TO TURN ON THE WASHER




4. SELECT THE DESIRED CYCLE FOR YOUR LOAD*



5. ADJUST CYCLE SETTINGS, IF DESIRED*

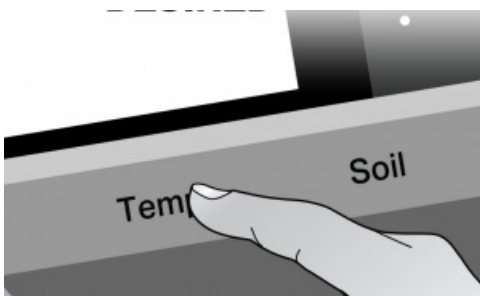

6. SELECT ADDITIONAL OPTIONS*

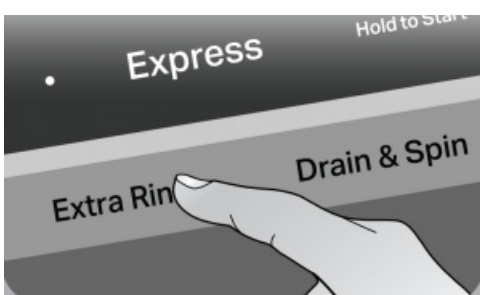


7. TOUCH AND HOLD START/PAUSE TO BEGIN CYCLE




***NOTE:** Not all cycles, settings or options are available with all models.

LOADING RECOMMENDATION

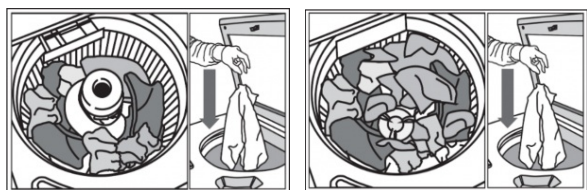

For best performance, it is recommended to load items by dropping them in loose heaps evenly around the washplate and agitator. Do not lay items length-wise around the washplate or agitator.

RINSING BEFORE RUNNING A WASH CYCLE

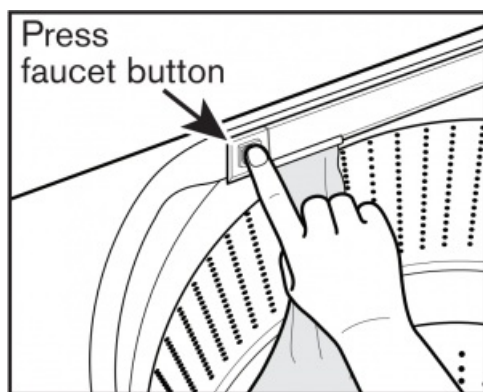


Press faucet button

Water Faucet Operation

- Press the faucet button once to turn on and press again to turn off.
- Faucet will automatically shut off after 10 minutes or when max water level is reached.
- Water will automatically drain if water level becomes too high or if the lid is left open for 10 minutes.

MORE WATER WHEN YOU WANT IT

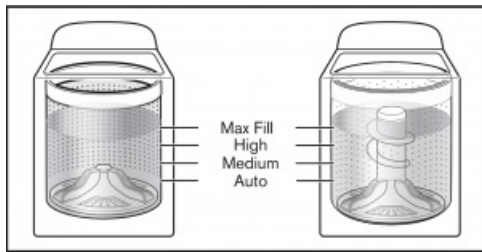

Max Fill, High, Medium, Auto

Auto Sensing & Deep Water Wash

- The washer will adjust the water level to the optimal amount for a High Efficiency wash of the detected load size.
- Touch “DEEP FILL” to add more water to the wash load.
- There are four levels of deep fill “Auto”, “Medium”, “High”, “Max Fill”.
- Not all levels are available on all cycles.
- The washer dampens and moves the load, the level of the items will settle in the basket. This is normal, and does not indicate that more items should be added.

IMPORTANT: You will not see a washer basket full of water as with your past agitator-style washer. It is normal for some of the load to be above the water line.

2

CYCLE GUIDE

Your Kenmore washer has a unique user interface to help you select the best cycle you need for your load. The “Load”, “Cycle” layout guides you to the optimal cycle in two easy steps:

First determine what items are in the load that you are trying to wash. Use that to guide your “Load” selection. Then determine how you want the washer to wash them and select the appropriate “Cycle” selection. See chart below for more details.

For best fabric care, choose the cycle that best fits the load being washed.

R – Recommended Cycle

a – Alternate Cycle

Blank – Cycle is available but not optimal

		How do you want to wash?					
		Cycle Selection					
		Normal	Wrinkle Control	Heavy Duty	Sanitize with Oxi	Cold Clean	Express
		Energy Conscious	Reduce Wrinkles	Powerful Soil Removal	Eliminate Bacteria*	Energy Saving	Fast
What do you want to wash?	“Load” Cycle Selection						
Cottons/Linens		R	a	a	a	a	a

Mixed	Mixed	R	a	a	a	a	a
Pajamas		R	a	a	a	a	a
Sweatshirts		R	a	a	a	a	a
T-Shirts		R	a	a	a	a	a
Athletic Wear	Colors	R	a	a	a	a	
Bright Colors		R	a	a	a	a	a
Business Casual		a	R	a	a	a	a
Casuals		a	R	a	a	a	a
Dark Colors		R	a	a	a	a	a
Dress Shirts/Pan ts		a	R	a	a	a	a
Jeans		R	a	a	a	a	a
No-Iron Fabrics		a	R	a	a	a	a
Baby Clothes	Whites	R	a	a	a		
Handkerchiefs		R	a	a	a		a
Napkins		R	a	a	a		a
Socks		R	a	a	a		a
Tablecloth		R	a	a	a	a	a
Undergarments		R	a	a	a	a	a
White Clothing		R	a	a	a		a
White Shirts		R	a	a	a		a
White Towels		R	a	a	a		a
White T-Shirts		R	a	a	a		a
Bras	Delicates	R	a	a	a	a	a
Delicates		R	a	a	a	a	a
Handwash Fabri cs		R	a	a	a	a	a
Lingerie		R	a	a	a	a	a
Machine Wash S ilks		R	a	a	a	a	a
Wool		R	a	a	a	a	a
Blankets		R	a	a	a	a	a
Coats & Jackets		R	a	a	a	a	a
Comforters		R	a	a	a		a

Machine Wash Curtains	Bulky Items	R	a	a	a	a	a
Machine Wash Slip Covers		R	a	a	a		a
Non-Rubber Lined Rugs & Mats		R	a	a	a		a
Sheets		R	a	a	a		a
Sleeping Bags		R	a	a	a		a
Dish Cloths	Towels	R	a	a	a		a
Terry Cloths		R	a	a	a		a
Towels		R	a	a	a		a

*Use this cycle to eliminate 99.9% of bacteria when used in conjunction with Oxi additives. Preset cycle settings must be used to achieve proper sanitization. Be sure to add an Oxi product to the basket before starting cycle.

WASHER ICONS

















Image	Description	Status
	Door Locked	Alert State
	Delay Start	On
	PreSoak	On
	Deep Water	On – Auto
		On – Auto Medium
		On – Auto High
		On – Max Fill
	Fabric Softener	On
	Extra Rinse	On
	Fabric Softener	Off

Image	Description	Status
	Extra Rinse	Off
	PreSoak	Off
	Favorite Cycle	
	Cycle Signal	Off
		Low
		Medium
		High
	Clean Washer	
	Faucet	On
		Off

NOTE: Not all features and options are available on all models.

ASSISTANCE OR SERVICE AND ADDITIONAL INFORMATION

For detailed installation instructions and maintenance information, winter storage and transportation, please see the INSTALLATION AND CARE INSTRUCTIONS MANUAL included with your machine.

For information on any of the following items or if you have additional questions, call our Customer Care Hotline at **1-844-553-6667**.

 
REGISTER PRODUCT SCHEDULE SERVICE



HOW TO'S & FAQ MANUALS & DOWNLOADS



ADD SERVICE PLAN PARTS ACCESSORIES

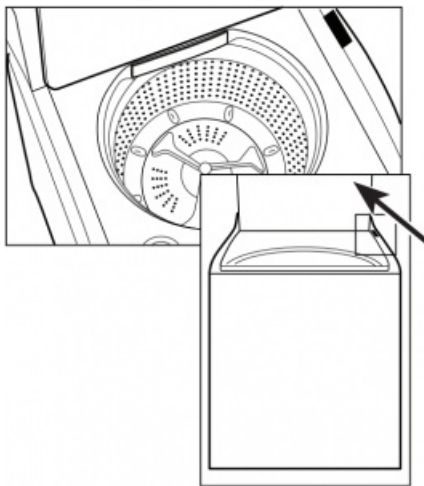

Model & Serial Number Tag location

NOTES

W11445526A ®/TM ©2020 All rights reserved. 03/20

Documents / Resources

	<p>Kenmore Top Loading Washing Machine Control Panel And Feature [pdf] User Manual Top Loading Washing Machine Control Panel And Feature</p>
--	--

