



KENWOOD DMX129BT Navigation Multimedia Receiver User Guide

[Home](#) » [KENWOOD](#) » KENWOOD DMX129BT Navigation Multimedia Receiver User Guide 

KENWOOD 2023 NAVIGATION/MULTIMEDIA Receiver Firmware Update Guide

Contents

- [1 Introduction](#)
- [2 Target Model and Firmware Version](#)
- [3 Work Flow](#)
- [4 Creating the Update Media](#)
- [5 Checking the Firmware Version](#)
- [6 Updating the Program](#)
- [7 Precautions](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)

Introduction

- This document describes the procedure and precautions for upgrading the 2023 NAVIGATION/MULTIMEDIA receiver firmware.
- If an error occurs while you are updating the firmware, the 2023 NAVIGATION/ MULTIMEDIA receiver may become unusable. Be sure to read the following procedure and precautions carefully before updating the firmware.

Target Model and Firmware Version

The updater can be used for the firmware versions of the models shown below.

Target models	Target firmware versions → Updated versions
DMX129BT, DMX129DAB, DMX1029BT	2407**000* or earlier → MPEG: 2408150001 MCU: 2408131291N BT: 2407240002



- For how to check your firmware version, refer to “Checking the Firmware Version”.

Work Flow

Step 1. Download the firmware files, and copy them to USB memory.

 
Step 2. Update the firmware. (It takes about 5 minutes.)

Step 3. Check that the firmware has been updated.

Creating the Update Media

Create the update media on your PC.

1. Download the Updates from the Web site.
2. Decompress the downloaded file.
3. Copy the decompressed file to the top of hierarchy in USB memory.

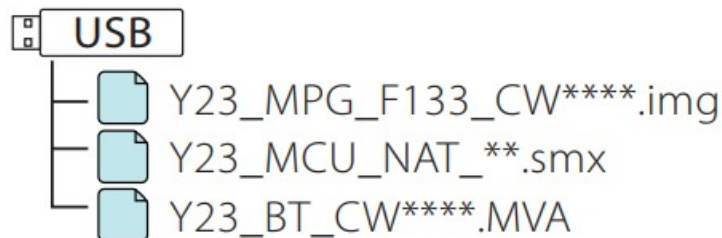

Caution

- For updating, use a USB memory device with the specifications shown below. Updating is not possible on USB memory devices with other specifications.

USB Standard: USB 2.0

Capacity: 8 GB to 32 GB

File system: FAT 32

 


- Do not copy the updater to a device containing audio files. Blank USB memory is highly recommended.
- Update cannot be performed if it is copied inside a folder.


- If the updater file name is changed, update cannot be performed.

Checking the Firmware Version


1. Press the <HOME> button.

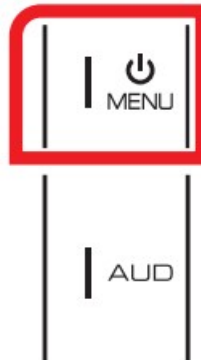

 2. Touch [⚙️].

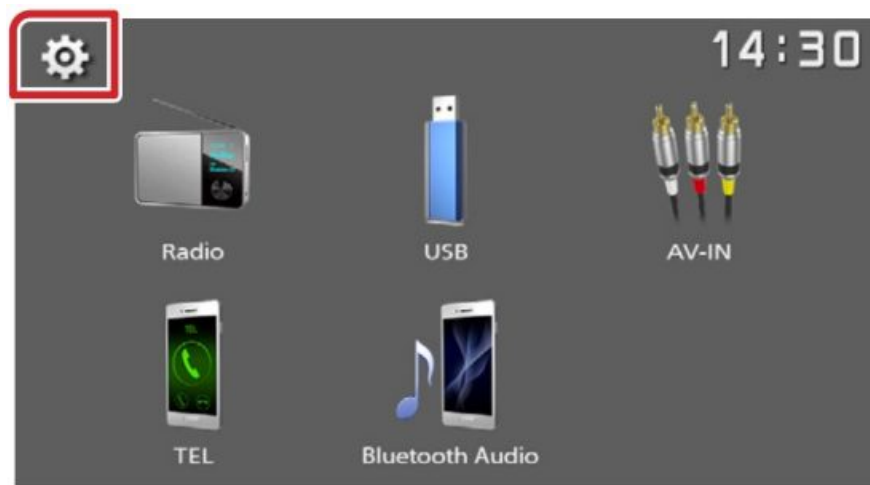

 
3. Touch [Information].

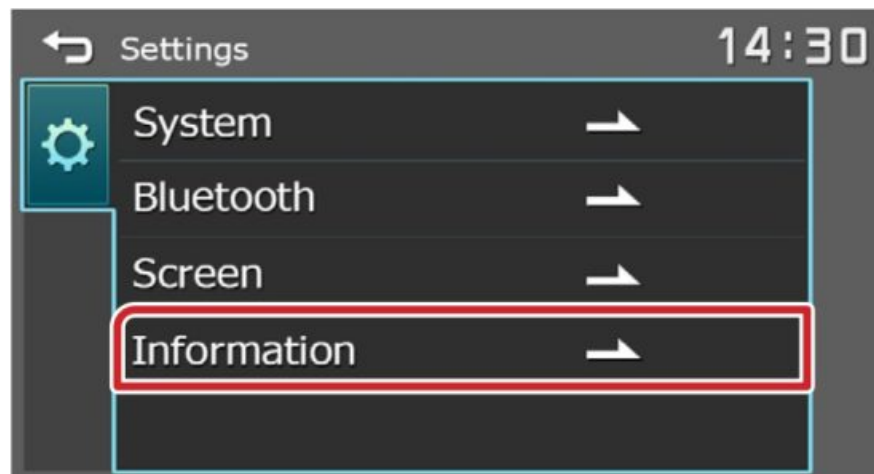

4. Check the version.

Updating the Program

 1. Connect the USB memory.
The confirmation message appears.
2. Touch [Yes] to update starts. (It takes about 5 minutes.)

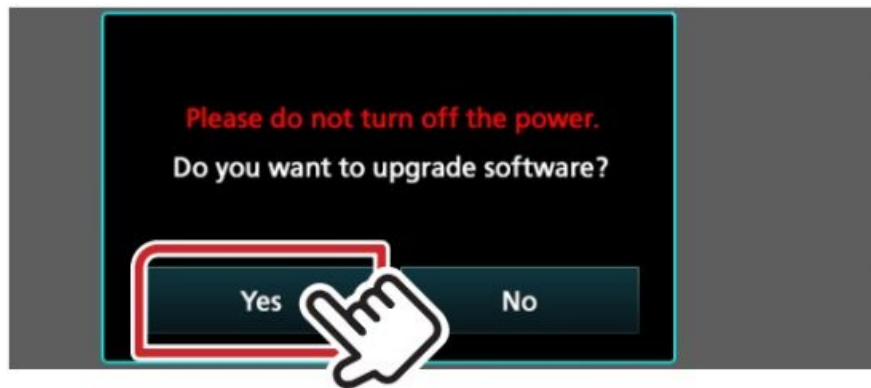

Caution: The screen may go blank for a few seconds.

Please wait for a minutes, even if the updating seems stop. Do not unplug the USB memory or Power Off the unit during the Update Procedure.

 
3. Once complete the updating, System Reboot.
4. Remove the USB memory.
5. Check that the firmware version is updated, by referring to “Checking the Firmware Version”.

Precautions

- Be sure to park the vehicle in a safe place before updating. Keep the engine running in order to prevent battery from running out.
- Do not turn off the engine or Navigation/Multimedia receiver power while updating. Update cannot be performed correctly and the Navigation/ Multimedia receiver may become unusable.

23DMXs_FWupdate_en
KENWOOD

Documents / Resources

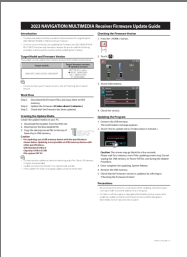	<p>KENWOOD DMX129BT Navigation Multimedia Receiver [pdf] User Guide DMX129BT, DMX129DAB, DMX1029BT, DMX129BT Navigation Multimedia Receiver, Navigatio n Multimedia Receiver, Multimedia Receiver, Receiver</p>
---	---

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.