

KERN YKUP-01 Interface Adapter with Cable User Manual

Home » KERN YKUP-01 Interface Adapter with Cable User Manual



User Manual



Contents

- 1 YKUP-01 Interface Adapter with Cable
- 2 General hints
- 3 Documents / Resources
 3.1 References
- 4 Related Posts

YKUP-01 Interface Adapter with Cable

Type TYKUP-01-A

Version 1.0 2021-09 GB

1You will find the current version of these instructions also online under: https://www.kern-sohn.com/shop/de/DOWNLOADS/ Under the column Operating instructions

General hints

Cable length: 1.5 m


• **1** Via the interfaces weighing data may be exchanged with connected peripheral devices.

- Issue may be made to a printer, PC or control displays. Control commands and data input may also occur at reverse order via the connected devices.
- Only KERN KUP adapters may be connected to the 15-pol-sub-Dplug of the device!

1.1 Installation

- · Switch off the balance
- Plug in the KUP adapter (RS232) at the 15-pol-sub-D-plug of the device
- · Switch on device
- The KUP adapter is automatically recognised by the appliance

1.1.1 Allocation of connections KUP adapter:

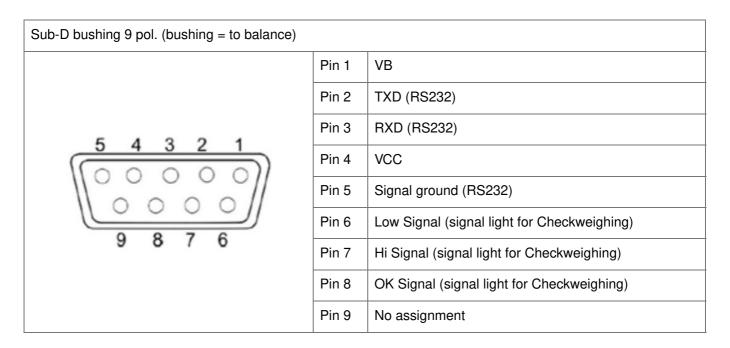

1.1.2 Setting communication parameters:

The communication parameters (baud rate, bits and parity) of balance and printer/PC must match. **KERN standard settings (factory setting):**

- baud 9600
- 8 data bit
- 1 stop bit
- · No parity

KERN & Sohn GmbH

Ziegelei 1 72336 Balingen-Frommern Germany

+0049-[0]7433-9933-0

+0049-[0]7433-9933-149





KERN YKUP-01 Interface Adapter with Cable [pdf] User Manual

YKUP-01, Interface Adapter with Cable, YKUP-01 Interface Adapter with Cable, YKUP-01 Interface Adapter, Interface Adapter, Adapter

References

• <u>KERN & SOHN GmbH</u>

Manuals+,