



# Keychron C1 Tenkeyless Mechanical Keyboard User Manual

[Home](#) » [Keychron](#) » Keychron C1 Tenkeyless Mechanical Keyboard User Manual 

## Contents

- 1 Keychron C1 Tenkeyless Mechanical Keyboard User Manual
- 2 IN THE BOX
- 3 Quick Start Guide
  - 3.1 1. Charge Light Effect
  - 3.2 2. Switch Between Function and multimedia Keys (F1-F2)
  - 3.3 3. Remap keys
  - 3.4 4. Activate Siri / Cortona
  - 3.5 5. Turn Off the Backlight
  - 3.6 6. Factory Reset
- 4 C1 TENKEYLESS MECHANICAL KEYBOARD SPECIFICATIONS
- 5 C1 TENKEYLESS MECHANICAL KEYBOARD OVERVIEW
- 6 BACKLIT SETTING
- 7 OS SWITCH
- 8 COMPLIANCE AND SAFETY
- 9 Customer Support
- 10 Documents / Resources
- 11 Related Posts

## Keychron C1 Tenkeyless Mechanical Keyboard User Manual

 


## IN THE BOX

- Keychron C1 Tenkeyless Mechanical Keyboard x 1
- Type-C Cable \* 1
- Manual \* 1
- Quick Start Guide \* 1
- Extra Keycaps Set \* 1

## Quick Start Guide


If you are a Windows user, please find the appropriate keycaps in the box, then follow the instructions below to find and replace the following keycaps.

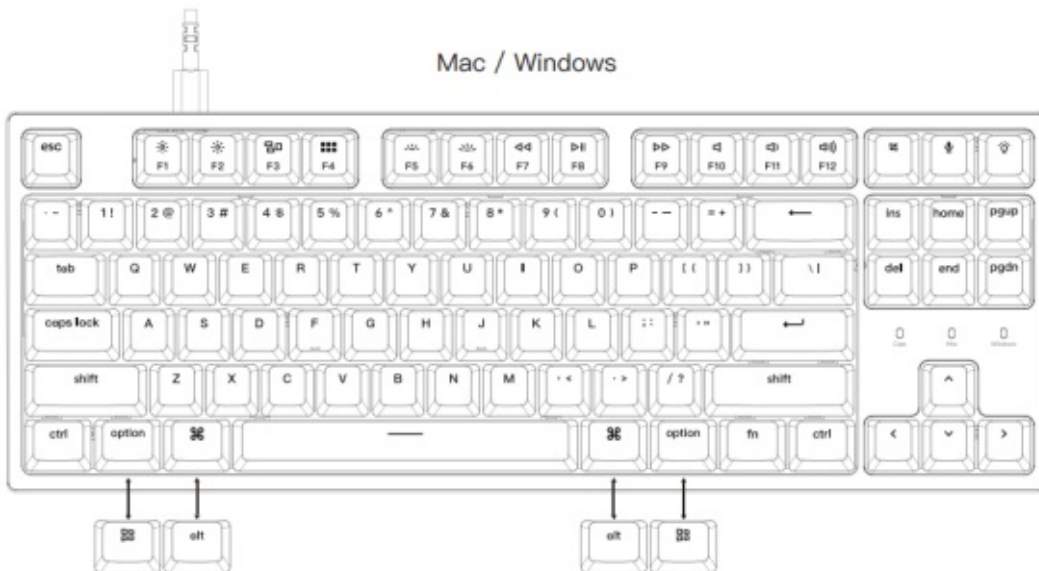

### 1. Charge Light Effect




 For RGB version – Press fn + right arrow / left arrow to change Color.

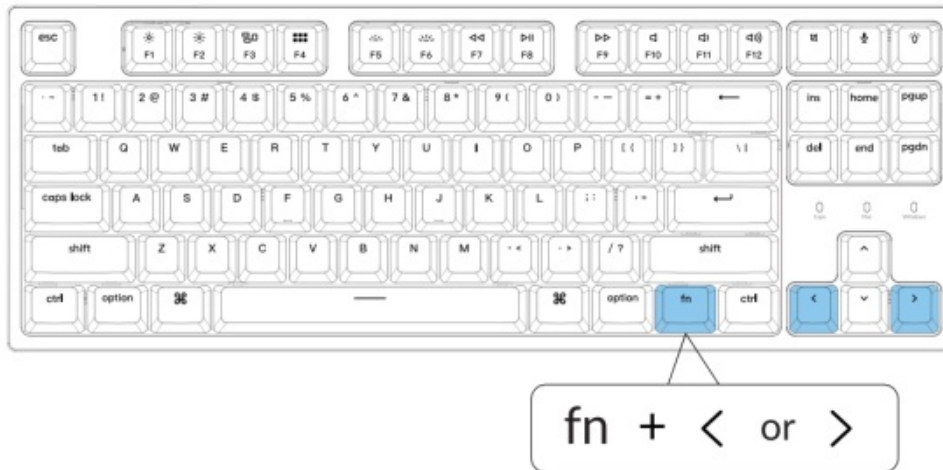


## 2. Switch Between Function and multimedia Keys (F1-F12)

 For Windows: Press Fn+ X + L (for 4 Seconds) to switch

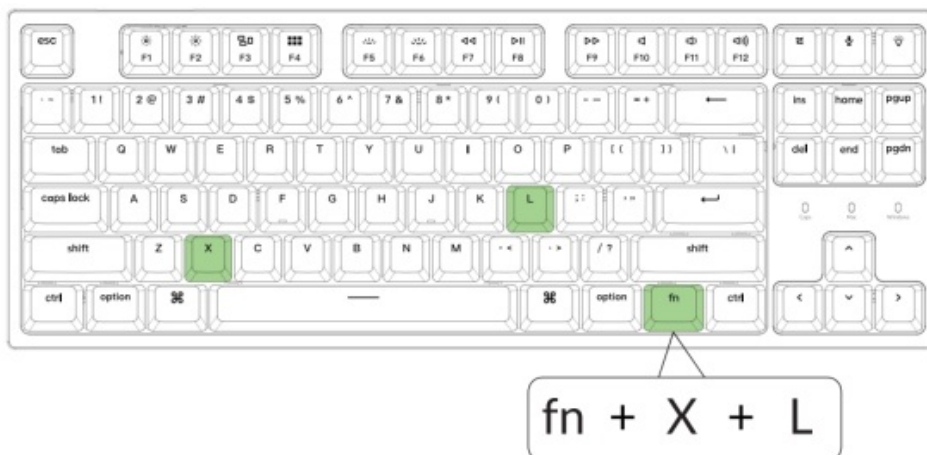

## Multimedia Keys

 


## Function Keys



For Mac: Go to system settings > Keyboard > and enable the function keys.

 “For F5 & F6 as function keys press fn + K + C (for 3 seconds) and use same shortcut to switch.

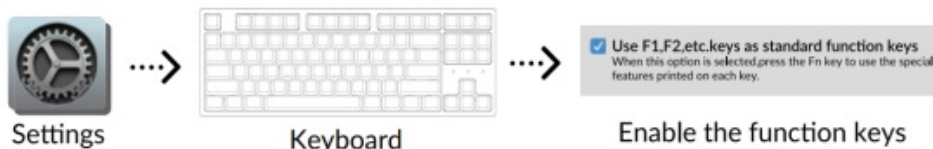

## 3. Remap keys

We don't have an official software to remap the keys yet. But you can use these two software to get the job done.  
(Except the light effect key)

**For Mac – Karabiner**

# Karabiner

For Windows – Sharp Keys

## SharpKeys

 
We have a Linux user group on Facebook. Please search “Keychron Linux Group” on Facebook. So you can better experience with our keyboard



#### 4. Activate Siri / Cortona

**For Siri on Mac:** Go to System preferences> Siri > select “Press Fn (Function) Space” option.

- Siri key only works on MacOS and does not work on iOS.

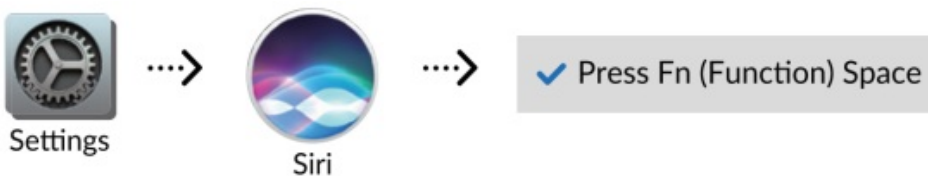

**For Cortana on Windows:** Select Start > Settings > Cortana and select the shortcut by pressing Windows key + C key.

- Windows Cortana is only available for Windows 10 and above OS. Cortana is only available in certain countries / regions and might not work everywhere.



#### 5. Turn Off the Backlight

If you are on the Mac, the default is to press F5 key. If you are on the Windows, the default is to press fn + F5 key



OR press the fn + Light effect Key.



## 6. Factory Reset

Trouble shooting? Don't know what's going on with the keyboard? Try factory reset by pressing fn + J + Z (for 3 seconds)

 
 
 


## C1 TENKEYLESS MECHANICAL KEYBOARD SPECIFICATIONS

- **Number of keys:** 87
- **Switch type:** Mechanical / Optical Switch
- **Operating Environment:** -10 to 50°C



Technical specifications can be subjected to change without notice we apologize for any inconvenience caused.
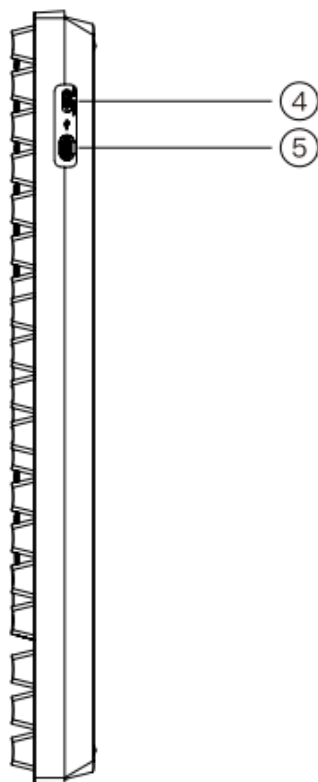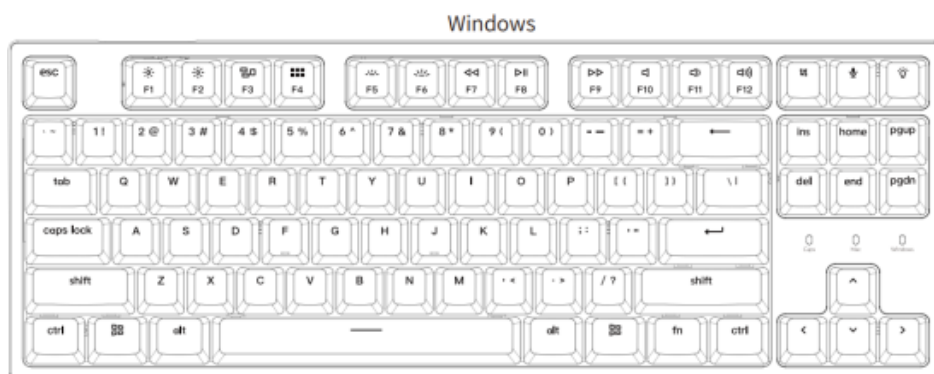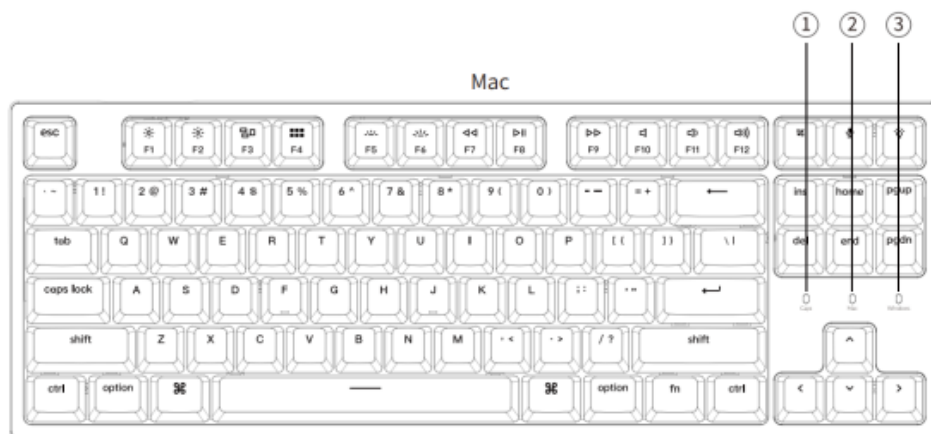
## C1 TENKEYLESS MECHANICAL KEYBOARD OVERVIEW



1. Caps Lock Indicator
2. Mac Layout
3. Windows Layout
4. Win/Android Mac/iOS (OS Toggle Switch)
5. Type-C Port

## BACKLIT SETTING

- Short press  to switch between different types of lighting effects.
- When backlit is on, press  button to switch among them. Short press fn and “left arrow” or fn and “right arrow” to adjust light colors. (For RGB version only)

## OS SWITCH

### 1. MAC/iOS

Turn the switch to Mac/iOS when you are connected to a Mac or iOS operating system.

### 2. WINDOWS/ANDROID

Switch the toggle to Windows/Android when the keyboard is connected to a Windows or Android operating system.

- When using the Windows/Android mode,   keys are used for “Windows” and “Alt” functions.

### 3. INPUT METHOD SWITCH

**For iOS:**

**Input method switch:** Ctrl + Space

**Caps Lock:** Caps (Enable General>Keyboards>Hardware Keyboard>Caps Lock Language Switch)

**For Android:** Input method switch: Shift or Shift + Space

**NOTE:** Functions of certain multimedia key may be disabled due to compatibility, versions, brands and drivers of Windows/Android OS. We also recommend not to switch OS frequently as it may impact keyboard operations.

### **My keyboard isn't working.**

For the keyboard: Turn the keyboard off and back on.

### **Third party input tools are not compatible with the keyboard.**

Due to compatibility, versions, brands and drivers of Windows/Android OS, functions of third party input tools may be affected while using the keyboard. Please make sure your operating system and drives are up to date.

### **Certain fn keys or multimedia keys does not work under Windows/Android mode.**

Functions of certain multimedia keys may be disabled due to compatibility, versions, brands and drivers of Windows/Android OS.

### **Safety Precaution:**

Keep the product, accessories and packaging parts out of reach of children to prevent any accidents and choking hazards.

Always keep the product dry to avoid corrosion.

Do not expose the product to extreme temperatures below -10°C (5°F) or above 50°C (131°F) to preserve the lifespan of the keyboard and battery.

## COMPLIANCE AND SAFETY

### **FCC DECLARATION OF CONFORMANC**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.



Any Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:




- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Plug the equipment into an outlet on a circuit different from that to which the receiver is currently using.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.

## Customer Support



**Keychron, Inc. Dover, DE 19901, United States**

Find us at: <https://www.keychron.com>  
[Support@keychron.com](mailto:Support@keychron.com)

 @keychron  
 @keychron  
 @keychronMK

Designed by Keychron Made in China

## Documents / Resources

	<a href="#">Keychron C1 Tenkeyless Mechanical Keyboard</a> [pdf] User Manual C1, Tenkeyless Mechanical Keyboard
	<a href="#">Keychron C1 Tenkeyless Mechanical Keyboard</a> [pdf] User Guide C1, Tenkeyless Mechanical Keyboard, Tenkeyless Keyboard, Mechanical Keyboard, C1, Keybo ard