



Keychron K10 Max Wireless Mechanical Keyboard User Manual

[Home](#) » [Keychron](#) » Keychron K10 Max Wireless Mechanical Keyboard User Manual 

 
 
Contents

- 1 [Keychron K10 Max Wireless Mechanical Keyboard](#)
- 2 [Fully Assembled Version](#)
- 3 [Barebone Version](#)
- 4 [QUICK START GUIDE](#)
- 5 [1. Connect 2.4GHz Receiver](#)
- 6 [2. Connect Bluetooth](#)
- 7 [3. Connect Cable](#)
- 8 [4. Switch To The Right System](#)
- 9 [5. The Backlight](#)
- 10 [6. Adjust The Backlight Brightness](#)
- 11 [7. Adjust The Backlight Speed](#)
- 12 [8. The Keychron Launcher App](#)
- 13 [9. The Layers](#)
- 14 [10. Factory Reset & Firmware Update](#)
- 15 [K10 MAX WIRELESS MECHANICAL KEYBOARD OVERVIEW](#)
- 16 [KEY DESCRIPTION](#)
- 17 [FUNCTION DESCRIPTION:](#)
- 18 [Documents / Resources](#)
 - 18.1 [References](#)
- 19 [Related Posts](#)

Keychron K10 Max Wireless Mechanical Keyboard

USER MANUAL

Fully Assembled Version

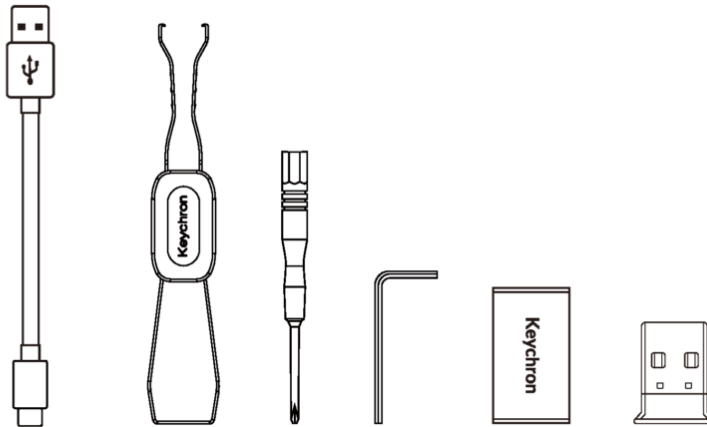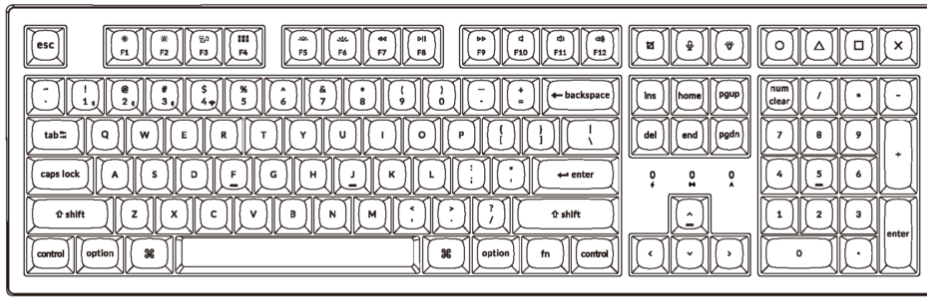

Keyboard

- 1x Fully Assembled Keyboard
- Including
- 1x Case
- 1x PCB
- 1x Steel Plate
- 1x Sound Absorbing Foam
- 1x IXPE Foam
- 1x PET Film
- 1x EPDM Foam
- 1x Bottom Case PET Film
- 1x Silicone Bottom Pad
- 8 Sets x Stabilizers
- 1 Set x Keycaps (PBT Double-shot)
- 1 Set x Switches

Cable

- 1x Type-A to Type-C Cable

 
 
Receiver

- 1x Type-A 2.4GHz Receiver
- 1x Extension Adapter For Receiver

Tools

- 1x Keycap & Switch Puller
- 1x Screwdriver
- 1x Hex Key

Barebone Version

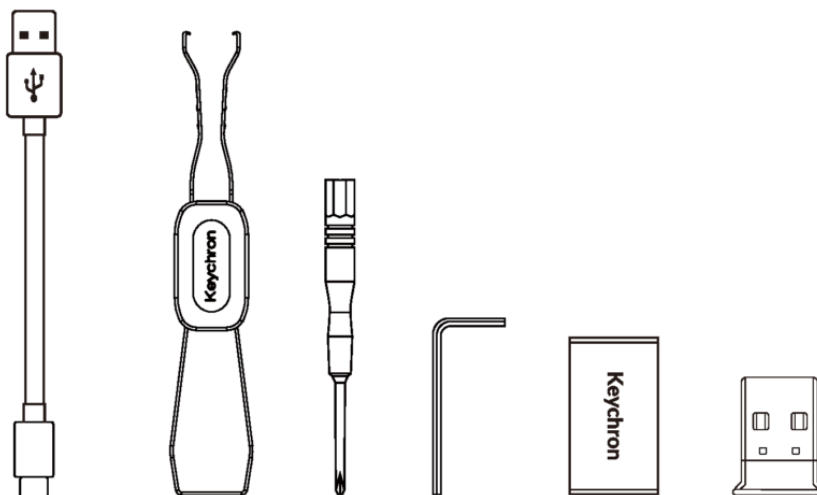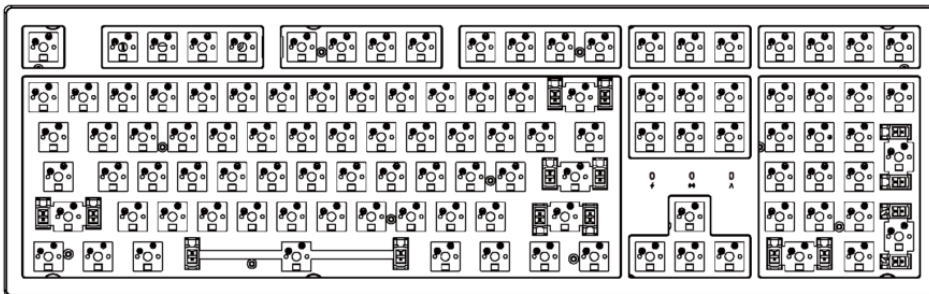

Keyboard Kit

- 1x Keyboard Kit (Without Keycaps & Switches) Including
- 1x Case
- 1x PCB

- 1x Steel Plate
- 1x Sound Absorbing Foam
- 1x IXPE Foam
- 1x PET Film
- 1x EPDM Foam
- 1x Bottom Case PET Film
- 1x Silicone Bottom Pad
- 8 Sets x Stabilizers

Cable

- 1x Type-A to Type-C Cable

Receiver

- 1x Type-A 2.4GHz Receiver
- 1x Extension Adapter For Receiver

 
Tools

- 1x Keycap & Switch Puller
- 1x Screwdriver
- 1x Hex Key

QUICK START GUIDE

If you are a Windows user, please find the appropriate keycaps in the box, then follow the instructions below to find and replace the following keycaps.

Mac / Windows

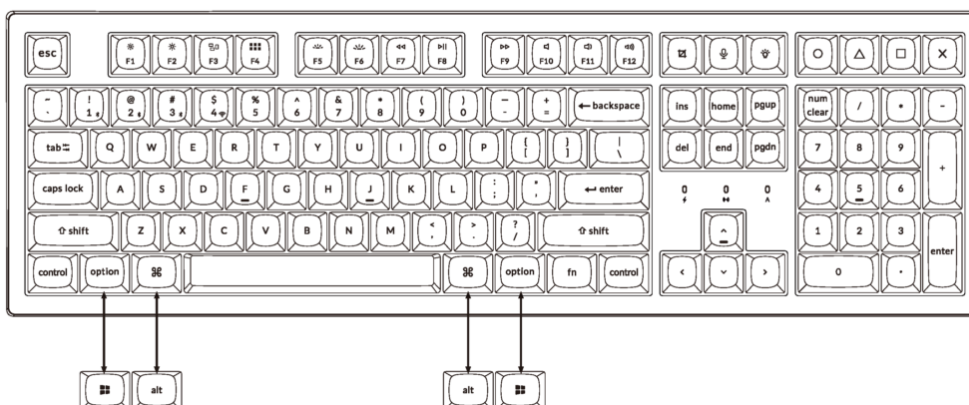


1. Connect 2.4GHz Receiver



Connect the 2.4GHz receiver to the device USB port.



 Switch toggle to 2.4GHz mode

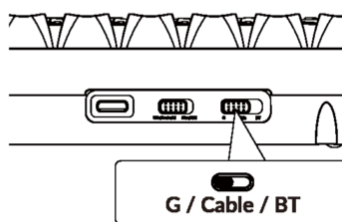

G = 2.4GHz

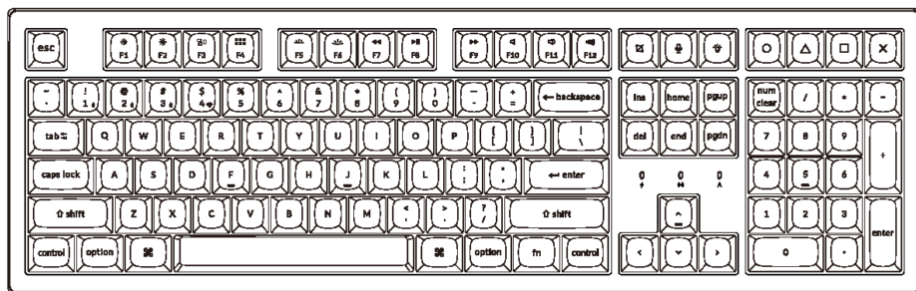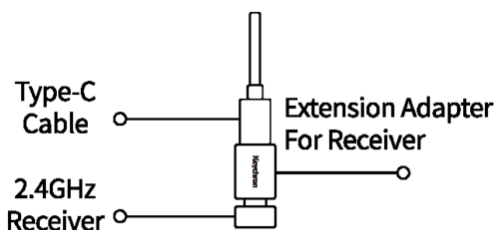  


Note: For the best wireless experience, we recommend using the extension adapter for receiver and putting the 2.4GHz receiver somewhere on your desk close to your keyboard for a low rate of latency and fewer signal interferences.


2. Connect Bluetooth



 
Switch toggle to Bluetooth

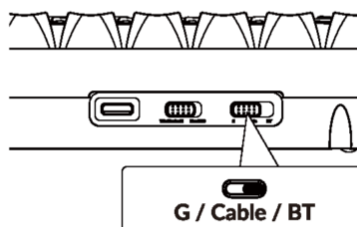

 Press fn + 1 (for 4 seconds) and pair with device named Keychron KIO Max.

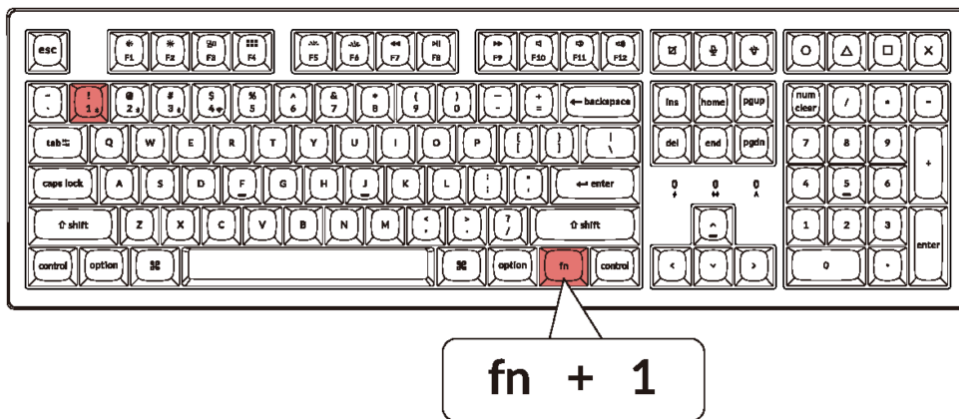


 3. Connect Cable

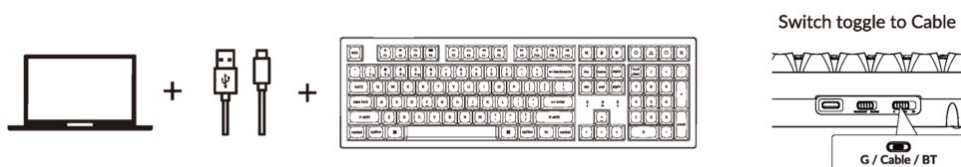


4. Switch To The Right System

 Please make sure the system toggle on the top left corner has been switched to the same system as your computer's operating system.

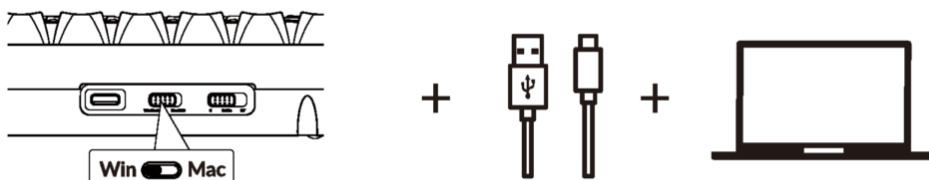


5. The Backlight

 Press fn + Q to change the lighting effect

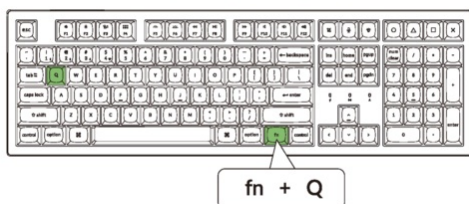


 Press fn + tab to turn the backlight on/off

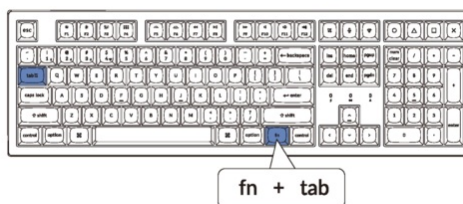


6. Adjust The Backlight Brightness

 Press fn + W to increase the backlight brightness

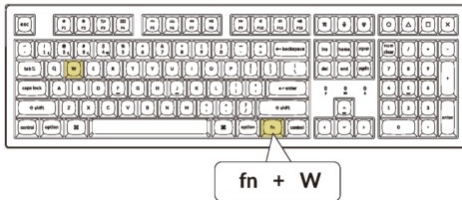


 Press fn + S to decrease the backlight brightness

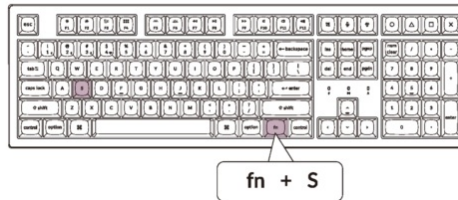


7. Adjust The Backlight Speed

 Press fn + T to increase the light effect speed

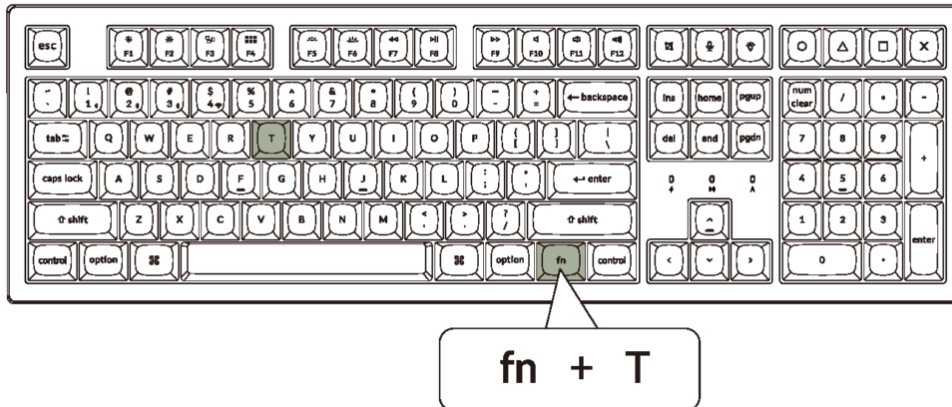

 
Press fn + G to decrease the light effect speed

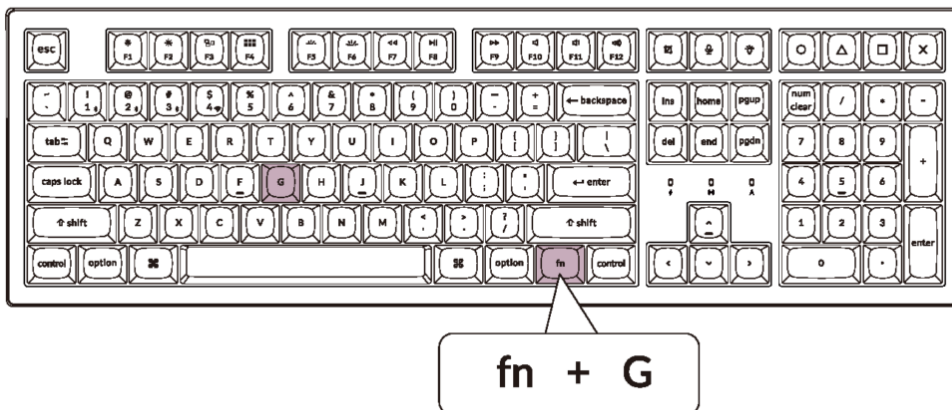

8. The Keychron Launcher App

Please visit launcher.keychron.com to access the Keychron online launcher app. This app enables users to remap keys, adjust key actuation points, assign multiple commands to a single key, enter game controller mode, and more.

 
If it cannot recognize your keyboard, please reach our support to get instruction.

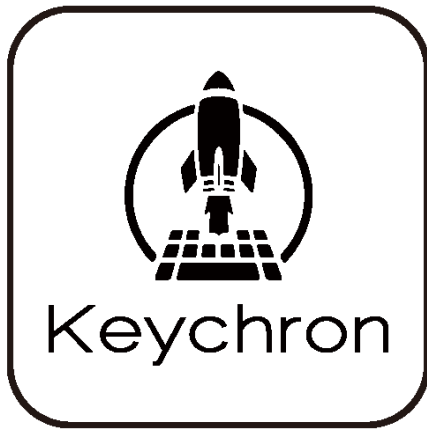

'The online launcher App can only run on the latest version of Chrome, Edge, and Opera browsers yet. 'The online launcher App only works when the keyboard is connected by wire to the computer.

9. The Layers

 There are four layers of key settings on the keyboard. The layer 0 and layer 1 are for the Mac system. The layer 2 and layer 3 are for the Windows system.

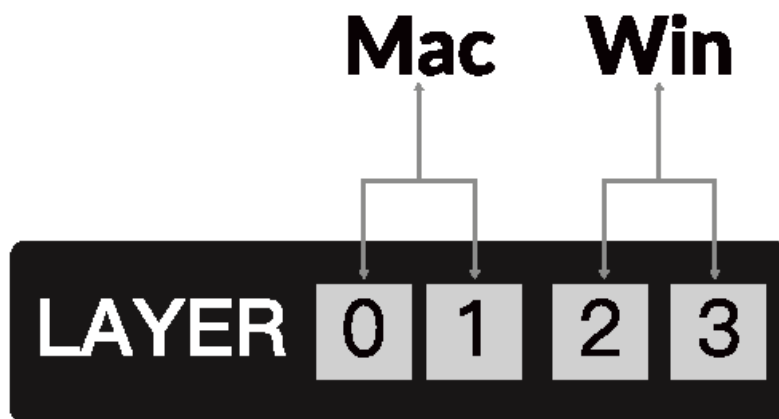

If your system toggle is switched to Mac, then the layer 0 will be activated.

Mac ☒ Win

 
LAYER 0 1 2 3

If your system toggle is switched to Windows, then the layer 2 will be activated. Remember that if you are using it in Windows mode, please make changes to the layer 2 instead of the top layer (the layer 0). This is a common mistake people are making.

Mac ☐ Win

LAYER 0 1 2 3

10. Factory Reset & Firmware Update

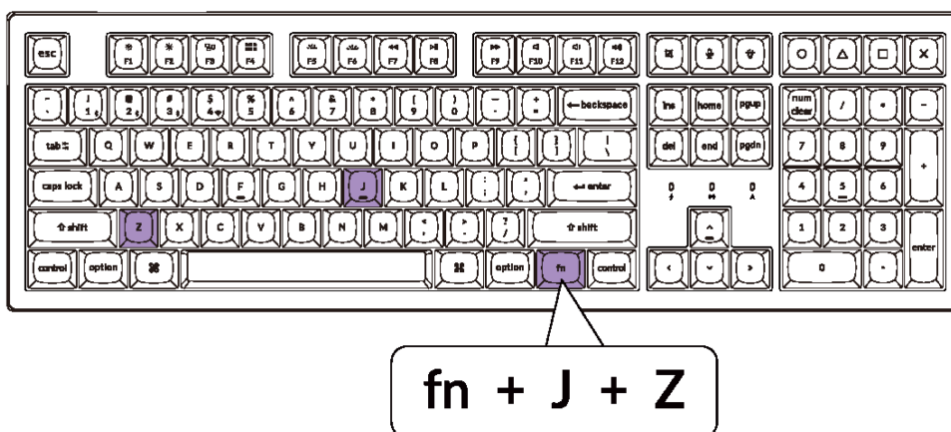

Troubleshooting? Don't know what's going on with the keyboard?

Factory reset your keyboard

1. Power on your keyboard.
2. Press and hold **Fn + J + Z** (for 4 seconds). The keyboard backlight will flash in red quickly for 3 seconds, indicating that the keyboard has been reset.

Flash your keyboard firmware

1. Visit launcher.keychron.com to open the online Launcher web app.
2. Ensure the keyboard is in Cable or Wired mode and plug in the power cable.
3. Find the 'Firmware Update' tab on the left side of the Launcher and connect your keyboard with it.
4. Follow the instructions on the Launcher and complete the firmware update.

*Step-by-step guide, search the keyword "firmware" on keychron.com.

The keyboard is highly customizable and easy to be rebuilt.

If anything goes wrong with any of the keyboard components of keyboard during the warranty period, we will only replace the defective parts of the keyboard, not the whole keyboard.




K10 MAX WIRELESS MECHANICAL KEYBOARD SPECIFICATIONS

- Number of keys: 108
- Switch type: Mechanical
- Battery: 4000mAh
- Charging time: Around 5 hours
- Charging port: Type-C
- Mode: Bluetooth / Wired / 2.4GHz
- Bluetooth operating distance: Within 10 meters (open space)
- Name of Bluetooth device: Keychron K10 Max

LED STATUS OVERVIEW

LED Location	Function	Status
Power Indicator	Charging	Low Power - Red Light Blinking Charging - Static Red Full charged - Static Green
Bluetooth / 2.4 GHz Indicator	Bluetooth / 2.4 GHz	Reconnecting - Fast Blinking Paired - Light off Pairing - Slow Blinking
Caps Lock Indicator	Caps Lock	Enable Caps Lock - Static Red Disable Caps Lock - Light Off

 
K10 MAX WIRELESS MECHANICAL KEYBOARD OVERVIEW

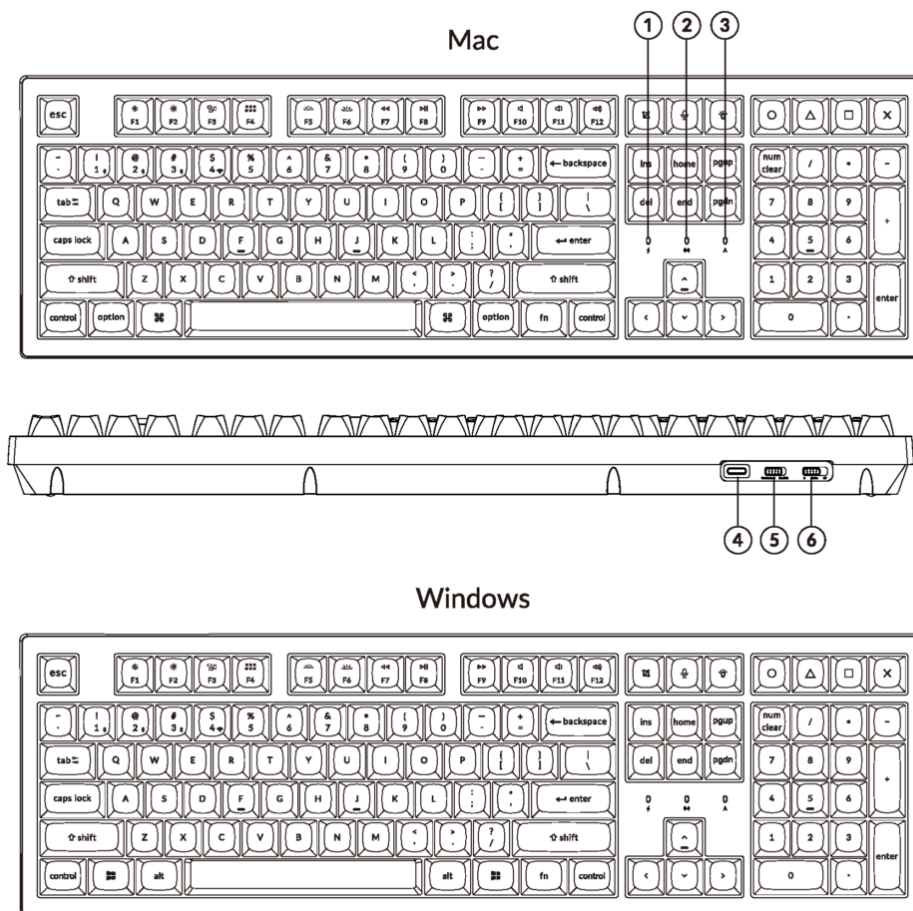


1. Power Indicator
2. Bluetooth / 2.4GHz Indicator
3. Caps Lock Indicator
4. Type-CPort
5. Win/Android Mac/iOS(OS Toggle)
6. 2.4G I Cable / BT (Connection Mode Toggle)

DEFAULT KEY LAYOUT:

 
LAYER 0: This layer will be activated when your keyboard's system toggle is switched to Mac.

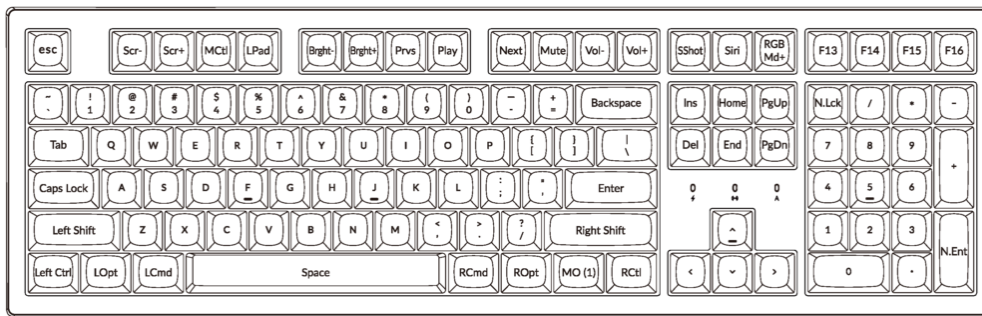

LAYER 1: This layer will be activated when your keyboard's system toggle is switched to Mac and press the fn/MO(1) key.

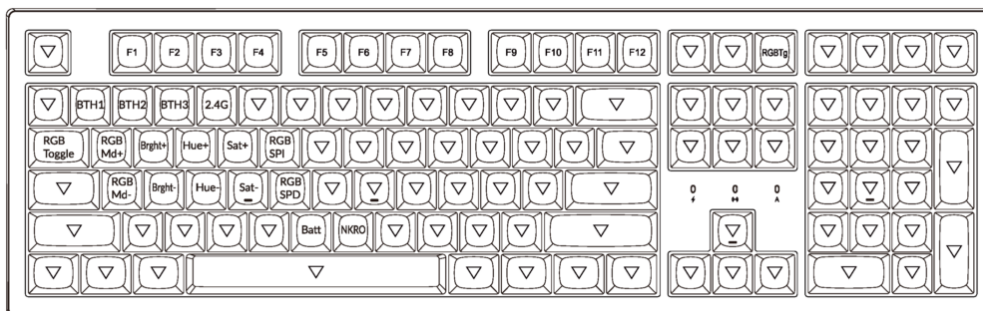 


LAYER 2: This layer will be activated when your keyboard's system toggle is switched to Windows.

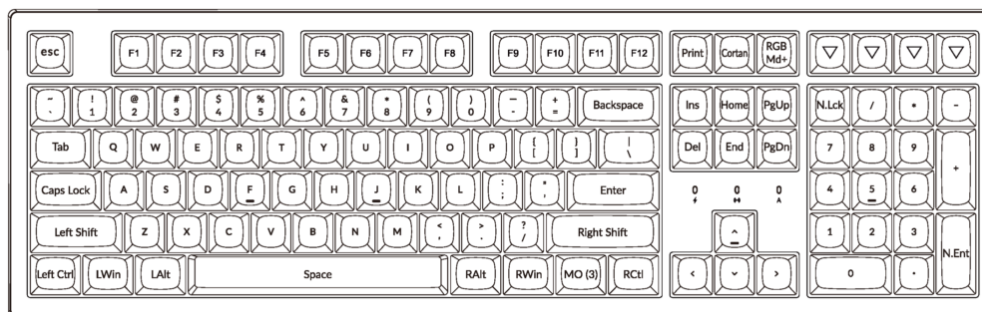 

LWin = Left Windows LAlt = Left Alt RAlt = Right Alt RCl = Right Ctrl RWin= Right Windows

 LAYER 3: This layer will be activated when your keyboard's system toggle is switched to Windows and press the fn/MO(3) key.

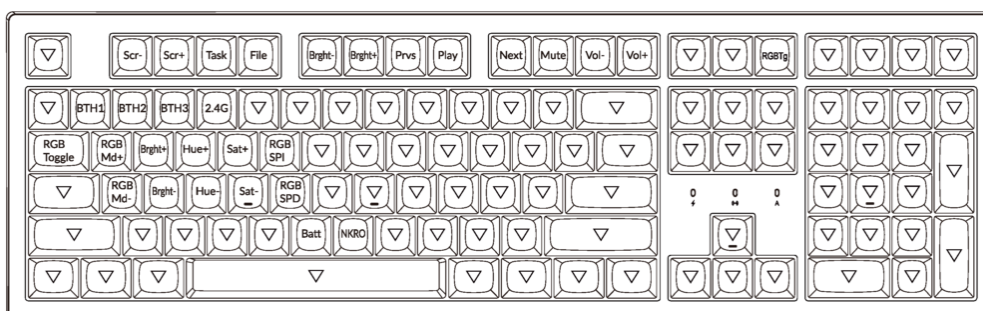

KEY DESCRIPTION

Key Description		Key Description		Key Description	
Scr-	Screen Brightness Decrease	RGBMd-	RGB Mode Previous	NKRO	N-key rollover
Scr+	Screen Brightness Increase	Hue+	Hue Increase	Task	Task View
Bright-	Backlight Decrease	Hue-	Hue Decrease	File	File Explorer
Bright+	Backlight Increase	RGB SPI	RGB Speed Increase	MCtl	Mission Control
Prvs	Previous	RGB SPD	RGB Speed Decrease	LPad	LaunchPad
Play	Play/Pause	MO(1)	Layer 1 will be activated when holding this key		
Next	Next	MO(3)	Layer 3 will be activated when holding this key		
Mute	Mute	BTH1	Bluetooth Host 1		
Vol-	Volume Decrease	BTH2	Bluetooth Host 2		
Vol+	Volume Increase	BTH3	Bluetooth Host 3		
RGB Toggle	Turn Backlight on/off	2.4G	2.4GHz Host		
RGBMd+	RGB Mode Next	Batt	Battery life		

FUNCTION DESCRIPTION:

CHARGING

Plug the cable into a USB port and plug the other end into the keyboard port. Power Indicator:
A red light will stay on while charging; Fully charged in around 5 hours, a green battery indicator will appear.

*The K10 Max keyboard is compatible with all USB ports. Please use a 5V 1A adapter or USB 3.0 for the best performance. The K10 Max can be charged in 2.4GHz/Cable/Bluetooth mode.

**This product supports up to 5V charging voltage and 1A charging current. We are not responsible for any problems caused by improper charging.

2.4GHz | CABLE/ BLUETOOTH MODE (MODE TOGGLE)

2.4GHZMODE

1. Connect the 2.4GHz receiver to your device's USB Port.
2. Switch the toggle to the 2.4GHz option. The keyboard will automatically connect to your device.

BWETOOTH MODE

1. Switch the toggle to the Bluetooth option.
2. Backlighting will be turned on.
3. Hold "fn+1" key for 4 seconds to activate Bluetooth pairing (the Bluetooth indicator fast flashes for 3 minutes to detect pairing).
4. Search for the Bluetooth device "Keychron K10 Max" on your device and connect it (the Bluetooth indicator goes off after successful pairing).

Note: This keyboard supports pairing up to 3 devices simultaneously via key combination "fn" + "1" | "fn" + "2" | "fn" + "3".

*The Bluetooth indicator will continue to flash for 3 minutes.

**Slow or failed connections may exist due to different Bluetooth versions, please make sure all the settings are correct.

SWITCH BLUETOOTH DEVICES

Short press key combination “fn” + “1” | “fn” + “2” | “fn” + “3” to switch to other device.

RECONNECT:

1. Switch the keyboard to the Bluetooth option to activate the keyboard.
2. The Bluetooth indicator flashes for 3 seconds and automatically pairs with the last paired device.
3. If the Bluetooth indicator is off, press any button to enter the connection again.

* The keyboard must have been paired with the device to perform this function.

WIRED MODE

1. Switch the toggle to the Cable option .
2. Connect our cable with your PC and keyboard.
3. Backlighting will be turned on.

*Under Wired Mode, keyboard will not enter into Battery Saver Mode.

TURN OFF THE KEYBOARD

Switch the keyboard to the Cable option and unplug the power cable.

Safety Precaution:

Keep the product, accessories and packaging parts out of the reach of children to prevent any accidents and choking hazards.

Always keep the product dry to avoid corrosion.

Do not expose the product to extreme temperatures below -10°C(14° F) or above 50°C(122° F) to preserve the lifespan of the keyboard.

Keychron, Inc.

Dover, DE 19901, United States

Find us at:

<https://www.keychron.com>

Support@keychron.com

l@keychron

@keychron

X@keychronMK

Designed by Keychron

Made in China

Documents / Resources

	Keychron K10 Max Wireless Mechanical Keyboard [pdf] User Manual K10 Max, K10 Max Wireless Mechanical Keyboard, Wireless Mechanical Keyboard, Mechanical Keyboard, Keyboard
---	---

References

- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.