



Keychron K13 Max Wireless Custom Mechanical Keyboard User Guide

[Home](#) » [Keychron](#) » Keychron K13 Max Wireless Custom Mechanical Keyboard User Guide 

 
Keychron K13 Max Wireless Custom Mechanical Keyboard

Contents

1 TAYYEB POST


- 1.1 Connect 2.4GHz Receiver
- 1.2 Connect Bluetooth
- 1.3 Connect Cable
- 1.4 Switch To The Right System
- 1.5 The Layers
- 1.6 The VIA Key Remapping Software
- 1.7 The Backlight
- 1.8 Adjust The Backlight Brightness
- 1.9 Warranty
- 1.10 Factory Reset
- 1.11 Documents / Resources
 - 1.11.1 References
- 1.12 Related Posts

TAYYEB POST

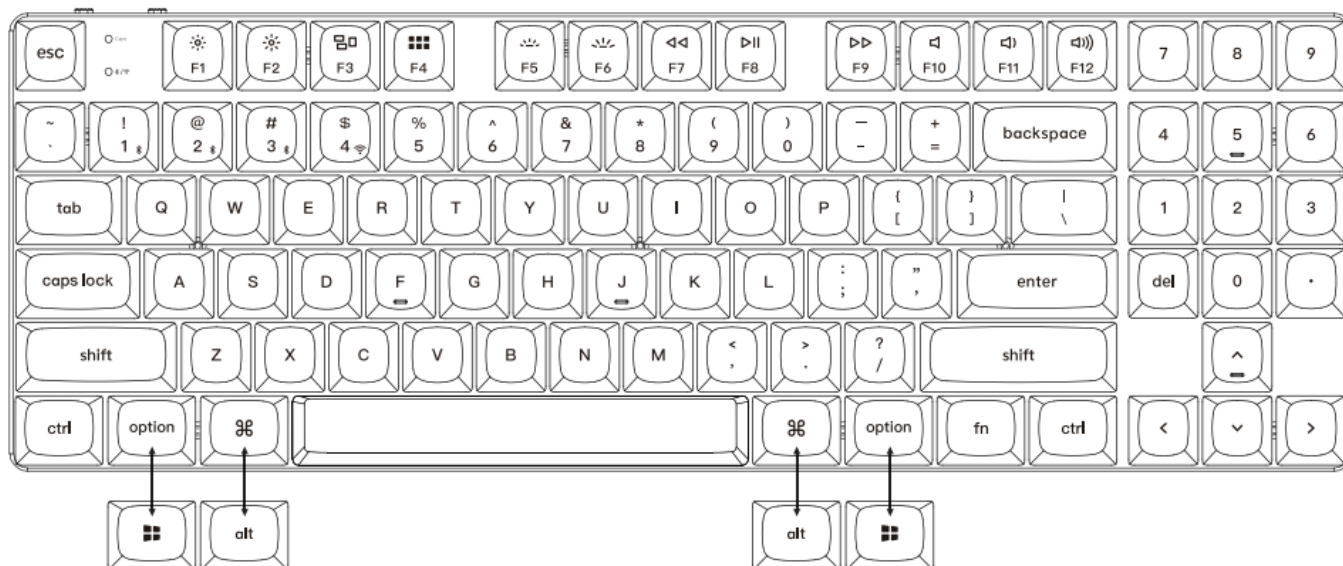


Connect 2.4GHz Receiver

 
Connect the 2.4GHz receiver to the device USB port.

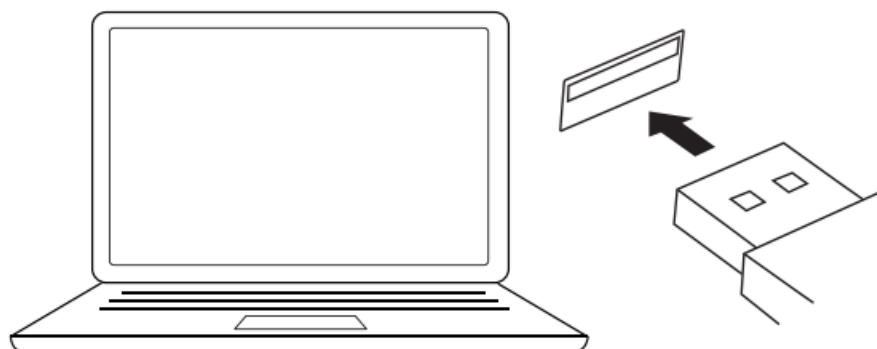

Switch toggle to 2.4GHz mode

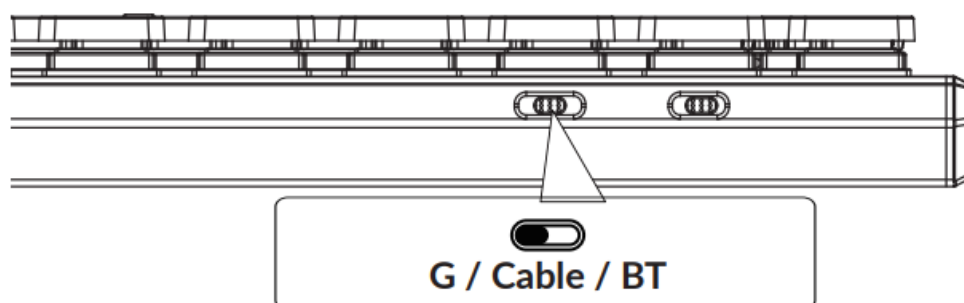 

G = 2.4GHz

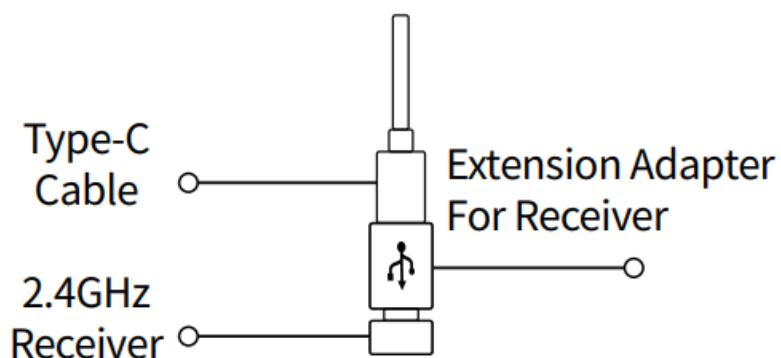 




Note: For the best wireless experience, we recommend using the extension adapter for receiver and putting the 2.4GHz receiver somewhere on your desk close to your keyboard for a low rate of latency and fewer signal interferences.


Connect Bluetooth



 Switch to toggle bluetooth

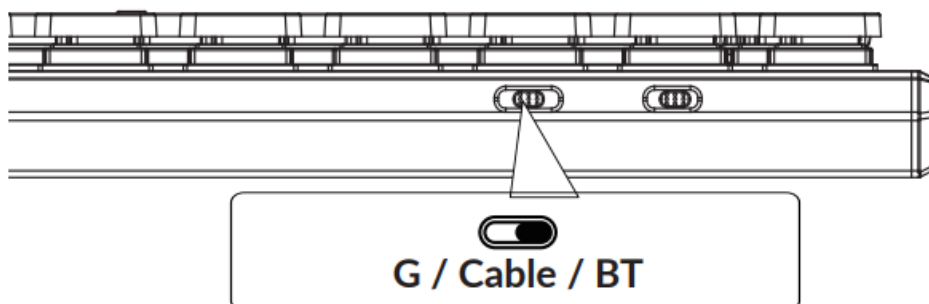

 Press fn + 1 (for 4 seconds) and pair with device named Keychron K13 Max.

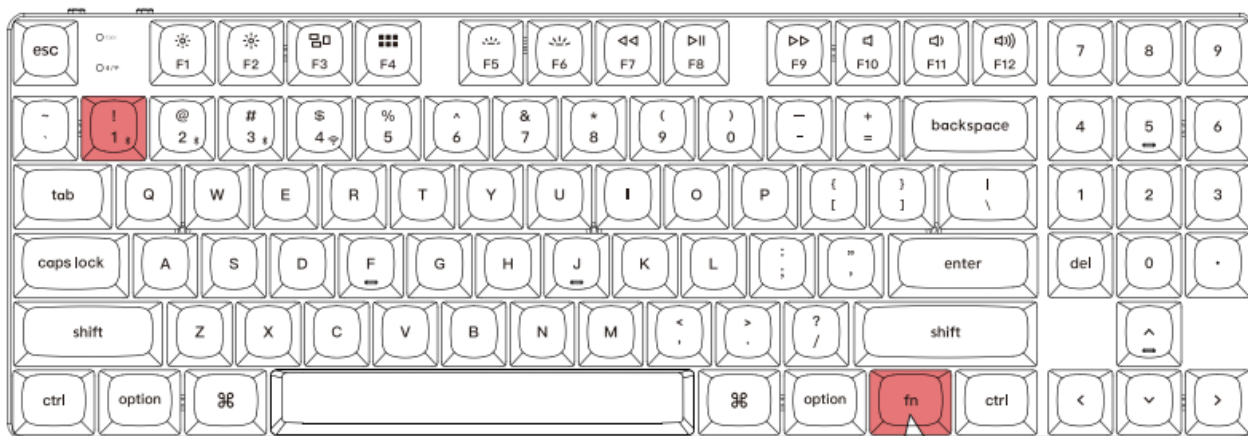


fn + 1


Connect Cable



 
+

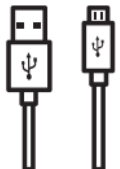

+

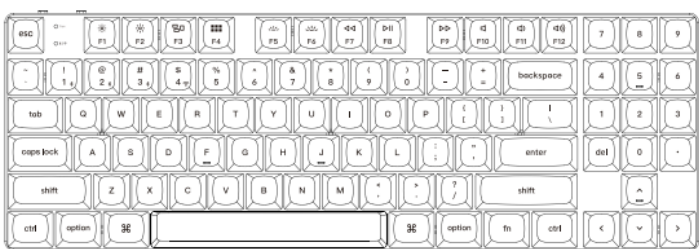 


Switch toggle to Cable

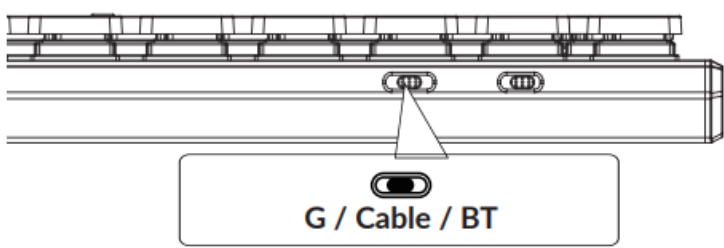 


Switch To The Right System

 Please make sure the system toggle on the top left corner has been switched to the same system as your computer's operating system.

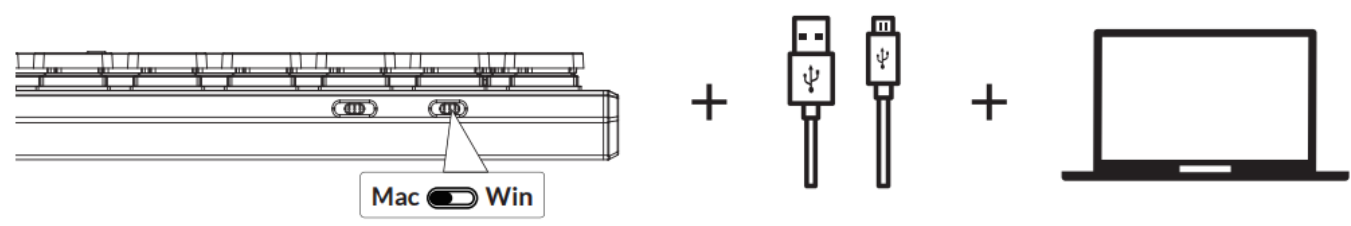

The Layers

 
There are four layers of key settings on the keyboard. The layer 0 and layer 1 are for the Mac system. The layer 2 and layer 3 are for the Windows system.

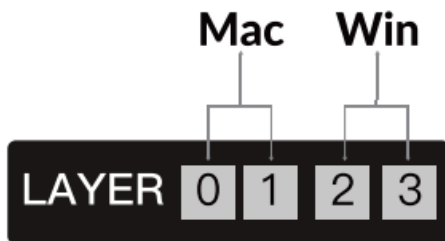

If your system toggle is switched to Mac, then the layer 0 will be activated.



 If your system toggle is switched to Windows, then the layer 2 will be activated. Remember that if you are using it in Windows mode, please make changes to the layer 2 instead of the top layer (the layer 0). This is a common mistake people are making.



The VIA Key Remapping Software

 
Please visit usevia.app to use the online VIA software to remap the keys. If the VIA cannot recognize your keyboard, please reach our support to get the instruction.

- The online VIA software can only run on the latest version of Chrome, Edge, and Opera browsers yet.
- VIA only works when the keyboard is connected by wire to the computer.



The Backlight

Press fn + Q to change the lighting effect

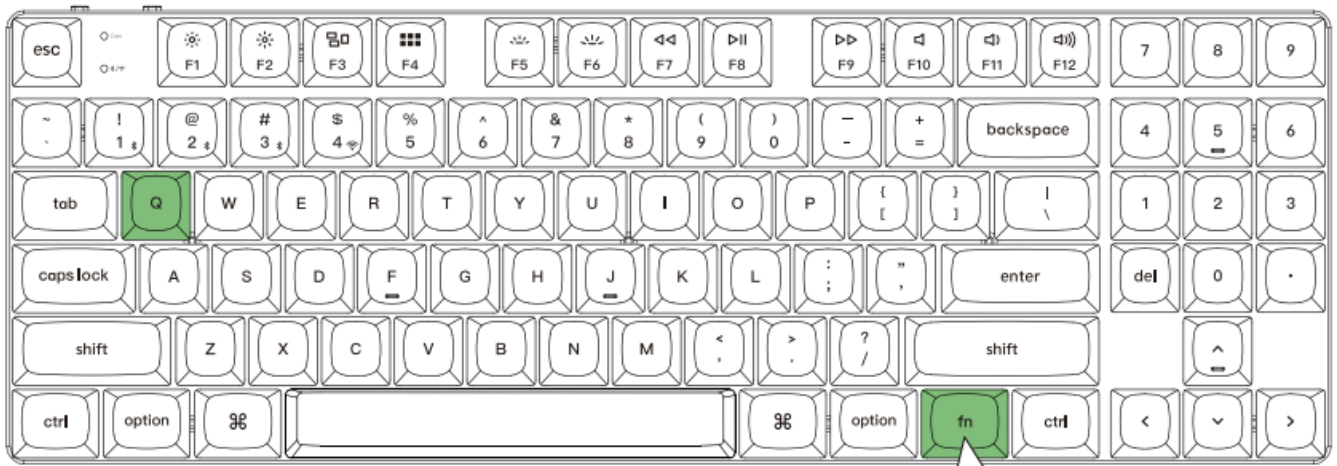

fn + Q

 
Press fn + tab to turn the backlight on/off



fn + tab


Adjust The Backlight Brightness

Press fn + W to increase the backlight brightness

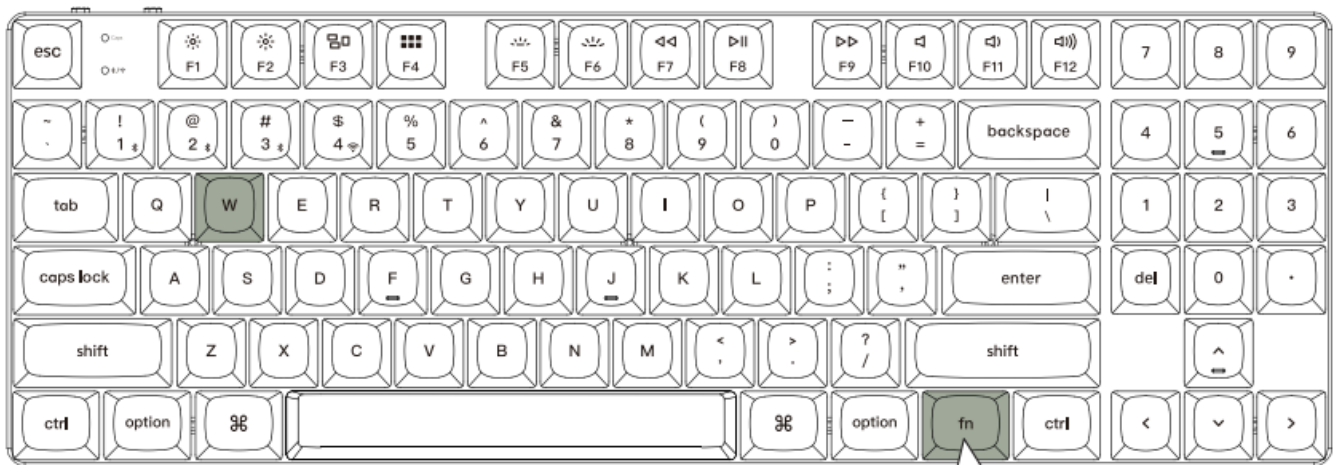

fn + W

 Press fn + S to decrease the backlight brightness

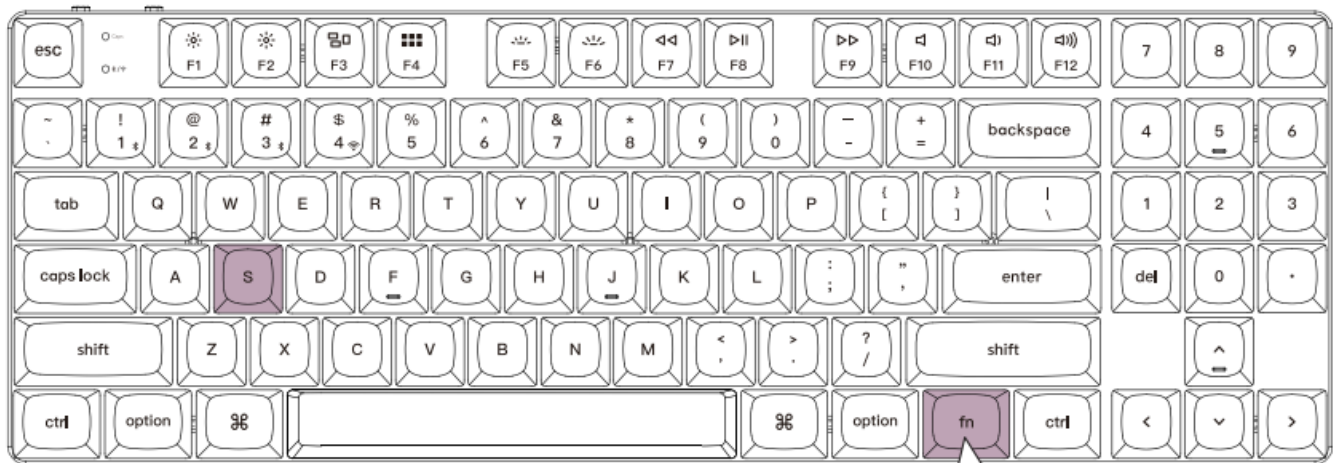

fn + S

Warranty

 
The keyboard is highly customizable and easy to be rebuilt. If anything goes wrong with any of the keyboard components of keyboard during the warranty period, we will only replace the defective parts of the keyboard, not the whole keyboard.



Factory Reset

Troubleshooting? Don't know what's going on with the keyboard?

1. Download the right firmware and QMK Toolbox from our website.
2. Unplug the power cable and switch the keyboard to Cable mode.
3. Remove the space bar keycap to find the reset button on the PCB.
4. Hold the reset key first, then plug the power cable into the keyboard. Release the reset key after 2 seconds, and the keyboard will now enter DFU mode.
5. Flash the firmware with the QMK Toolbox.
6. Factory reset the keyboard by pressing fn + J + Z (for 4 seconds). *Step by step guide can be found on our website.

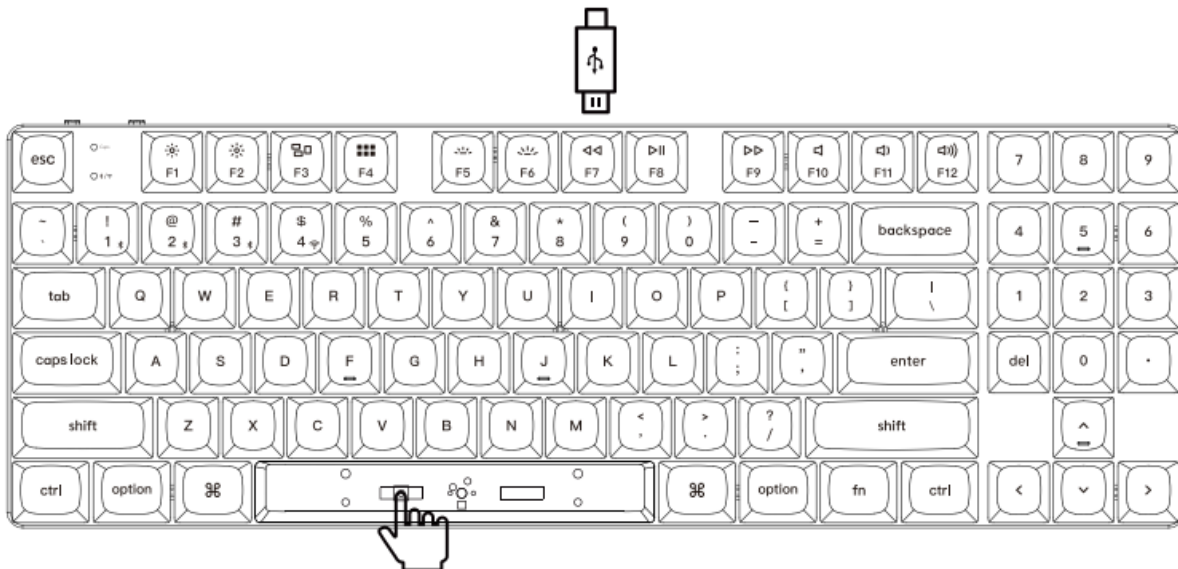


Not Happy



support@keychron.com

Documents / Resources

	Keychron K13 Max Wireless Custom Mechanical Keyboard [pdf] User Guide K13 Max Wireless Custom Mechanical Keyboard, K13 Max, Wireless Custom Mechanical Keyboard, Custom Mechanical Keyboard, Mechanical Keyboard, Keyboard
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.