


Keychron
**K17 Max Wireless
Mechanical
Keyboard**



Keychron K17 Max Wireless Mechanical Keyboard User Manual

[Home](#) » [Keychron](#) » Keychron K17 Max Wireless Mechanical Keyboard User Manual 

Contents

- [1 Keychron K17 Max Wireless Mechanical Keyboard](#)
- [2 IN THE BOX](#)
- [3 QUICK START GUIDE](#)
- [4 Warranty](#)
- [5 K17 MAX WIRELESS MECHANICAL KEYBOARD SPECIFICATIONS](#)
- [6 LED STATUS OVERVIEW](#)
- [7 K17 MAX WIRELESS MECHANICAL KEYBOARD OVERVIEW](#)
- [8 DEFAULT KEY LAYOUT](#)
- [9 KEY DESCRIPTION](#)
- [10 FUNCTION DESCRIPTION](#)
- [11 TROUBLESHOOTING](#)
- [12 Documents / Resources](#)
 - [12.1 References](#)


Keychron

Keychron K17 Max Wireless Mechanical Keyboard



IN THE BOX

 
- Keychron K17 Max Wireless Mechanical Keyboard x 1
- Type-A to Type-C Cable x 1
- Switch Puller (Hot-Swappable Version only) x 1
- Keycap Puller x 1
- Manual x 1
- Quick Start Guide x 1
- Extra Keycaps Set x 1
- Extension Adapter for Receiver x 1
- Type-A 2.4GHz Receiver x 1

QUICK START GUIDE

If you are a Windows user, please find the appropriate keycaps in the box, then follow the instructions below to find and replace the following keycaps.


Mac/ Windows

Mac / Windows

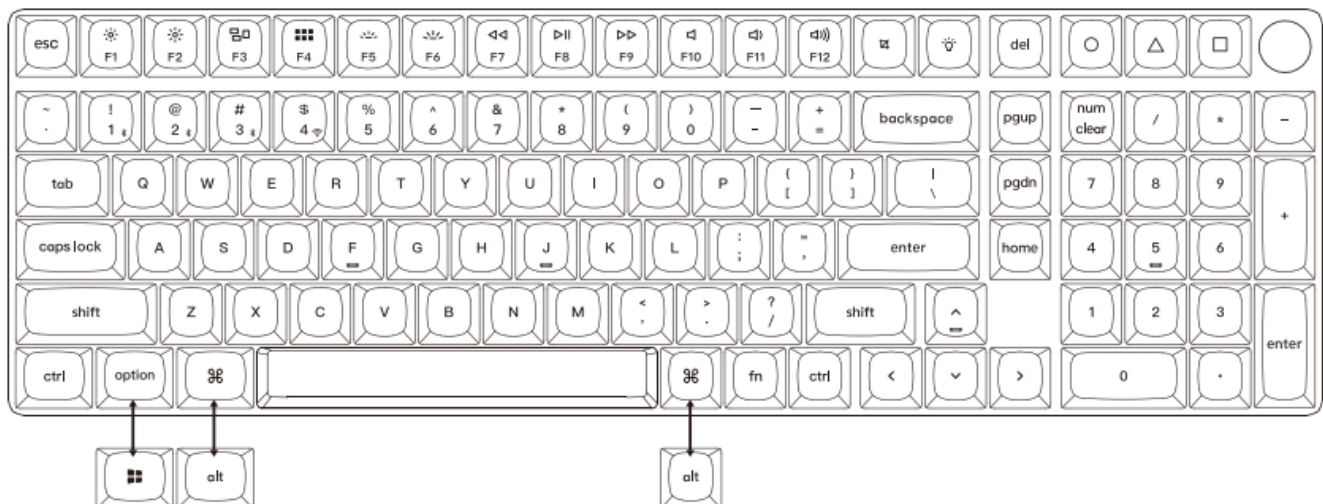

Connect 2.4GHz Receiver

 1 Connect 2.4GHz Receiver

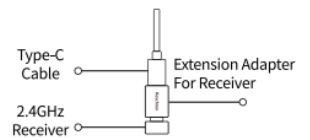

Connect the 2.4GHz receiver to the device USB port.



Switch toggle to 2.4GHz mode



2.4G / Cable / BT

2.4G = 2.4GHz



 
Note: For the best wireless experience, we recommend using the extension adapter for receiver and putting the 2.4GHz receiver somewhere on your desk close to your keyboard for a low rate of latency and fewer signal interferences.

Note: For the best wireless experience, we recommend using the extension adapter for the receiver and putting the 2.4GHz receiver somewhere on your desk close to your keyboard for a low rate of latency and fewer signal interferences.

Connect Bluetooth



Switch toggle to Bluetooth



2.4G / Cable / BT

Press fn + 1 (for 4 seconds) and pair with device named Keychron K17 Max.

 


fn + 1

Connect Cable




Switch toggle to Cable



2.4G / Cable / BT


Switch To The Right System

 Please make sure the system toggle on the top left corner has been switched to the same system as your computer's operating system.

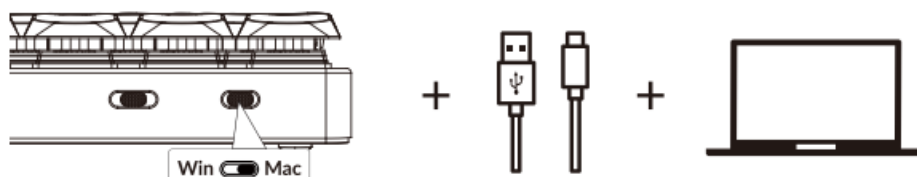

The Backlight

 Press fn + Q to change the lighting effect

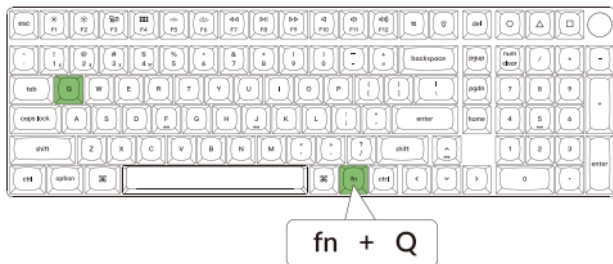


Press fn + tab to turn the backlight on/off




Adjust The Backlight Brightness

 Press fn + W to increase the backlight brightness

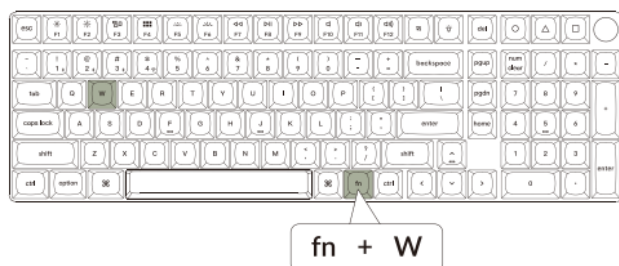


 Press fn + S to decrease the backlight brightness

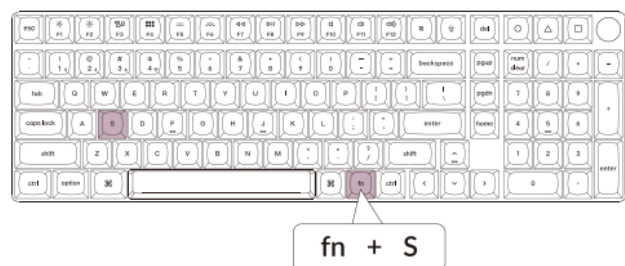


Adjust The Backlight Speed

 Press fn + T to increase the light effect speed



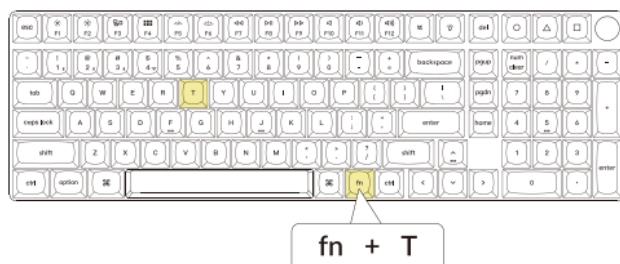


 Press fn + G to decrease the light effect speed

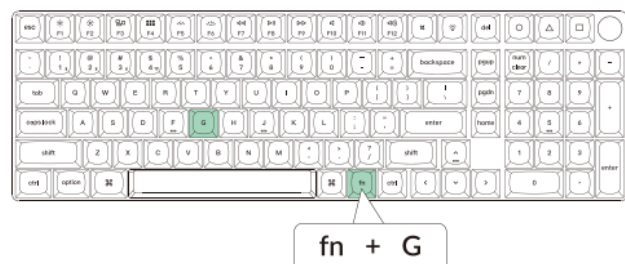

The Layers

   1. There are four layers of key settings on the keyboard. The layer O and layer 1 are for the Mac system. The layer 2 and layer 3 are for the Windows system.
2. If your system toggle is switched to Mac, then the layer O will be activated.
3. If your system toggle is switched to Windows, then the layer 2 will be activated. Remember that if you are using it in Windows mode, please make changes to the layer 2 instead of the top layer (the layer 0). This is a common mistake people are making.

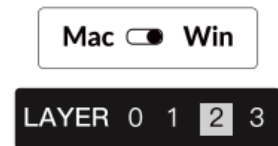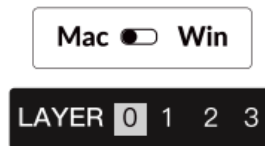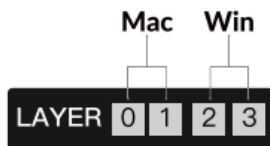

The Keychron Launcher App

Please visit launcher.keychron.com to use the online Launcher web app to remap the keys, create macro commands, or flash the firmware. If the Launcher cannot recognize your keyboard, please reach our support to get the instructions.

 


- The online Launcher can only run on the latest version of Chrome, Edge, and Opera browsers.
- The Launcher only works when the keyboard is connected by wire to the computer.

Factory Reset & Firmware Update

Troubleshooting? Don't know what's going on with the keyboard?

Factory reset your keyboard

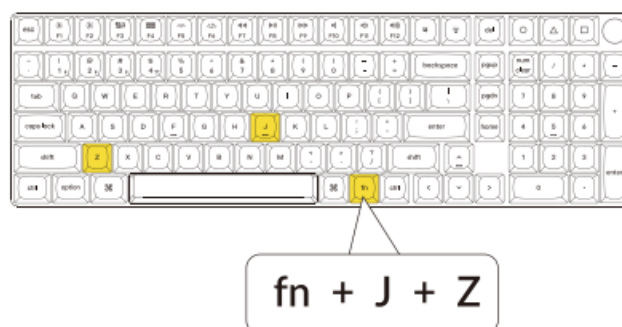

1. Power on your keyboard.
2. Press and hold fn + J + Z (for 4 seconds). The keyboard backlight will flash in red quickly for 3 seconds, indicating that the keyboard has been reset.

Flash your keyboard firmware

1. Visit launcher.keychron.com to open the online Launcher web app.
2. Ensure the keyboard is in Cable or Wired mode and plug in the power cable.

3. Find the 'Firmware Update' tab on the left side of the Launcher and connect your keyboard with it.
4. Follow the instructions on the Launcher and complete the firmware update. 'Step-by-step guide, search the keyword "firmware" on keychron.com.

Warranty

The keyboard is highly customizable and easy to be rebuilt. If anything goes wrong with any of the keyboard components of keyboard during the warranty period, we will only replace the defective parts of the keyboard, not the whole keyboard.

 
K17 MAX WIRELESS MECHANICAL KEYBOARD SPECIFICATIONS

- **Number of keys:** 104
- **Switch type:** Mechanical
- **Battery:** 2000mAh
- **Charging time:** Around 3 hours
- **Charging port:** Type-C
- **Mode:** Bluetooth / Wired / 2.4GHz
- **Bluetooth operating distance:** Within 10 meters (open space)
- **Name of Bluetooth device:** Keychron K17 Max

LED STATUS OVERVIEW

- **LED Location Function Status**
- Power Indicator Charging
- Charging – Static Red
- Fully charged – Static Green
- Reconnecting – Fast Blinking Bluetooth / 2.4 GHz Bluetooth / 2.4 GHz Paired – Light off Indicator Pairing – Slow Blinking
- Caps Lock Indicator Caps Lock Enable Caps Lock – Static Red Disable Caps Lock – Light Off


K17 MAX WIRELESS MECHANICAL KEYBOARD OVERVIEW

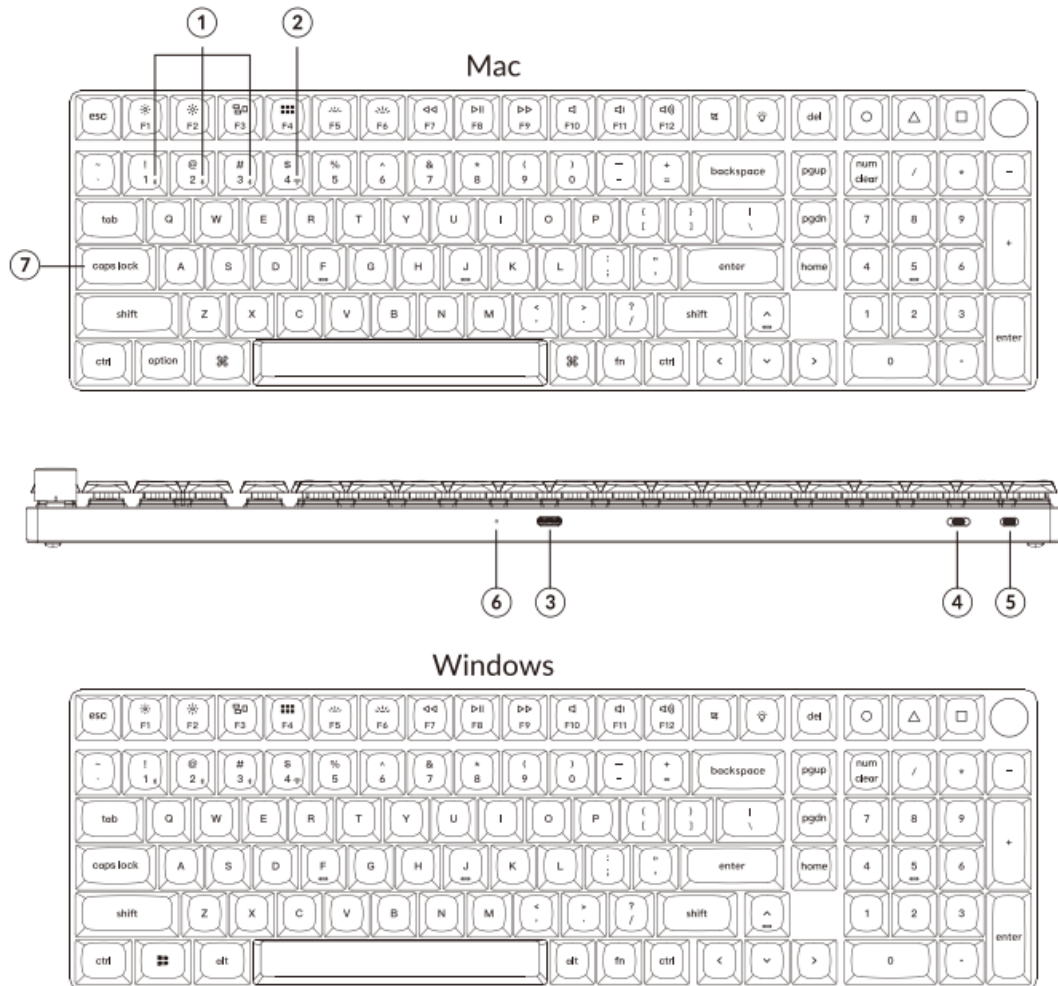


1. Bluetooth Indicator
2. 2.4GHz Indicator
3. T type-C Port
4. 2.4G I Cable / BT (Connection Mode Toggle) @Win/Android Mac/iOS (OS Toggle)
5. Power Indicator
6. Caps Lock Indicator

DEFAULT KEY LAYOUT

 
- **LAYER 0:** This layer will be activated when your keyboard's system toggle is switched to Mac.

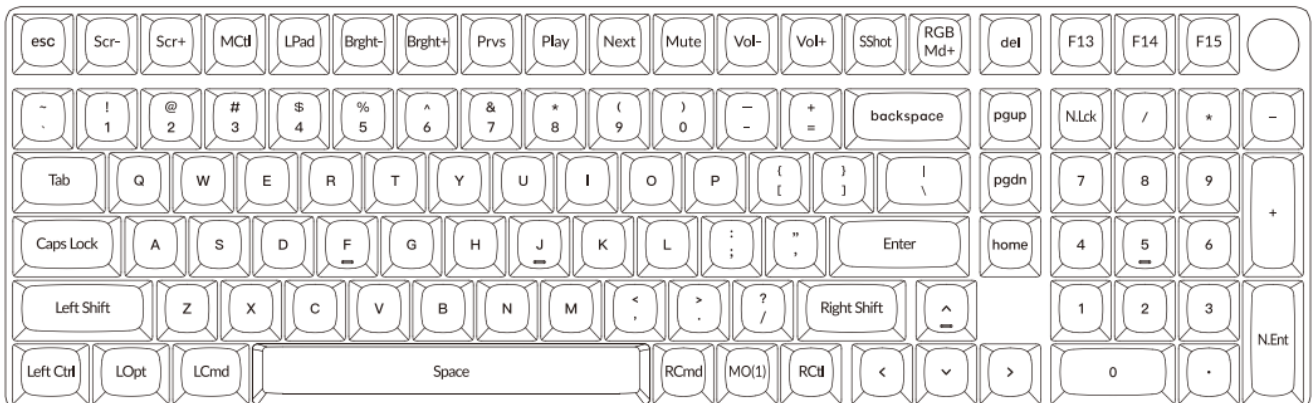

 - **Layer 1:** This layer will be activated when your keyboard's system toggle is switched to Mac and press the fn/MO(1) key.

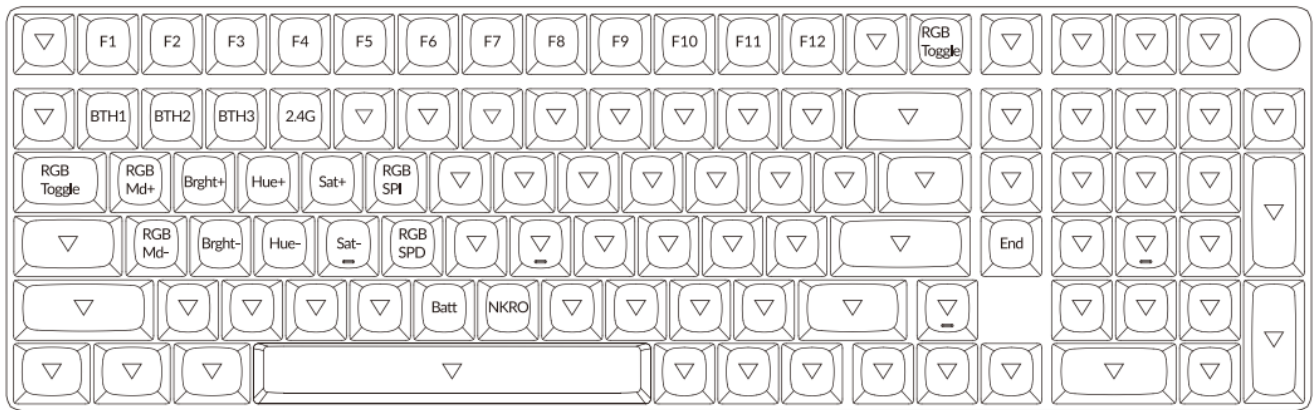


 - **LAYER 2:** This layer will be activated when your keyboard's system toggle is switched to Windows.

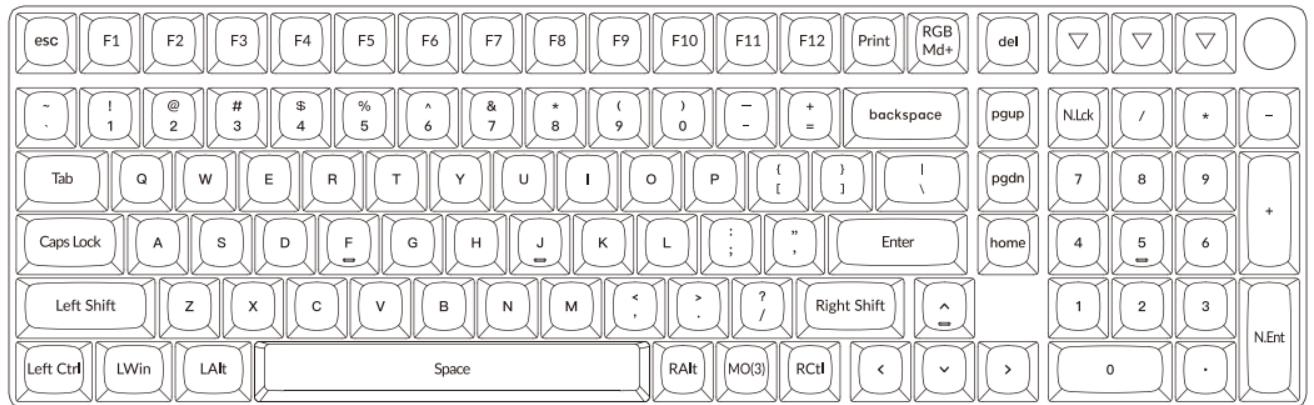

LWin = Left Windows LAlt = Left Alt RAlt = Right Alt RCtrl = Right Ctrl

 - **LAYER 3:** This layer will be activated when your keyboard's system toggle is switched to Windows and press the fn/MO(3) key.

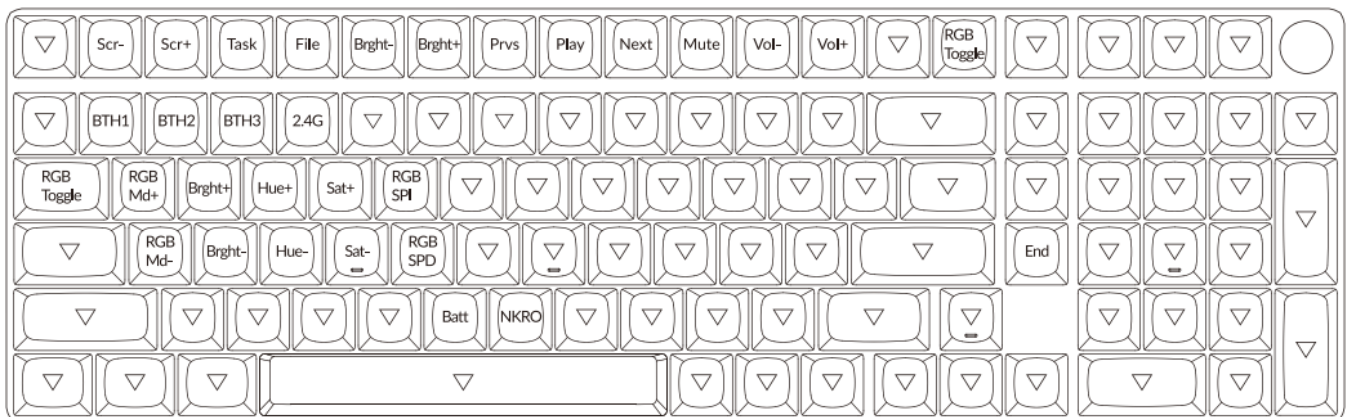

KEY DESCRIPTION

Key Description		Key Description		Key Description	
Scr-	Screen Brightness Decrease	RGBMd-	RGB Mode Previous	NKRO	N-Key rollover
Scr+	Screen Brightness Increase	Hue+	Hue Increase		
Bright-	Backlight Decrease	Hue-	Hue Decrease		
Bright+	Backlight Increase	RGB SPI	RGB Speed Increase		
Prvs	Previous	RGB SPD	RGB Speed Decrease		
Play	Play/Pause	MO(1)	Layer 1 will be activated when holding this key		
Next	Next	MO(3)	Layer 3 will be activated when holding this key		
Mute	Mute	BTH1	Bluetooth Host 1		
Vol-	Volume Decrease	BTH2	Bluetooth Host 2		
Vol+	Volume Increase	BTH3	Bluetooth Host 3		
RGB Toggle	Turn Backlight on/off	2.4G	2.4GHz Host		
RGBMd+	RGB Mode Next	Batt	Battery life		

FUNCTION DESCRIPTION

CHARGING

Plug the cable into a USB port and plug the other end into the keyboard port. Power Indicator: A red light will stay on while charging; Fully charged in around 3 hours, a green power indicator will appear.

- The K17 Max keyboard is compatible with all USB ports. Please use a 5V 1A adapter or USB 3.0 for the best performance. The K17 Max can be charged in 2.4GHz/Cable/Bluetooth mode.
- This product supports up to 5V charging voltage and 1A charging current. We are not responsible for any problems caused by improper charging.

2.4GHZ /CABLE/ BLUETOOTH MODE (MODE TOGGLE) 2.4GHZMODE

1. Connect the 2.4GHz receiver to your device's USB Port.
2. Switch the toggle to the 2.4GHz option. The keyboard will automatically connect to your device.

BLUETOOTH MODE

1. Switch the toggle to the Bluetooth option.
2. Backlighting will be turned on.
3. Hold "fn+1" key for 4 seconds to activate Bluetooth pairing (the Bluetooth indicator fast flashes for 3 minutes to detect pairing).
4. Search for the Bluetooth device "Keychron K17 Max" on your device and connect it (the Bluetooth indicator goes off after successful pairing).

Note: This keyboard supports pairing up to 3 devices simultaneously via key combination "fn" + "1" | "fn" + "2" | "fn"

+ “3”.

- The Bluetooth indicator will continue to flash for 3 minutes.
- Slow or failed connections may exist due to different Bluetooth versions, please make sure all the settings are correct.

SWITCH BWETOOTH DEVICES

Short press key combination “fn” + “1” / “fn” + “2” | “fn” + “3” to switch to other device.

RECONNECT:

1. Switch the keyboard to the Bluetooth option to activate the keyboard.
2. The Bluetooth indicator flashes for 3 seconds and automatically pairs with the last paired device.
3. If the Bluetooth indicator is off, press any button to enter the connection again.

*The keyboard must have been paired with the device to perform this function.

WIRED MODE

1. Switch the toggle to the Cable option .
2. Connect our cable with your PC and keyboard.
3. Backlighting will be turned on.

*Under Wired Mode, keyboard will not enter into Battery Saver Mode.

TURN OFF THE KEYBOARD

Switch the keyboard to the Cable option and unplug the power cable.

BACKLIGHT SETTING

- Short press key combination “fn” + “tab” or “fn” + “knob(press)” turn the backlight on/off.
- Short press key combination “fn” + “Q” or “fn” + “A” to switch between different types of lighting effects.

OS TOGGLE SWITCH

1. MAC/iOS

Switch the toggle to Mac/iOS when the keyboard is connected to a Mac or iOS operating system.

2. WINDOWS/ANDROID

Switch the toggle to Windows/Android when the keyboard is connected to a Windows or Android operating

system. When using the Windows/ Android mode,   keys are used for “Windows” and “Alt” functions.

3. INPUT METHOD SWITCH

1. For iOS:

Input method switch: Ctrl + Space

Caps Lock: Caps (Enable General>Keyboards>Hardware Keyboard>Caps Lock Language Switch)

2. For Android:

Input method switch: Shift+ Space

NOTE: Functions of certain multimedia key may be disabled due to compatibility, versions, brands and drivers of Windows/ Android OS. We also recommend not to switch OS frequently as it may impact keyboard operations.

TROUBLESHOOTING

If unable to pair keyboard to device, confirm that the device you're trying to pair with is Bluetooth-capable. If so, restart the device and try pairing it with the keyboard again.

Note: On a Windows computer, a new Bluetooth connection will sometimes require additional software updates-a process that may still be ongoing after a message appears indicating a successful completion. Wait at least 20 minutes after pairing to make sure all updates are completed before restarting the computer. Confirm that the device is configured to accept Bluetooth connections (Windows) and supports an external keyboard (HID profile).

Go to Bluetooth Devices > Open Settings and select the following:

- Allow Bluetooth devices to find this computer
- Allow Bluetooth devices to connect to this computer
- Alert me when a Bluetooth device wants to connect
- My keyboard isn't working in Bluetooth mode.

For the computer/smartphone:

- Go to your device Bluetooth settings>Select the keyboard and remove/delete/unpair it.
- Then restart your device.

For the keyboard:

- Turn the keyboard off and back on. Then reconnect it to your device.

My keyboard isn't working in 2.4 GHz mode.

Ensure the toggle is set to 2.4 GHz, remove the receiver from your device, and press "fn" + "4" for 4 seconds to force pair, then reinsert the receiver into the device, keeping the keyboard within 20 cm of the receiver for optimal pairing.

Bluetooth connection is interrupted even within 10 meters.

Check if the keyboard is resting on a metal surface that can interfere with the Bluetooth signal.

Third-party input tools are not compatible with the keyboard.

Due to compatibility, versions, brands and drivers of Windows/Android OS, functions of third-party input tools may be affected while using the keyboard. Please make sure your operating system and drivers are up to date.

Certain function keys or multimedia keys do not work.

Functions of certain multimedia keys may be disabled due to compatibility, versions, brands, and drivers of devices.

F1 / F2 / F3 / F4 / F5 / F6 / F7 / F8 / F9 / F10 / F11 / F12


A set of small navigation icons typically found in Beamer presentations, including symbols for back, forward, search, and other slide controls.

- Keep the product, accessories and packaging parts out of the reach of children to prevent any accidents and choking hazards.
- Always keep the product dry to avoid corrosion.
- Do not expose the product to extreme temperatures below -10°C(14°F) or above 50°C(122°F) to preserve the lifespan of the keyboard.

Dover, DE 19901, United States

- <https://www.keychron.com>
- Support@keychron.com
- @keychron
- @@keychron
- @keychronMK
- Designed by Keychron

Documents / Resources

 Keychron <small>K17 Max Wireless Mechanical Keyboard</small>	<p>Keychron K17 Max Wireless Mechanical Keyboard [pdf] User Manual</p> <p>K17 Max Wireless Mechanical Keyboard, K17 Max, Wireless Mechanical Keyboard, Mechanical Keyboard, Keyboard</p>
--	--

- User Manual

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.