

Keychron K4 Max Wireless Mechanical Keyboard User Guide

Home » Keychron » Keychron K4 Max Wireless Mechanical Keyboard User Guide 🖔

Contents


- 1 Keychron K4 Max Wireless Mechanical
- Keyboard
- **2 OVERVIEW**
- 3 1. Comect 24GH Receiver
- 4 2. Connect Bluetooth
- 5 3. Connect Cable
- 6 4. Switch To The Right System
- 7 5. The Backlight
- 8 6. Adjust The Backlight Brightness
- 9 7. The Keychron Launcher App
- 10 8. The Layers
- 11 9. Factory Reset & Firmware Update
- 12 10. Warranty
- 13 Documents / Resources
 - 13.1 References
- **14 Related Posts**

Keychron K4 Max Wireless Mechanical Keyboard

USER GUIDE

If you are a Windows user, please find the appropriate keycaps in the box, then follow the instructions below to find and replace the following keycaps.

OVERVIEW

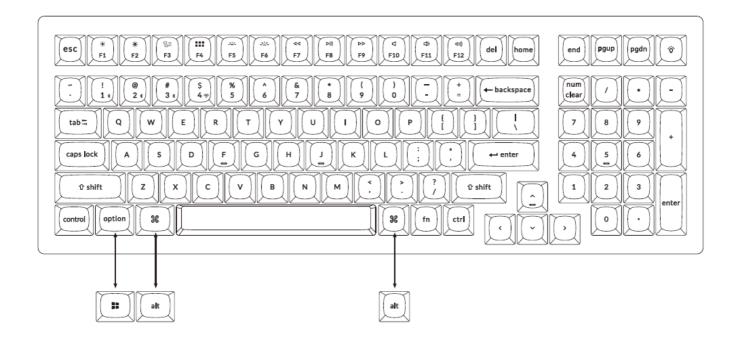


1. Comect 24GH Receiver

Connect the 2.4GHz receiver to the device USB port,



Switch toggle to 2.4GHz mode

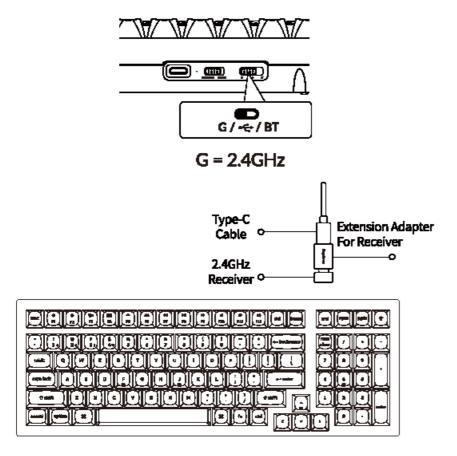


Note: For the best wircl essE'X.perience. recommend using the extension adap for Kevef and putti ng the 2.4GHz receiW!I" some where on your desk close to your rd for a low rate of latency and fewer interferences.


2. Connect Bluetooth




Switch toggle to Bluetooth

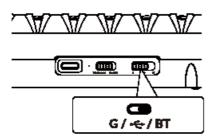


Press fn + 1 (for 4 second.s) and pair with device named Keychron K4 Max.

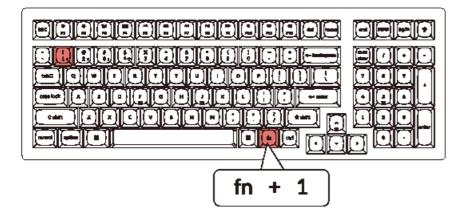

3. Connect Cable

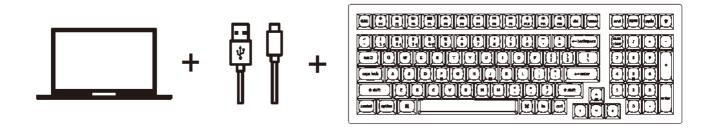


Switch toggle to Cable

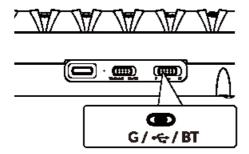


4. Switch To The Right System

Please make sure the system toggle on the top left comer has been switched to the same system as your computer's operating system

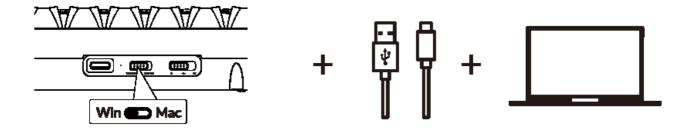


5. The Backlight

Press fn + Q to change the lighting effect

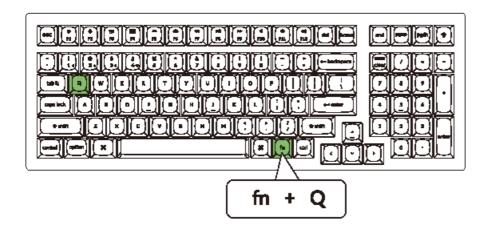


Press fn + tab to turn the backlight on/off

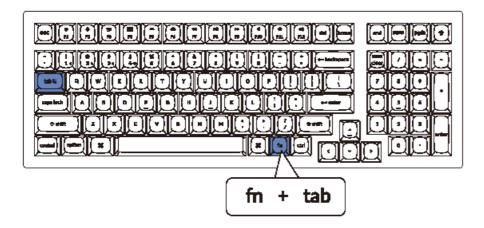


6. Adjust The Backlight Brightness

Press fn + W to increase the backlight brightness

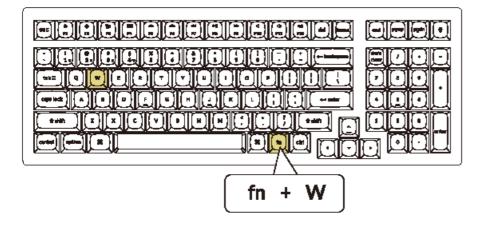

Press fn + S to decrease the backl ight brightness

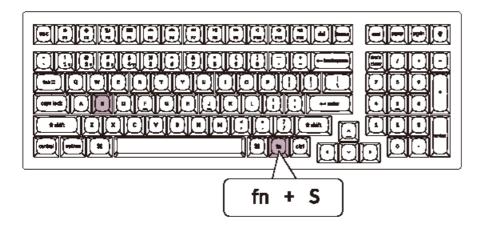

7. The Keychron Launcher App

Please visit launcher.keychron.com to use the online Launcher web app to remap the keys, create macro commands, or flash the firmware. If the launcher cannot recognize your keyboard, please reach our support to get the instructions




^{&#}x27;The online Lau ncher can only run on the latest version of Chrome, Edge, and Opera browsers.


8. The Layers

^{&#}x27;The Launcher only works when the keyboard is connected by wire to the computer


There are four layers of key settings on the keyboard. The layer O and layer 1 are for the Mac system. The layer 2 and layer 3 are for the Windows system.

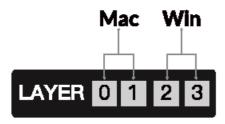


If your system toggle is switc.hed to Mac, then the layer O will be activated.

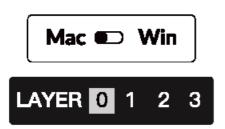

If your system toggle is switched to Windows, then the layer 2 will be activated. Remember that if you are using it in Windows mode, please make changes to the layer 2 instead of the top layer (the layer 0). This is a common mistake people are making.

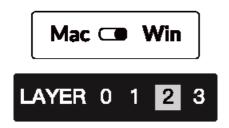

9. Factory Reset & Firmware Update

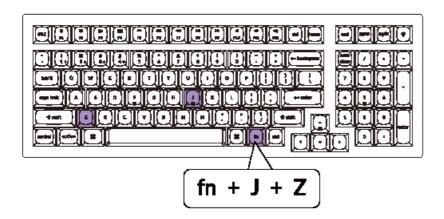

Troubleshooting? Don't know what's going on with the keyboard?

Factory reset your keyboard

- 1. Power on your keyboard.
- 2 .P ress and hold fn + J + Z (for 4 seconds). The keyboard backlight will flash in red quickly for 3 seconds, indicating that the keyboard has been reset

Flash your keyboard firmware

- 1. Vis it launcher.keychron.com to open the online Launcher web app.
- 2. Ensure the keyboard is in Cable or Wired mode and plug in the power cable.
- 3 .F ind the 'Firmware Update' tab on the left side of the Launcher and connect your keyboard with it
- 4. Follow the instructions on the Launcher and complete the firmware update.

'Step-by-step guide, search the keyword "firmware" on keychron.com.

10. Warranty

The keyboard is highly customizable and easy to be rebuilt.

If anything goes wrong with any of the keyboard components of keyboard during the warranty period, we will only replace the defective parts of the keyboard, not the whole keyboard



Documents / Resources



Keychron K4 Max Wireless Mechanical Keyboard [pdf] User Guide

K4 Max Wireless Mechanical Keyboard, K4 Max, Wireless Mechanical Keyboard, Mechanical K eyboard, Keyboard

References

User Manual

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.