

  
Keychron  
L4 Wireless  
Custom  
Gaming  
Keyboard



# Keychron L4 Wireless Custom Gaming Keyboard User Guide

[Home](#) » [Keychron](#) » Keychron L4 Wireless Custom Gaming Keyboard User Guide 

## Contents

- [1 Keychron L4 Wireless Custom Gaming Keyboard](#)
- [2 Connect 2.4 GHz Receiver](#)
- [3 Connect Bluetooth](#)
- [4 Connect Cable](#)
- [5 The Lemokey Launcher Ap](#)
- [6 Switch to Mac](#)
- [7 The Backlight](#)
- [8 Adjust The Backlight Brightness](#)
- [9 Adjust The Backlight Speed](#)
- [10 The Key Rollove](#)
- [11 Factory Reset & Firmware Update](#)
- [12 Documents / Resources](#)
  - [12.1 References](#)
- [13 Related Posts](#)

  
Keychron

**Keychron L4 Wireless Custom Gaming Keyboard**




## Connect 2.4 GHz Receiver


Connect the 2.4GHz receiver to the device USB port.



Switch toggle to 2.4GHz mode

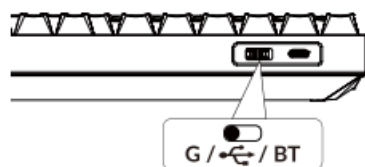

G = 2.4GHz

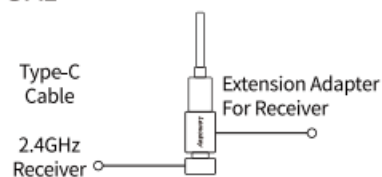


**Note:** For the best wireless experience, we recommend using the extension adapter for receiver and putting the 2.4GHz receiver somewhere on your desk close to your keyboard for a low rate of latency and fewer signal interferences.


## Connect Bluetooth



Switch toggle to Bluetooth

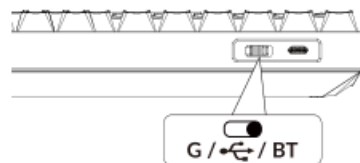

Press Fn + 1 (for 3 seconds) and pair with device named Lemokey L4.

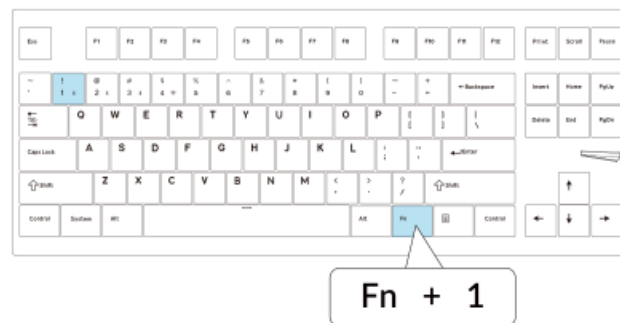


## Connect Cable




+



+

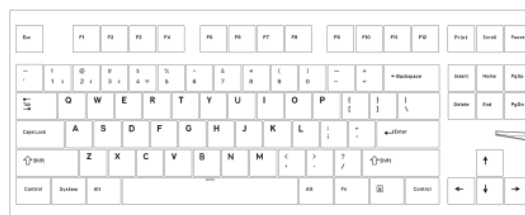

Switch toggle to Cable

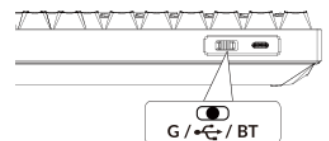

## The Lemokey Launcher Ap



Please visit [launcher.lemokey.com](https://launcher.lemokey.com) to use the online Launcher web app to remap the keys, create macro commands, or flash the firmware. If the Launcher cannot recognize your keyboard, please reach our support to get the instructions.



- ## Switch to Mac




- ## The Backlight




- ## Adjust The Backlight Brightness

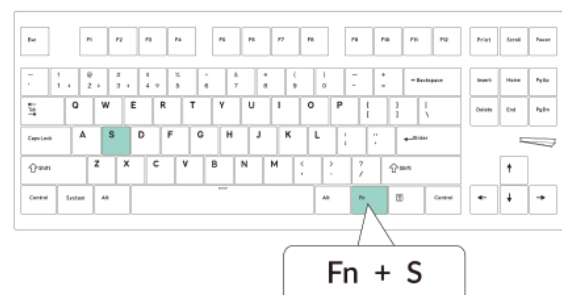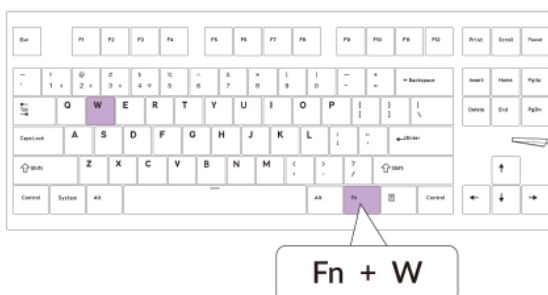

- ## Adjust The Backlight Speed

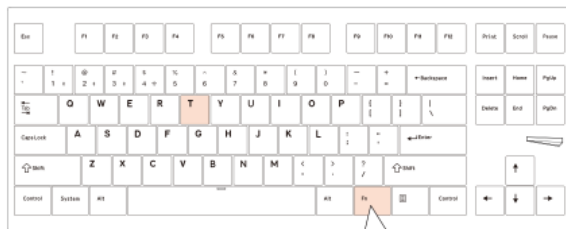

Fn + T

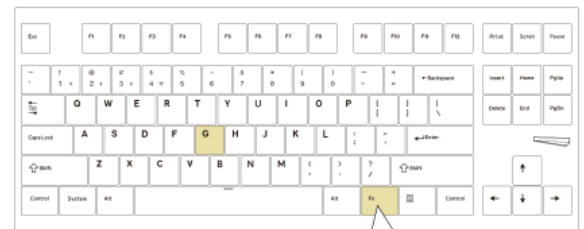


Fn + G

- Press Fn + T to increase the light effect speed
- Press Fn + G to decrease the light effect speed

## The Key Rollove


Press Fn + N to switch N-key rollover / 6-key rollover

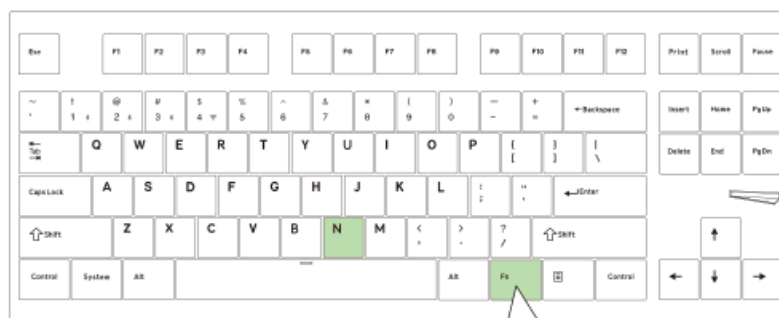

Fn + N

- **6-key rollover:** the keyboard can detect up to 6 simultaneous key inputs. N-key rollover: the keyboard can detect all key inputs without limit to the number of key presses.
- The keyboard turns on the 6-key rollover by default.

## Factory Reset & Firmware Update

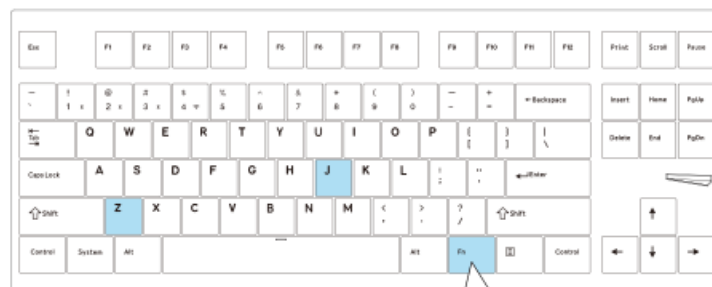

Fn + J + Z

## Troubleshooting?

Don't know what's going on with the keyboard? Factory reset your keyboard

1. Power on your keyboard.


- 
2. Press and hold fn + J + Z (for 4 seconds). The keyboard backlight will flash in red quickly for 3 seconds, indicating that the keFlash your keyboard firmware yboard has been reset.

## Flash your keyboard firmware

1. Visit [launcher.lemokey.com](https://launcher.lemokey.com) to open the online Launcher web app.
2. Ensure the keyboard is in Cable or Wired mode and plug in the power cable.
3. Find the 'Firmware Update' tab on the left side of the Launcher and connect your keyboard with it.
4. Follow the instructions on the Launcher and complete thefirmware update.

Step-by-step guide, search the keyword "firmware" on [lemokey.com](https://lemokey.com).

## Documents / Resources

	<a href="#">Keychron L4 Wireless Custom Gaming Keyboard</a> [pdf] User Guide L4 Wireless Custom Gaming Keyboard, L4, Wireless Custom Gaming Keyboard, Custom Gami ng Keyboard, Gaming Keyboard, Keyboard
---	--

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.