

keychron Type-A M7 Wireless Mouse User Manual

Home » Keychron » keychron Type-A M7 Wireless Mouse User Manual






Contents

- 1 Type-A M7 Wireless Mouse
- 2 3 Modes of connection
- 3 Blutooth mode
- 4 Status indicator
- **5 Report Rate indicator**
- 6 How to factory reset
- 7 Charging indicator explanation
- 8 What's in the box
- 9 Mouse specification
- 10 Documents / Resources
 - 10.1 References
- 11 Related Posts

Type-A M7 Wireless Mouse

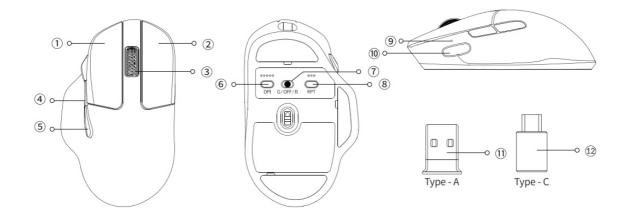


- 1. Left button
- 2. Right button
- 3. Middle wheel button
- 4. Forward button
- 5. Backward button
- 6. DPI button
- 7. Modes toggle
- 8. Report rate button
- 9. Mouse indicator
- 10. Macro Button
- 11. 4GHz Type A receiver
- 12. 4GHz Type C receiver

3 Modes of connection

Wired mode

- 1. When the mode switch is in "OFF" position, the mouse won't respond if the cable is not connected.
- 2. Connect the cable to the TYPE-C port of the mouse and the USB port on the device. The mouse is ready to use while the indicator lights up.

When connected by cable, the mode will default to wired mode even if the toggle is in Bluetooth mode or 2.4GHz mode.

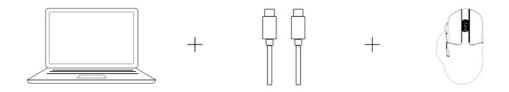

2.4 GHz Mode

- 1. Switch to "G" mode (2.4GHz mode), and the mouse will automatically turn on 2.4GHz paring. The mouse indicator will slowly flash green.
- 2. Find the 2.4GHz receiver and connect it to the device's USB/Type-C port. Once successfully connected, the


mouse indicator will turn green and stay on for 3 seconds before dimming off. The mouse is now ready for use.

3. In 2.4GHz paring mode, the mouse indicator will slowly blink green for 3 minutes. If the mouse is not connected within 3 minutes, the indicator will turn off. If you need to reconnect, hold both the "Left button + Forward button" for 4 seconds to re-enter pairing mode.

If you need to repair the connection in 2.4GHz mode, please unplug the 2.4GHz receiver first. Then, hold both the "Left button +


Forward button" for 4 seconds, wait for the green light indicator to start flashing, and plug the 2.4GHz receiver back in to complete the pairing process.

Note: It is recommended that when pairing the M7 in 2.4GHz mode, the mouse should be within 20cm of the receiver.

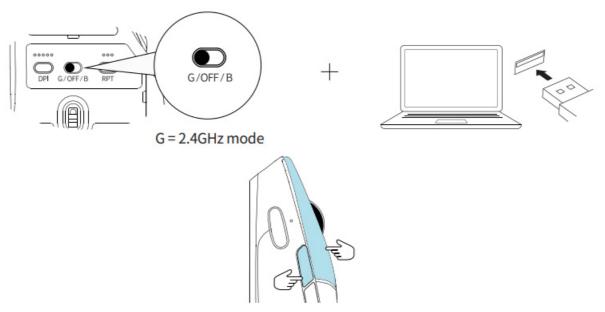

simultaneously hold for 4 seconds (to enter the forced paring mode)


Note: For the best wireless experience, we recommend using the cable and putting the 2.4GHz receiver somewhere on your desk close to your mouse for a lower rate of latency and fewer signal interferences.

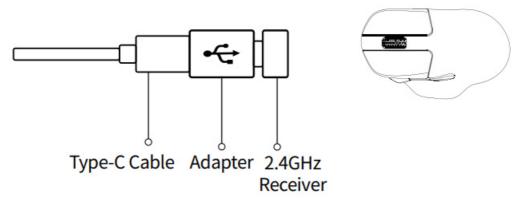

Blutooth mode

- 1. Switch to "B" Mode (Bluetooth), and the mouse will automatically turn on Bluetooth pairing mode. The mouse indicator will slowly flash blue.
- 2. Open the Bluetooth settings, search for a device named "Keychron M7", then click "connect" to complete paring.
- 3. When in Bluetooth pairing mode, the mouse indicator will slowly blink in blue for 3 minutes. If it's not connected within 3 minutes, the mouse indicator will turn off. If you need to reconnect, you need to hold the "Left button + Forward button" for 4 seconds to re-enter pairing mode. The indicator will slowly blink blue.
- 4. If the M7 is in Bluetooth mode and needs to pair with a new device, hold both the "Left button + Forward button"

for 4 seconds and wait for the blue light to flash on. At this point, Bluetooth has re-entered pairing mode, and you can connect the new device to the M7.

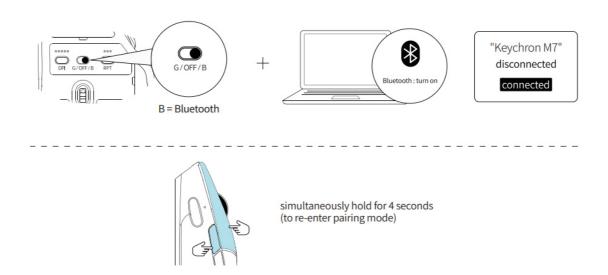


Status indicator

2.4GHz Mode	*The mouse indicator slowly blinks green – Ready to be paired. *The mouse indicator quickly blinks green – Pairing with the previous d evice.
Bluetooth Mode	*The mouse indicator slowly blinks blue – Ready to be paired. *The mouse indicator quickly blinks blue – Pairing with the previous device.
Low Power	The mouse indicator will slowly blink red.



DPL indicator


White light	400 DPI
Green light	800 DPI
Blue light	1600 DPI (default)
Yellow light	3200 DPI
Red light	5000 DPI

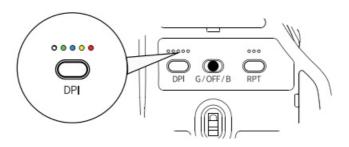

Report Rate indicator


*Report Rate = Polling Rate

Whitelight	125hz Defauitn Bluetooth mode)
Bluelight	500hz
Redlight	1000hz Defaultin wired &:24GHz mode)

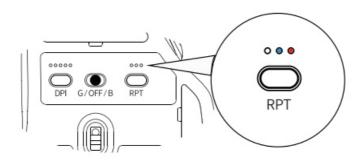

How to factory reset

Hold down both the "DPI" button and "Report Rate" button for 4 seconds, and all the LED lights on the mouse will blink. It will blink three times to indicate that the factory reset is successful.

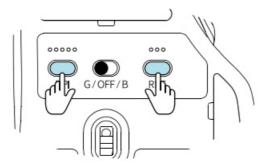

simultaneously hold for 4 seconds (starts factory reset)

Auto-Sleep mode

Auto-Sleep mode will ot be activated when in wired mode. When i 2.4GHz mode or luetooth mode, the mouse will go to Auto-Sleep mode afer 15 minutesofsiting idleto save the battery. Moveor click the mouse o walke t up.

Driver Software

"The Keychron 7 mouse diiver can be downloaded from <u>wikeychron.com</u>. I the drver sftware can't connect o the mouse, please contact s or technical support

Charging indicator explanation

Fully Charged	The mouse indicator i stay GREEN.
LowPower	"The mouse indicator will skowly bink RED.

- The mouse is compatible with all USB ports. For the best signal and charging speed, connecting to the USB3.0 port is recommended when charging or in use.
- If the mouse is connected by the USB Type C cable when charging but not paired with any devices:
- · The mouse indicator will stay RED when charging.
- The mouse indicator will stay GREEN when fully charged.

Note: The product supports up to 5V charging voltage and 300 mA charging current. We are not responsible for any problems caused by improper recharging.

What's in the box

Type – C receiver x 1
User manual x 1
Mouse x 1
Extension Adapter x 1
Type – C Cable x 1 Type – A receiver x 1
Type – A to Type – C adapter x 1

Mouse specification

Size: 127.7*77.1*40.5mm

Weight: 63 ± 3g

Report Rate(polling rate): 125(White) – 500(Blue) – 1000(Red)

Sensor: PixArt 3395

Resolution: 100 - 26000DPI

Mouse micro switches: Huano Micro Switch (80 million clicks life time) 2.4GHz / Bluetooth connection range: Approx 10m of open space

Battery capacity: 600mAh Usage duration: 70 Hours Recharge time: 2 Hours Charging port: Type – C

Connection mode: 2.4GHz - Bluetooth - Wired

Device name: Keychron M7

Keychron, Inc.
Dover, DE 19901, United States
Find us at: https://www.keychron.com
Support@keychron.com

@keychron

@keychron

@keychronMK
Designed by Keychron
Made in China

Documents / Resources



keychron Type-A M7 Wireless Mouse [pdf] User Manual

Type-A, Type-C, Type-A M7 Wireless Mouse, Type-A, M7 Wireless Mouse, Wireless Mouse, Mo

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.