



Keychron V2 Non-Knob Version Keyboard User Guide

[Home](#) » [Keychron](#) » Keychron V2 Non-Knob Version Keyboard User Guide 

Contents

- [1 Keychron V2 Non-Knob Version Keyboard](#)
- [2 Switch To The Right System](#)
- [3 The VIA Key Remapping Software](#)
- [4 The Layers](#)
- [5 Multimedia Key and Function Key](#)
- [6 The Backlight](#)
- [7 Adjust The Backlight Brightness](#)
- [8 Adjust The Backlight Speed](#)
- [9 Warranty](#)
- [10 Watch The Building Tutorial On Our Website](#)
- [11 Factory Reset](#)
- [12 Troubleshooting](#)
- [13 Documents / Resources](#)
- [14 Related Posts](#)

 


Keychron V2 Non-Knob Version Keyboard



Switch To The Right System

Please make sure the system toggle on the top left corner has been switched to the same system as your computer's operating system.

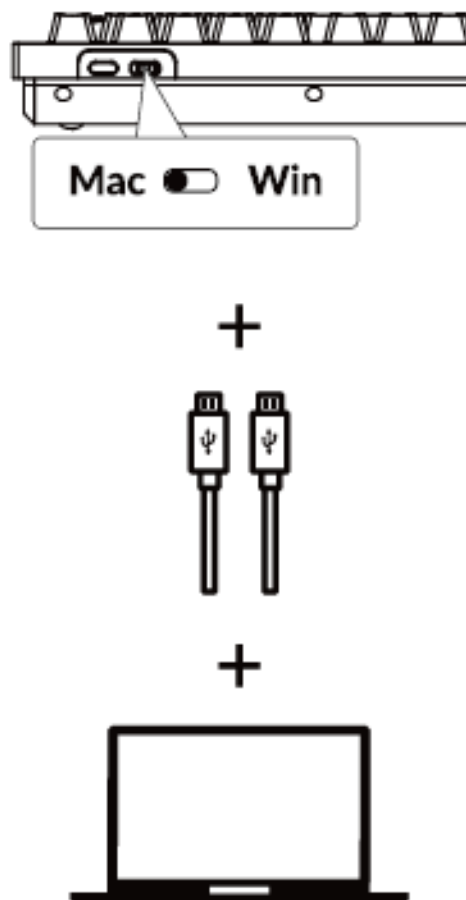


The VIA Key Remapping Software

Please visit caniusevia.com to download the latest VIA software to remap the keys. If the VIA software cannot recognize your keyboard, please reach out to our support to get the instruction.



The Layers

 - There are five layers of key settings on the keyboard.
- The layer 0 is for the Mac system.
- The layer 1 is for the Windows system.
- The layer 2 is for the Mac Multimedia keys.
- The layer 3 is for the Windows Multimedia keys.
- The layer 4 is for the Function keys.

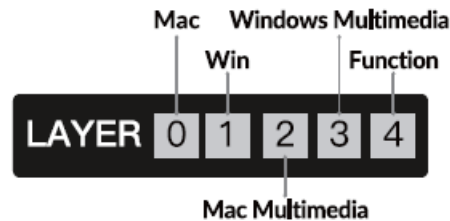

- If your system toggle is switched to Mac, then the layer 0 will be activated.

 


- If your system toggle is switched to Windows, then the layer 1 will be activated.



Multimedia Key and Function Key


Multimedia keys



Function keys

 
F1 / F2 / F3 / F4 / F5 / F6 / F7 / F8 / F9 / F10 / F11 / F12

In order to get Multimedia Key, you need to press fn1 and  Key.


In order to get Function Key, you need to press fn2 and  Key.

The Backlight

- Press fn1 + Q to change the lighting effect

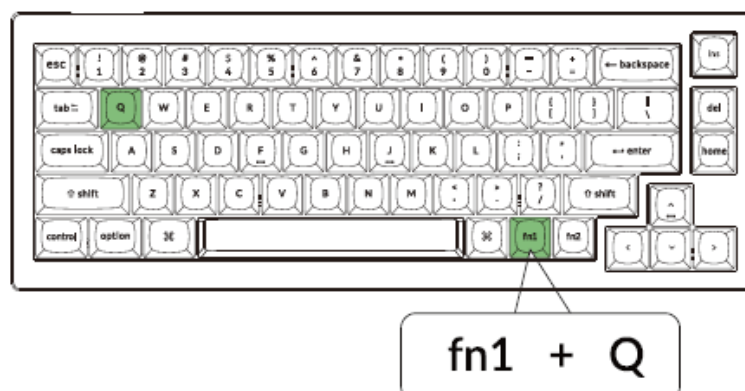


 - Press fn1 + tab to turn the backlight on/off

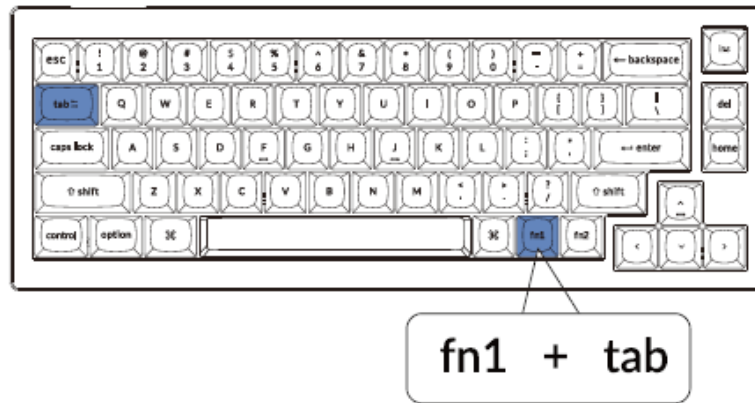


Adjust The Backlight Brightness

 - Press fn1 + W to increase the backlight brightness

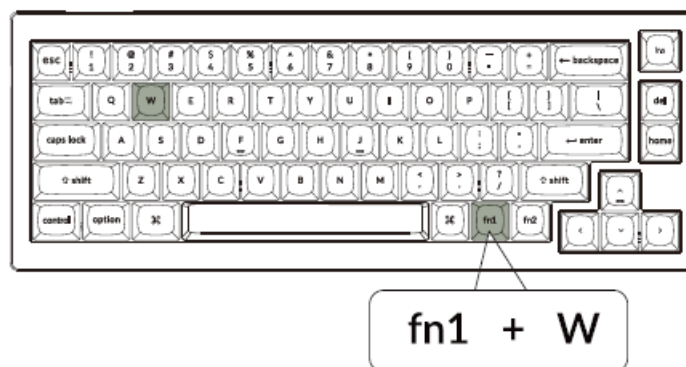


 - Press fn1 + S to decrease the backlight brightness

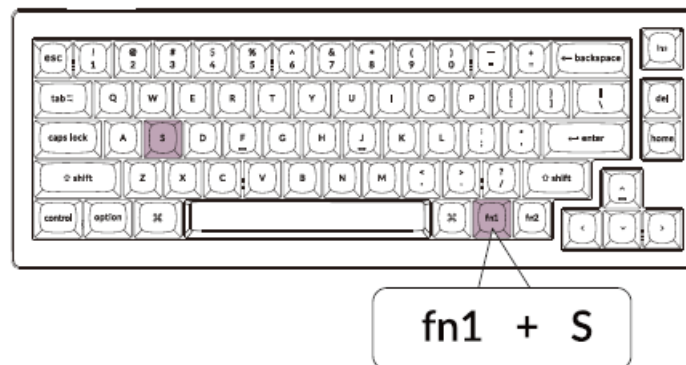


Adjust The Backlight Speed

 - Press fn1+T to increase the light effect speed

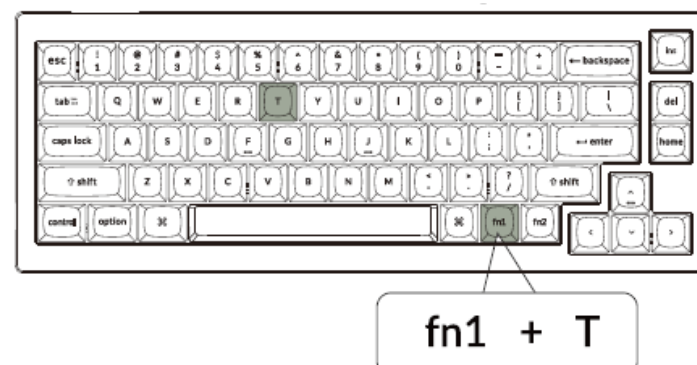

 - Press fn1+G to decrease the light effect speed

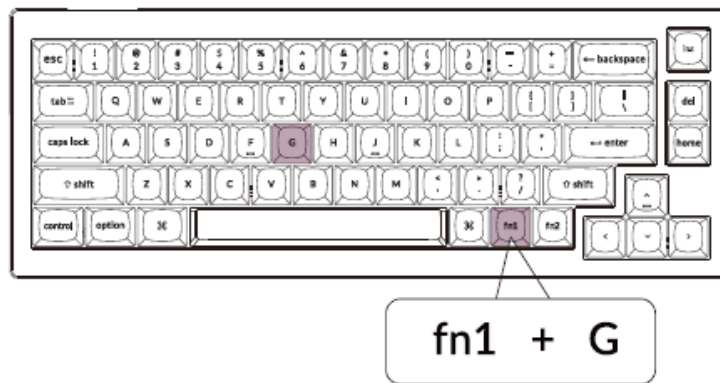

Warranty

 
The keyboard is highly customizable and easy to be rebuilt. If anything goes wrong with any of the keyboard components of keyboard during the warranty period, we will only replace the defective parts of the keyboard, not the whole keyboard.



Watch The Building Tutorial On Our Website

If you are building the keyboard for the first time, we highly recommend you watch the building tutorial video on our website first, then start building the keyboard yourself.

Factory Reset

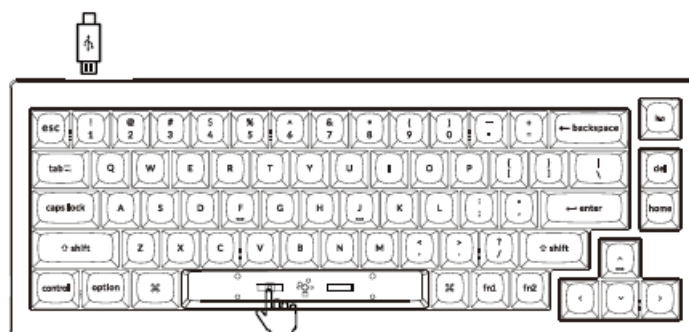


Troubleshooting

Don't know what's going on with the keyboard?

1. Try factory reset by pressing fn1 + J + Z (for 4 seconds).
2. Download the right firmware for your keyboard from our website.
3. Remove the power cable from the keyboard.
4. Remove the space bar keycap to find the reset button on the PCB.

5. Hold the reset key while plugging in the power cable and then release the reset key. The keyboard now will enter DFU mode.
6. Flash the firmware with the QMK Toolbox.
7. Factory reset the keyboard again by pressing fn1 + J + Z (for 4 seconds).
8. Step by step guide can be found on our website.

Documents / Resources

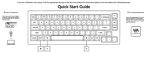	Keychron V2 Non-Knob Version Keyboard [pdf] User Guide V2 Non-Knob Version Keyboard, V2, Non-Knob Version Keyboard, Version Keyboard, Keyboard
---	---

[Manuals+.](#)