



 
Keychron V4 Max QMK VIA Wireless Custom Mechanical Keyboard User Guide

[Home](#) » [Keychron](#) » Keychron V4 Max QMK VIA Wireless Custom Mechanical Keyboard User Guide 

Keychron V4 Max QMK VIA Wireless Custom Mechanical Keyboard User Guide

If you are a Windows user, please find the appropriate keycaps in the box, then follow the instructions below to find and replace the following keycaps.

Quick Start Guide

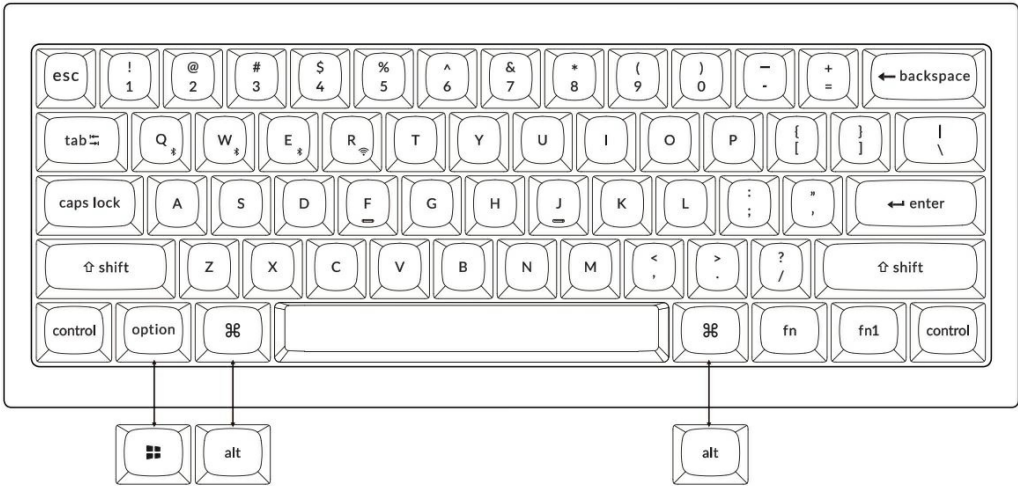

Contents

 
- 1 1 Connect 2.4GHz Receiver
- 2 2 Connect Bluetooth
- 3 3 Switch To The Right System
- 4 4 Connect Cable
- 5 5 The VIA Key Remapping Software
- 6 6 The Layers
- 7 7 The Backlight
- 8 8 Adjust The Backlight Brightness
- 9 9 Warranty
- 10 10 Factory Reset
- 11 Documents / Resources
 - 11.1 References

1 Connect 2.4GHz Receiver


Connect the 2.4GHz receiver to the device USB port.



Switch toggle to 2.4GHz mode

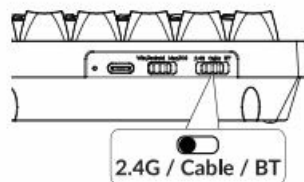


 2.4G = 2.4GHz

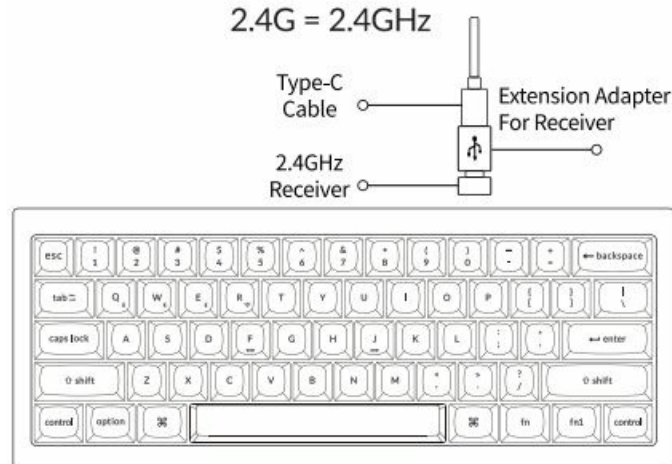


Note: For the best wireless experience, we recommend using the extension adapter for receiver and putting the 2.4GHz receiver somewhere on your desk close to your keyboard for a low rate of latency and fewer signal interferences.

 2 Connect Bluetooth

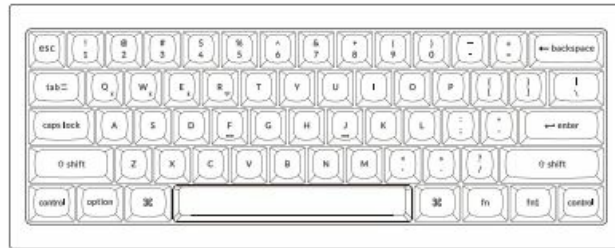


Switch toggle to Bluetooth

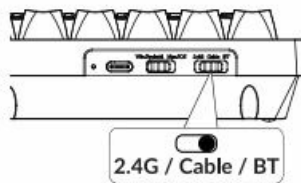 

Press fn + Q (for 4 seconds) and pair with device named Keychron V4 Max.




 3 Switch To The Right System

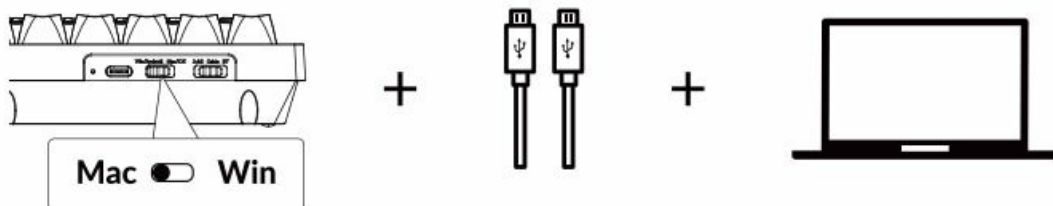

Please make sure the system toggle on the top left corner has been switched to the same system as your computer's operating system.

 4 Connect Cable

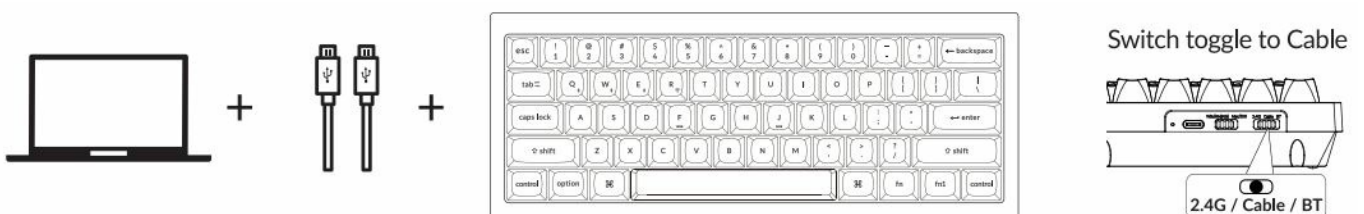

5 The VIA Key Remapping Software



Please visit usevia.app to use the online VIA software to remap the keys.

If the VIA cannot recognize your keyboard, please reach our support to get the instruction.

*The online VIA software can only run on the latest version of Chrome, Edge, and Opera browsers yet.

*VIA only works when the keyboard is connected by wire to the computer.

6 The Layers

There are five layers of key settings on the keyboard. The layer 0 is for the Mac system. The layer 1 is for the Windows system. The layer 2 is for the Mac Multimedia keys. The layer 3 is for the Windows Multimedia keys. The layer 4 is for function keys.



If your system toggle is switched to Mac, then the layer 0 will be activated.



If your system toggle is switched to Windows, then the layer 1 will be activated.



7 The Backlight

Press fn + A to change the lighting effect



Press fn + caps lock to turn the backlight on/off



8 Adjust The Backlight Brightness

Press fn + S to increase the backlight brightness



Press fn + X to decrease the backlight brightness



 
9 Warranty

The keyboard is highly customizable and easy to be rebuilt.

If anything goes wrong with any of the keyboard components of keyboard during the warranty period, we will only replace the defective parts of the keyboard, not the whole keyboard.



10 Factory Reset

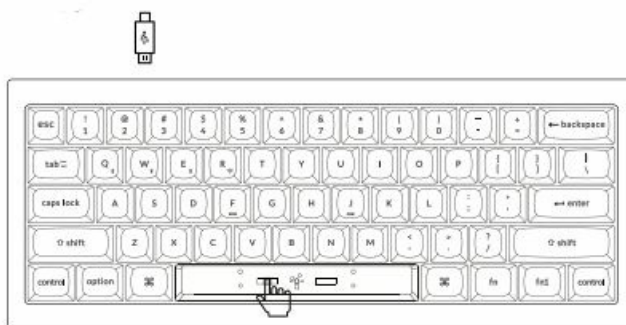

Troubleshooting? Don't know what's going on with the keyboard?

1. Download the right firmware and QMK Toolbox from our website.
2. Unplug the power cable and switch the keyboard to Cable mode.
3. Remove the space bar keycap to find the reset button on the PCB.
4. Hold the reset key first, then plug the power cable into the keyboard.
Release the reset key after 2 seconds, and the keyboard will now enter DFU mode.
5. Flash the firmware with the QMK Toolbox.
6. Factory reset the keyboard by pressing fn1 + J + Z (for 4 seconds).
‘Step by step guide can be found on our website.



support@keychron.com

Documents / Resources



[Keychron V4 Max QMK VIA Wireless Custom Mechanical Keyboard](#) [pdf] User Guide
V4 Max, V4 Max QMK VIA Wireless Custom Mechanical Keyboard, QMK VIA Wireless Custom Mechanical Keyboard, Wireless Custom Mechanical Keyboard, Custom Mechanical Keyboard, Mechanical Keyboard, Keyboard

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.