



KHOMO GEAR B0BYBBGPFY Fixed Frame Projector Screen Instruction Manual

[Home](#) » [KHOMO GEAR](#) » **KHOMO GEAR B0BYBBGPFY Fixed Frame Projector Screen Instruction Manual** 



KHOMO GEAR

SMART LIVING

**B0BYBBGPFY Fixed Frame Projector Screen
Instruction Manual**



Contents

1 Directions:

2 Parts Included:

3 Documents / Resources


 
 









4 Related Posts

Directions:


To ensure the performance of your screen, please note the following points:

1. When installing the screen, find a floor or counter top of the correct size. It's best to cover it with a clean cloth sheet or another soft material so the screen does not get damaged.
2. Do not write or mark the screen or the frame.
3. Do not use sharp or hard objects on the screen to avoid scratches or damage.
4. Avoid touching the white part of the screen with your hands.
5. Do not use a corrosive detergent to clean the screen. For cleaning use a soft clean cloth to remove dust.
6. During installation, please take it lightly and keep children away.

 
Parts Included:

	Long Frame x2		Corner Plate x4		Hanging Bracket x2
	Short Frame x2		Spring Hook x1		Corner Plate Screws x16
	Long Fiberglass Rod x2		Springs x44		Wall Anchors x6
	Short Fiberglass Rod x2				Wall Screws x6
	Screen x1				


1. Place the four frames facing down onto the floor or countertop (as the image), and screw the corner plates into place by using the corner plate screws.

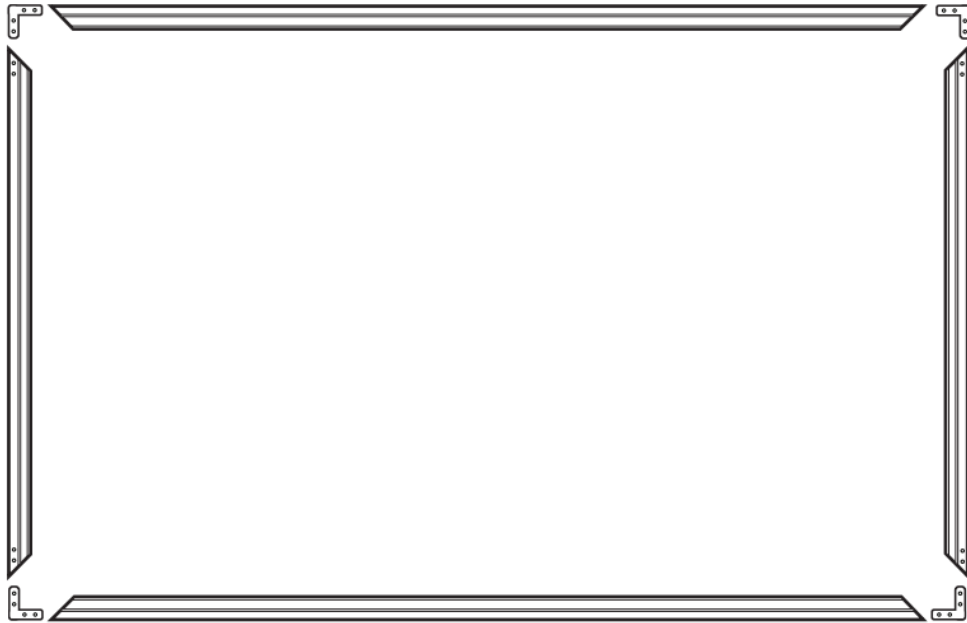

2. For this step we recommend washing your hands, avoid touching the white side of the screen, and use a clean cloth sheet underneath. Roll out the projector screen with the black side facing up, and slide the fiberglass rods into the four side pockets of the screen.

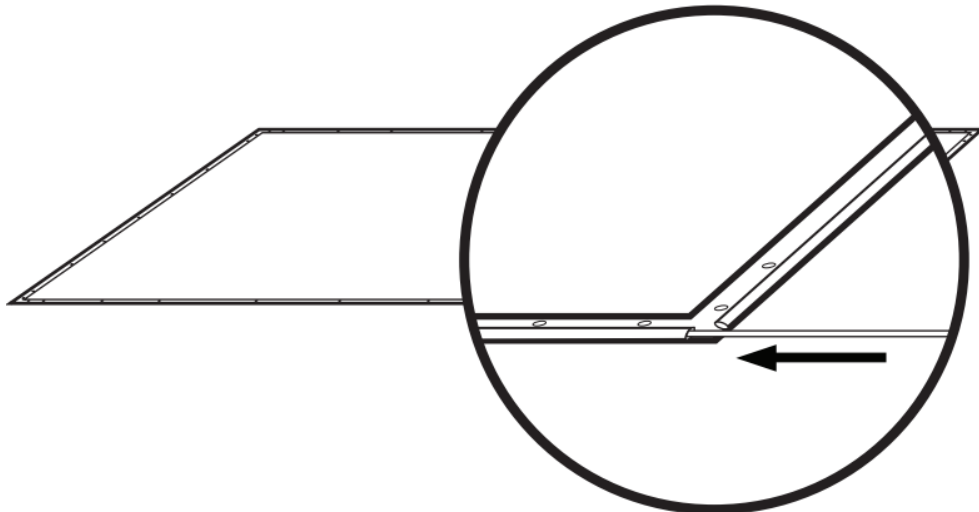


3. Place the screen with the white side facing down on top of the facing down frame to hook the springs. Start by placing the spring in the middle part of the screen (3-4 on each side), pulling them toward the frame.

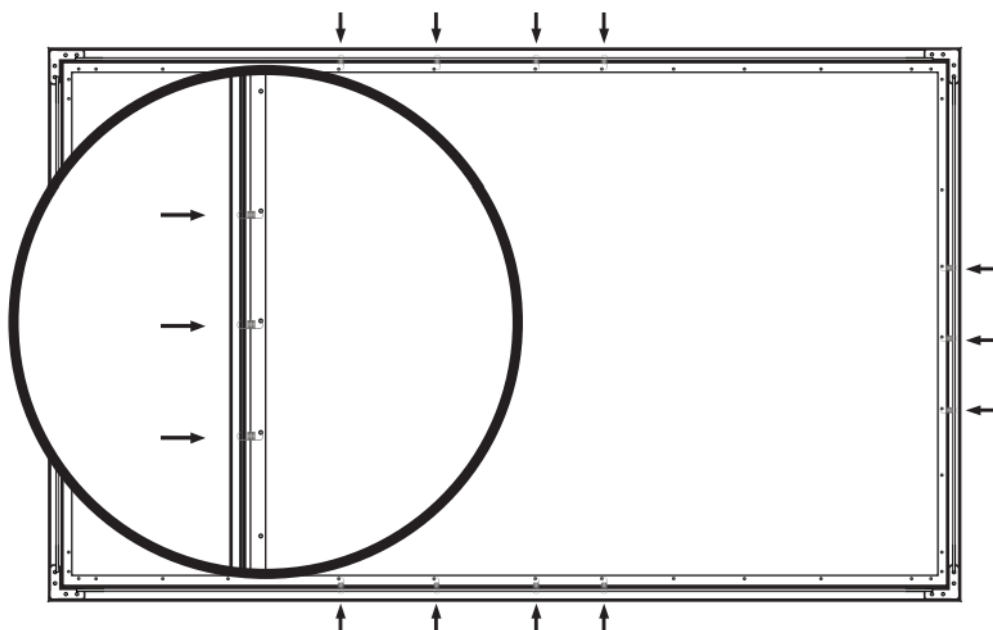


4. Continue to hook the corner springs toward the frame, then complete the remaining springs until the screen is


completely stretched out.

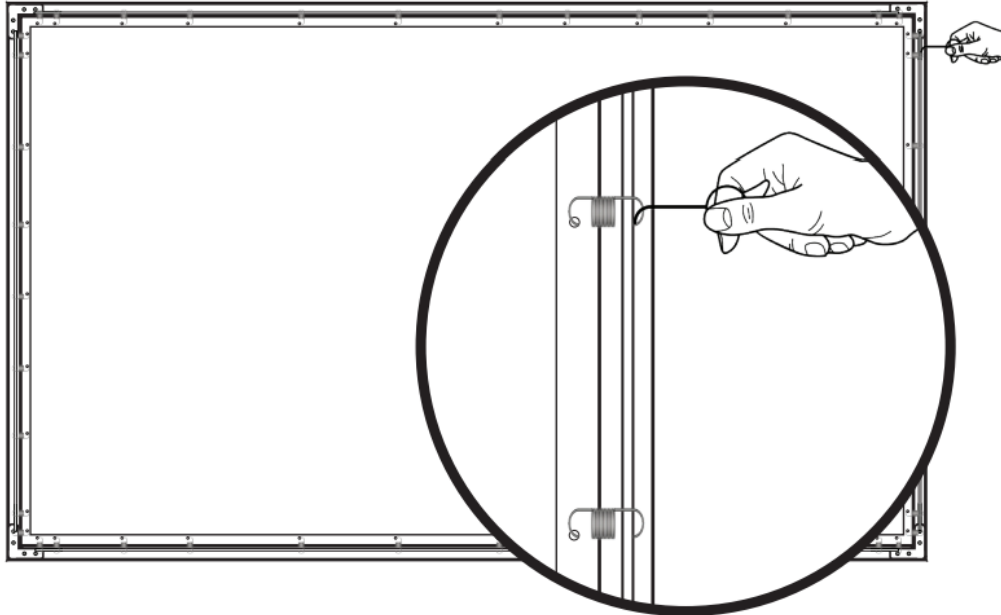

5. Measure the area where the projector screen is going to be hung. Install the brackets at the least 50-inch apart, and make sure there are aligned. Use a power drill to make the holes. Insert the anchors then place the brackets and screws into place.

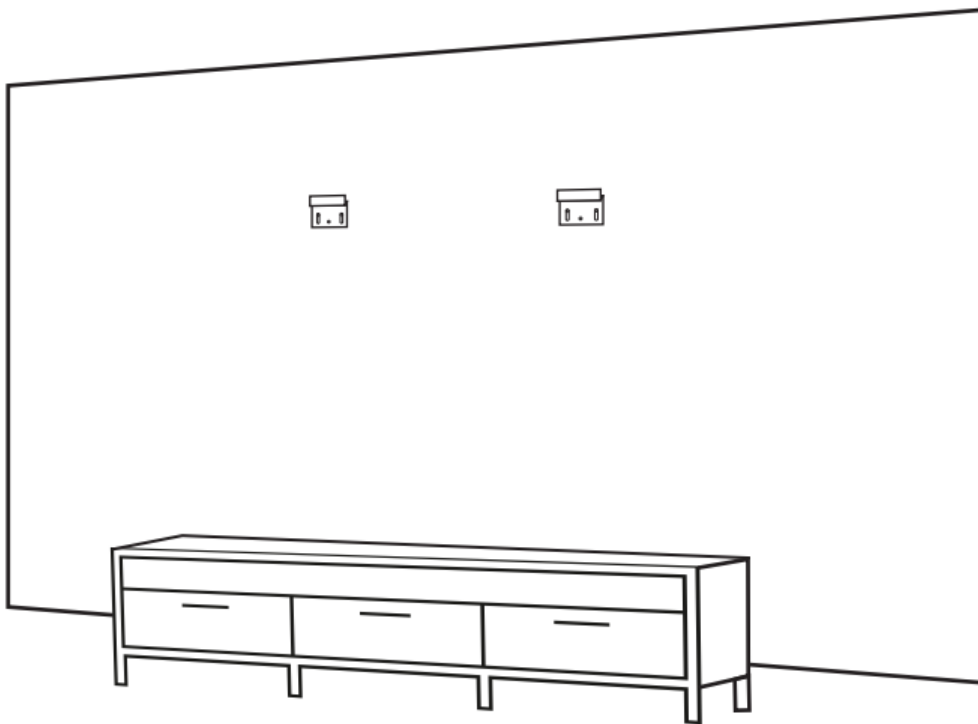

6. Hang your projector screen and Enjoy!

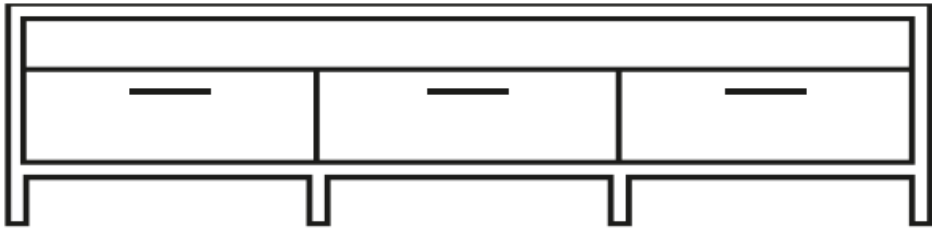

KHOMO GEAR
SMART LIVING

Documents / Resources

	<p>KHOMO GEAR B0BYBBGPFY Fixed Frame Projector Screen [pdf] Instruction Manual B0BYBBGPFY Fixed Frame Projector Screen, B0BYBBGPFY, Fixed Frame Projector Screen, P rojector Screen, Screen</p>
---	---