



KICKASS KAODCPPROV4 Multimedia Projector User Manual

[Home](#) » [KICKASS](#) » KICKASS KAODCPPROV4 Multimedia Projector User Manual 

Contents

- [1 KICKASS KAODCPPROV4 Multimedia Projector](#)
- [2 Important Safeguards](#)
- [3 Accessories List](#)
- [4 Specification](#)
- [5 Multimedia Supported Files](#)
- [6 Ports](#)
- [7 Panel Functions](#)
- [8 Function Operation](#)
- [9 Power On/Off](#)
- [10 Focus/Keystone](#)
- [11 Standard Setting](#)
- [12 Multimedia Play](#)
- [13 Signal Source Settings](#)
- [14 iOS Cast](#)
- [15 OUR GUARANTEE](#)
- [16 FCC Statement](#)
- [17 Documents / Resources](#)
- [18 Related Posts](#)



KICKASS KAODCPPROV4 Multimedia Projector



Important Safeguards

1. Please read the manual carefully before operating projector. To ensure stable power supply, please use standard power cord.
2. Please use the power supply and cable indicated on the rating label. The projector should be kept away from cloths, sofas and anything that may block the ventilation scoop. Please keep the unit away from flammable and explosive materials.
3. Please do not disassemble the unit yourself as this will invalidate the warranty service. To protect your eyes, do not stare directly at the lens when the projector is on. The projector must be kept away from water and any other liquids.
4. To prevent electric shock, please keep the projector out of the rain and away from moisture. It is recommended to switch off the projector after it has run for 6 hours nonstop. Please use the original foam and other cushioning materials when transporting the projector.
5. If the projector does not work, please contact the KickAss support team, contact details at the end of this manual.

Accessories List

- AV signal cable 1pc
- Remote control 1pc
- Power cable 1pc
- User manual 1pc

Specification

 
- **Model:** Multimedia projector

- **Lamp:** LED
- **Image system:** LCD
- **Language:** English, Japanese, Chinese etc
- **Projector Input Voltage:** 12V DC 4A
- **AC Adapter input voltage:** AC1 00V-240V 50/60Hz
- **Projection mode:** Front or rear
- **Working temp:** 0-35°C
- **Operation mode:** Manual / Remote control
- **Output port:** Headphone
- **Input port:** HDMI / USB / AV

Multimedia Supported Files


Audio Format	MP3, AAC, WAV, FLAC, DTS, WMA, M4A, OGG
Image Format	JPG, JPEG, BMP, PNG
Video Format	MP4, MKV, WMV, RMVB, RM, AVI, FLV, TRP, VOB, 3GP, DIVX, TP, TS, MPG, DAT
File Format	TXT

Ports

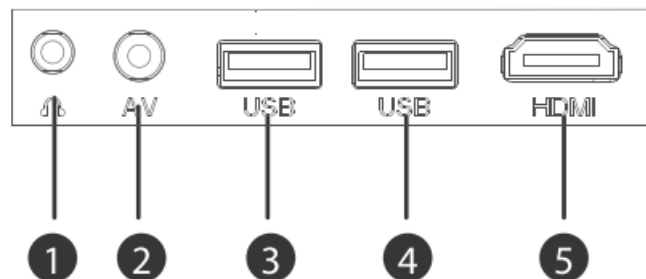


1. Headphone port for audio output
2. AV port for normal signal input
3. USB port for multimedia play
4. USB port for multimedia play
5. HDMI port for HDMI signal input

 Panel Functions

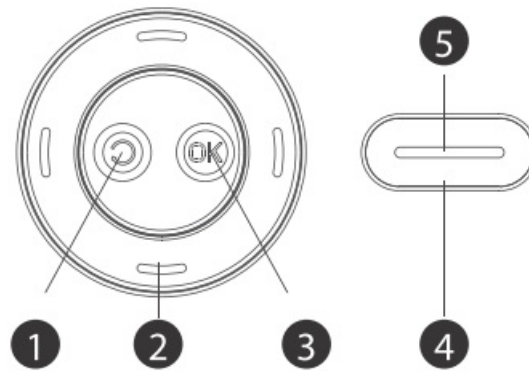

1. Return
2. Arrow keys
3. OK key
4. Power Button
5. Power Indicator
 - **Standby:** red
 - **Power on:** blue

 Function Operation

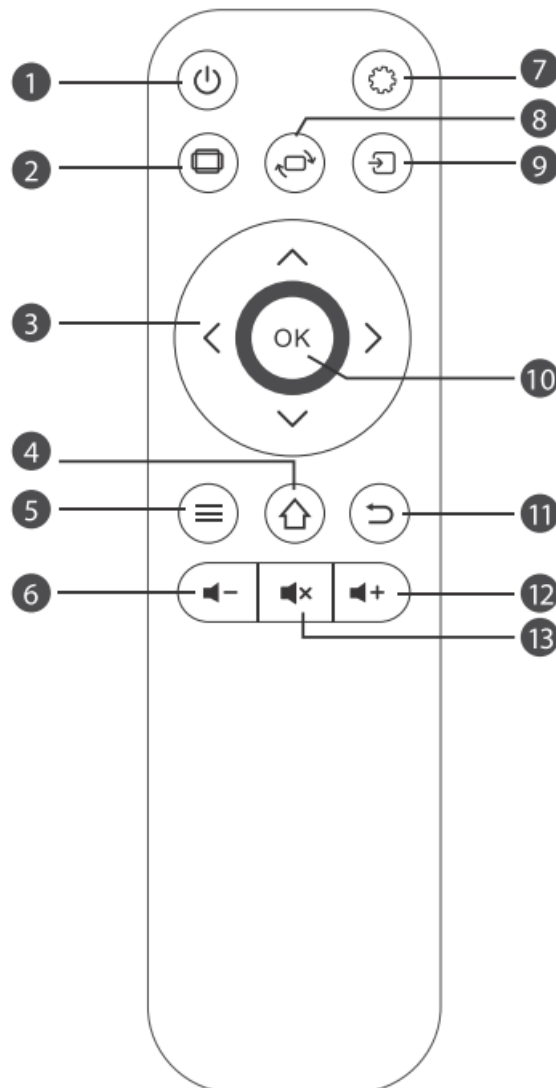


1. Power
2. Aspect ratio
3. Arrow keys
4. Home
5. Menu
6. Volume Down
7. Setting
8. Screen flip
9. Source
10. Enter
11. Return
12. Volume Up
13. Mute

Power On/Off

Connect the power cord to the projector and connect the power cord to the outlet before the power is turned on. Once the projector is plugged in, it will be in Standby mode.

- **Power on:** Press the power button on the remote control once, the power indicator will turn blue and steady, you can turn on the projector.
- **Power off:** Press the power button on the remote control twice, the power indicator changes from blue to steady red, turn off the projector.

 Focus/Keystone

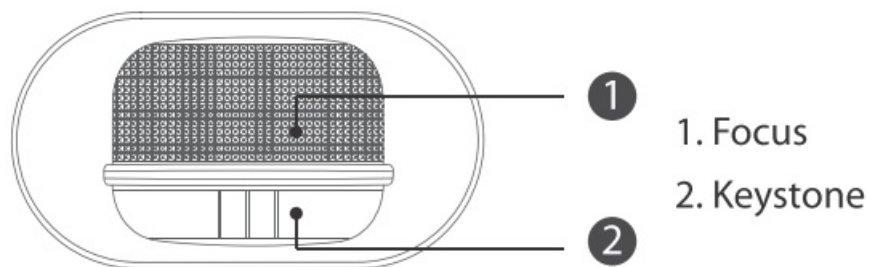

Some projectors focus by rotating the lens, and the trapezoidal correction is located on the back of the machine.

1. Focusing

Place the projector lens perpendicularly to the projection screen or curtain wall, and adjust the focus dial until the image is clear, that means the image focusing is finished.

2. Keystone Correction

Please adjust the “Keystone Correction” dial ring until the image is displayed normally.

Note: The projector has only vertical keystone correction and no horizontal correction. Make sure your projector is level with the projected image.



Standard Setting


Please refer to the following table to adjust your picture size and distance. (From the lens to the screen).

Aspect ratio	16:9
Picture size INCHES	Projection distance METERS
50	1.55
70	2.17
100	3.10
120	3.72

Note: The above data is for reference only, please refer to the physical measurement.


Multimedia Play

 1. **Step1:** Insert the USB flash drive into the projector's USB interface.
2. **Step2:** Select "Media" and press "OK" to enter.
3. **Step3:** Select the file you want to play.

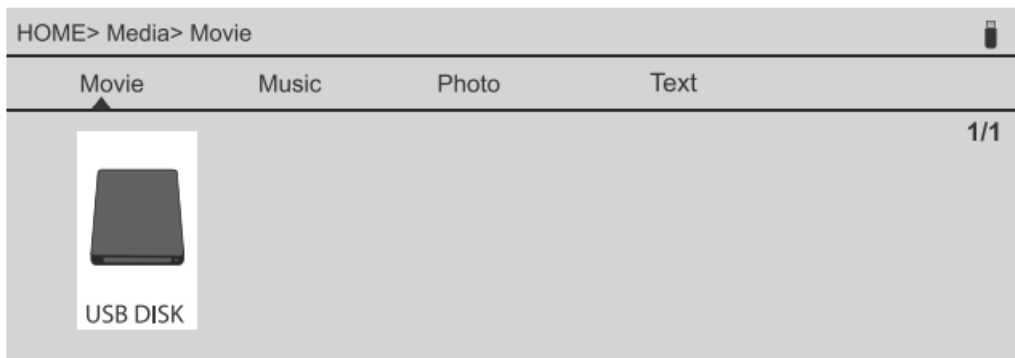



Signal Source Settings

 1. **Step1:** Press “OK” button to enter “source”.
2. **Step2:** Make sure that the signal source you selected is consistent with the access signal source.
 1. The signal sources include “HDMI” and “AV”.
 2. The image settings can be set as your favorite mode including “Image Mode”; “Aspect Ratio”. “Brightness”. “Contrast”. “Color” and “Sharpness”.
 3. The sound settings can be set as your favorite sound. Optional “Sound Mode”. “Bass”. “Treble”. “Balance” and “Equalizer”.

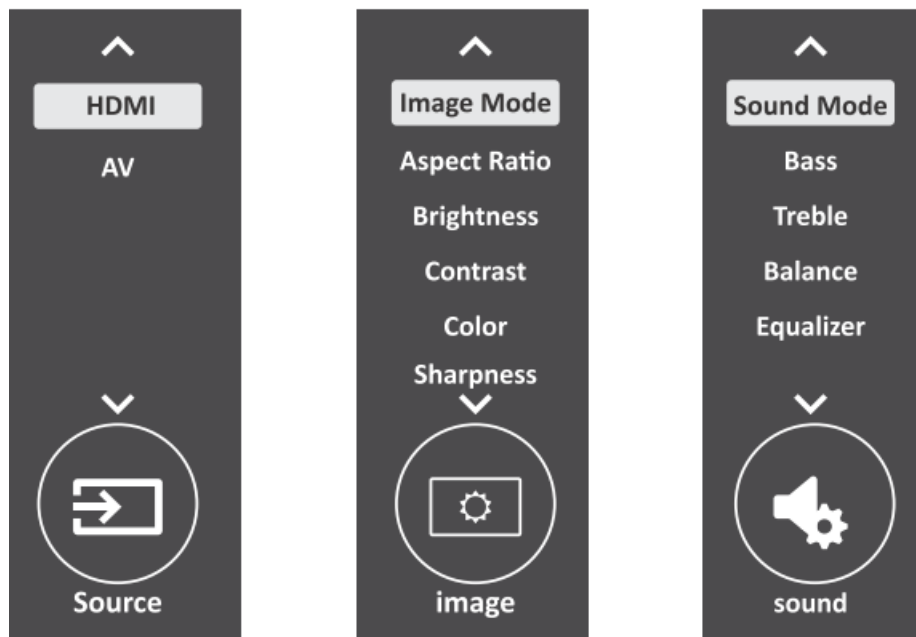



WiFi Connection

  1. **Step1:** Choose "Setup" on the right of the interface, then find "Network".
2. **Step2:** Find "WiFi".
3. **Step3:** Choose "Scan". Select your wireless network from list and type in the password.
4. **Step4:** Press the "Exit" key on the remote control and then confirm the connection.

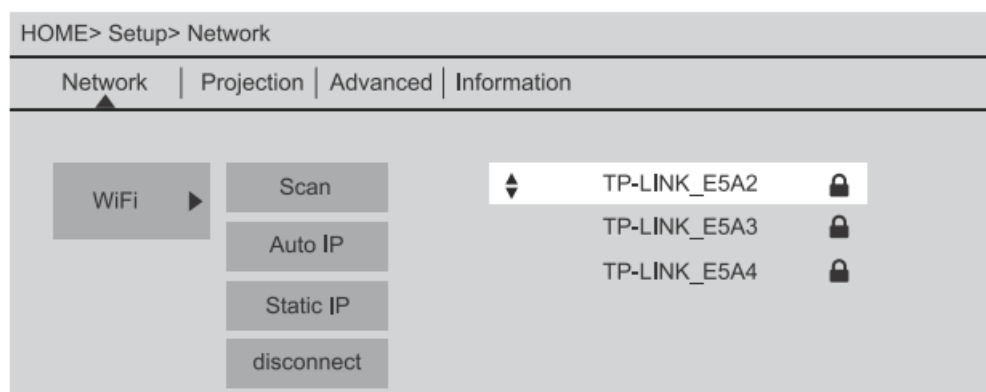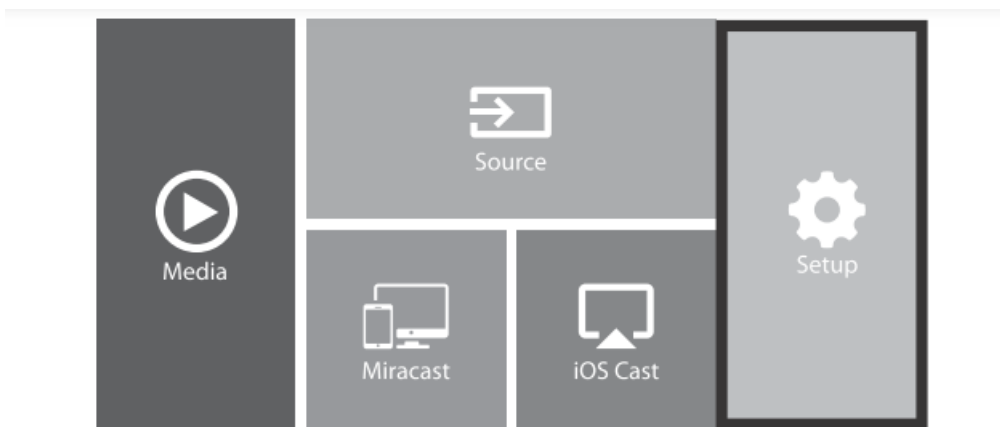

Miracast

  1. **Step1:** Select the Miracast from the home page.
2. **Step2:** Open the "wireless display" function of Android device.
3. **Step3:** Select the corresponding projector device name.

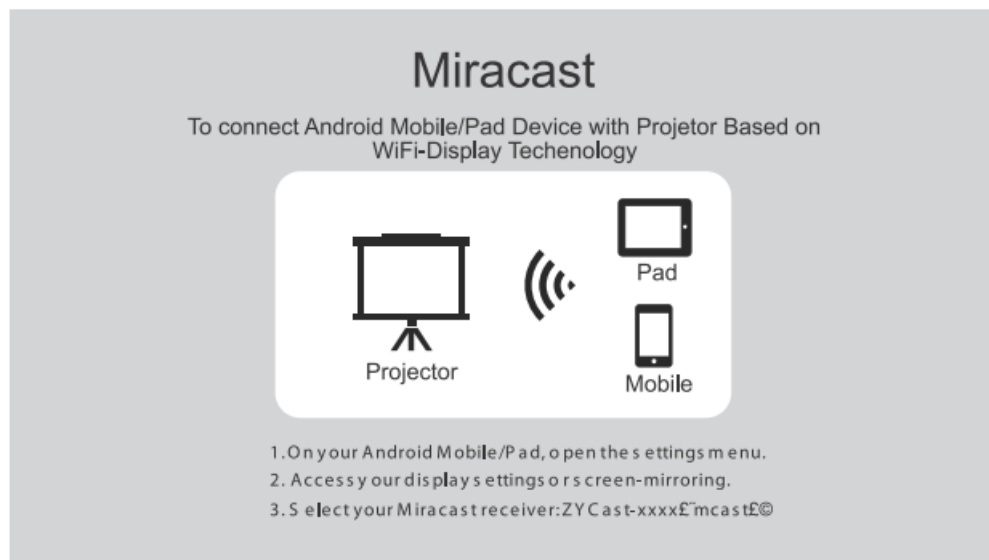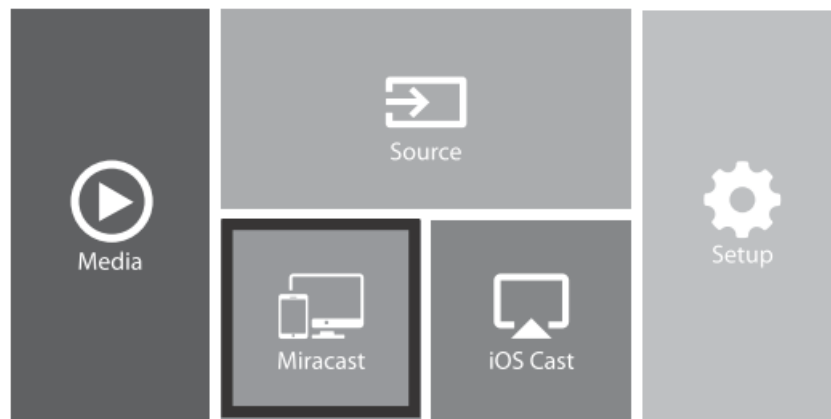


Attention: Note that different Android devices have different ways to open the "wireless display". For details, please refer to the instructions for Android devices.

iOS Cast

Attention: The projector needs to be connected to the network firstly when using the Apple Airplay for the first time or finishing the projector upgrade.

 
1. **Step1:** Select "iOS Cast" of the home page.
2. **Step2:** iOS devices and projectors must be connected to the same network, or connect the iOS device to the wireless network issued by the projector.
3. **Step3:** Open the control center of iOS device, Choose "Screen Mirroring".
4. **Step4:** Choose the name for projector device.

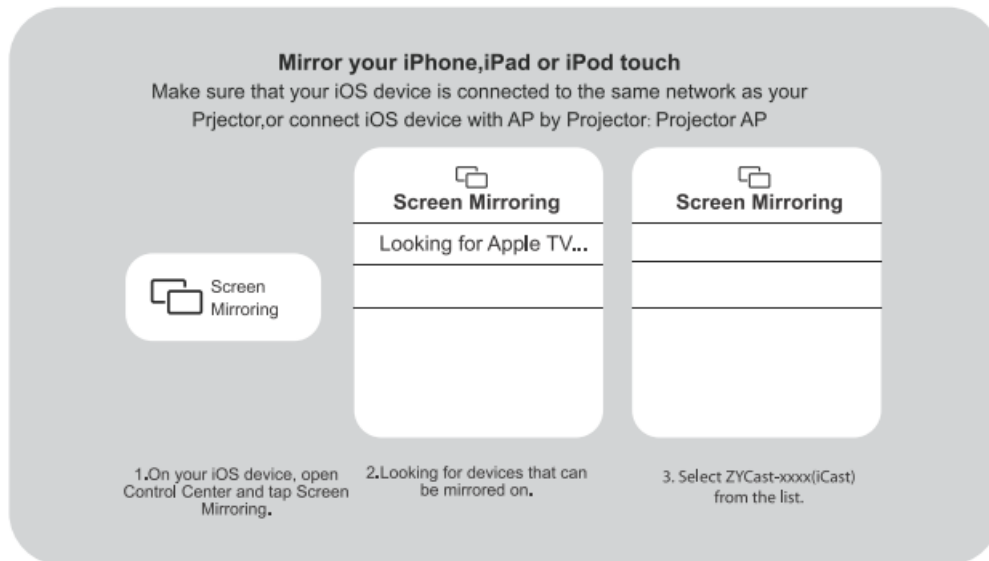

iOS Play Mode


1. **Step 1:** Select "Setup" in the "HOME" interface;
2. **Step2:** Find "Advanced";
3. **Step3:** Can set the desired iOS Play Mode.

 iOS Play Mode: screen casting HD/ screen mirroring HD/ screen casting SD / screen mirroring SD

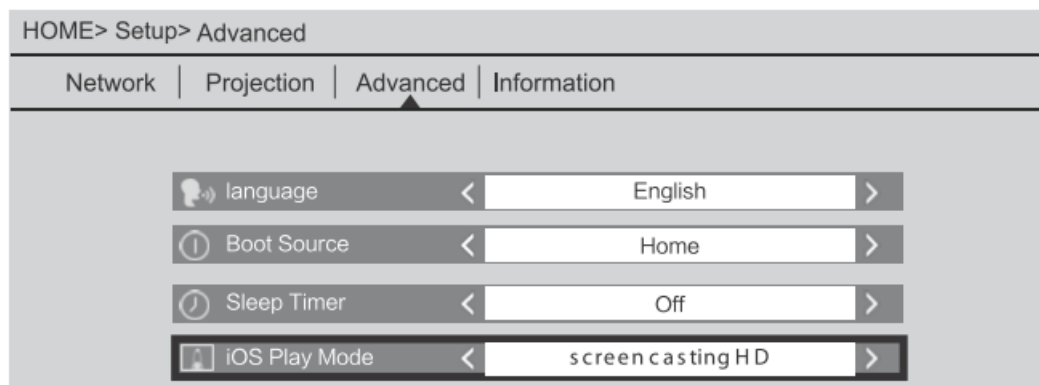

Setup

 1. **Step1:** Select "Setup" in the "HOME" interface; Step2: Find "Projection";
2. **Step3:** Can set the desired projection mode.

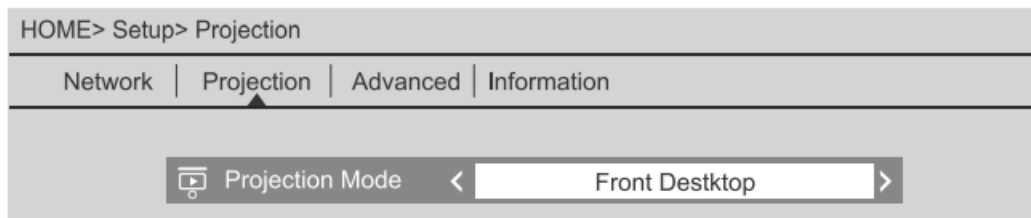

- **Network:**

Scan/ Auto IP/ Static IP/ disconnect

- **Projection:**

Mounting Mode: Front Desktop/ Rear Desktop/ Front Ceiling/ Rear Ceiling

- **Advanced:**

Language/ Boot Source/ Sleep Timer/ iOS Play Mode/ Local update/ Online update/ Restore Factory Default

THANK YOU FOR CHOOSING

KickAss® is committed to providing you with the most up to date product information. As printed material is harder to update we have created an online user guide portal including videos, user guides and product tips so you can view or download the latest product information at any time. This also helps to save our environment which we are committed to just as much as we are committed to our customer service.

OUR GUARANTEE

This KickAss® product comes with a 1 year warranty for your peace of mind. In the unlikely event this product fails when used according to our user guide, we will either repair or replace it. For full warranty terms and conditions on this product, please see the user guide at: userguides.kickass.com.au

Customer Support

For any technical or warranty enquires please visit our customer service portal at: warranty.kickass.com.au

QUESTIONS AND COMMENTS

Please visit us at kickass.com.au or email us at support@kickass.com.au

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party. Responsible

for compliance could void the user’s authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.


FCC Radiation Exposure Statement:

The equipment complies with FCC Radiation exposure limits set forth for uncontrolled enviroment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

SCAN QR CODE:



Documents / Resources

	<p>KICKASS KAODCPPROV4 Multimedia Projector [pdf] User Manual KAODCPPROV4, 2A84X-KAODCPPROV4, 2A84XKAODCPPROV4, KAODCPPROV4 Multimed a Projector, Multimedia Projector, Projector</p>
---	---