KiiBOOM Breeze75 Mounted Mechanical Keyboard With **Rotary Instruction Manual**

Home » KiiBOOM » KiiBOOM Breeze75 Mounted Mechanical Keyboard With Rotary Instruction Manual



Contents

- 1 KiiBOOM Breeze75 Mounted Mechanical Keyboard With **Rotary**
- **2 SPECIFICATIONS**
- **3 BUTTONS FUNCTIONS**
- **4 PAIRING INSTRUCTIONS**
- **5 INDICATOR**
- **6 BATTERY CHECK**
- **7 Switches Instructions**
- **8 WARRANTY**
- 9 Contact
- 10 Documents / Resources
 - 10.1 References



KiiBOOM Breeze75 Mounted Mechanical Keyboard With Rotary



75% Triple-mode Acrylic-Aluminum Gasket-mounted Mechanical Keyboard with Rotary Knob

SPECIFICATIONS

• MODEL: KiiBOOM Breeze 75

• KEYS AMOUNT: 81 Keys

• MOUNTING TYPE: Gasket

• CASE MATERIAL: Full Acrylic + Aluminum

• PLATE MATERIAL: PC

STABILIZER TYPE: Plate-mounted
DIMENSION: 325 x 140 x 45 mm
PCB TYPE: 3/5-pin Hotswap PCB

• CONNECTIVITY: Type-C Wired, Bluetooth, 2.4G

• ANTI-GHOST KEY: NKRO

• LED DIRECTION: South-facing

• POLLING RATE: 1000hz under Wired and 2.4G Mode: 125hz under Bluetooth Mode

• BATTERY CAPACITY: 4000mAh + 4000mAh

• COMPATIBILITY: WINDOWS/MAC

• WEIGHT: Around 1.5kg

BUTTONS FUNCTIONS

BASIC FUNCTION

WINDOWS		MAC	
FN+ F1	Screen Brightness -	F1	Screen Brightness -
FN + F2	Screen Brightness +	F2	Screen Brightness +
FN + F3	Task	F3	Task
FN + F4	Explorer	F4	Launchpad
FN + F5	Mail	F5	Keyboard Backlight Brightness -
FN + F6	Homepage	F6	Keyboard Backlight Brightness +
FN + F7	Previous track	F7	Previous track
FN + F8	Play / Pause	F8	Play / Pause
FN + F9	Next track	F9	Next track
FN + F10	Mute	F10	Mute
FN +F11	Volume -	F11	Volume -
FN + F12	Volume +	F12	Volume +
FN + WIN	Lock/Unlock Win Key		

FUNCTION KEY COMBINATIONS

FN + ESC (Hold 5s)	Reset the keyboard	FN+ BACKSPACE	Battery Check
FN+1	Long press to pair Device BT1; short press to change to Device BT1	FN+3	Long press to pair Device BT3; short press to change to Device BT3
FN+2	Long press to pair Device BT2; short press to change to Device BT2	FN + 4	Long press to connect via 2.4 wireless; short press to change to 2.4 mode

LIGHT EFFECTS

FN + PGUP	Turn On/Off Keyboard Lights	FN + DEL	Change Backlight Directions (only for certain light efftects)
FN + \	Toggle Backlight RGB Effects	FN + Z	Side Light Brightness -
FN +]}	Change Backlight Colors	FN + X	Side Light Brightness +
FN + ↑	Backlights Brightness +	FN+C	Side Light Speed -
FN+↓	Backlights Brightness -	FN + V	Side Light Speed +
FN+←	Backlights Speed -	FN+B	Change Side Light Colors
FN+→	Backlights Speed +	FN+P	Change Side Light Effects

PAIRING INSTRUCTIONS

PAIRING BLUETOOTH

Toggle the switch to the BT side, make sure that the keyboard is under the Bluetooth mode:

- 1. Hold Fn+1/2/3 for 3-5 seconds till the indicator flashes fast, the keyboard is ready to pair.
- 2. Turn on your Bluetooth device and find "KIIBOOM Breeze 75", then connect. When the keyboard is connected to the Bluetooth device, the indicator stops flashing and the connection is done.
- 3. Press Fn+1/2/3 to toggle between the Bluetooth devices 1/2/3.

PAIRING WIRELESS 2.4GHz

Toggle the switch to the 2.4G side, make sure that the keyboard is under the 2.4G wireless mode:

- 1. Hold Fn +4 for 3-5 seconds till the indicator flashes fast, the keyboard is ready to pair.
- 2. Insert the 2.4G dongle to your computer. When the keyboard is connected, the indicator stops flashing.

WIRED MODE

• Toggle the switch to the middle and plug the keyboard.

Note: The battery charges under either wireless or wired mode, as long as the keyboard is plugged.

INDICATOR

· Low Battery: Left Ctrl key blinks red

· Charing: Left Ctrl key stays red

. Charged: Left Ctrl key lights up with a backlight


• Win Lock: Win key lights up

• Wired Mode: 5 key lights up for 2s

BATTERY CHECK

• Hold Fn+Backspace, the keys from 1 to 0 lights up to show the battery percentage; for example, if the keys from 1 to 6 light up when holding Fn+ Backspace, it means that the battery life is currently 60%; if keys of 1-Olight up, battery life is 100%.

Switches Instructions

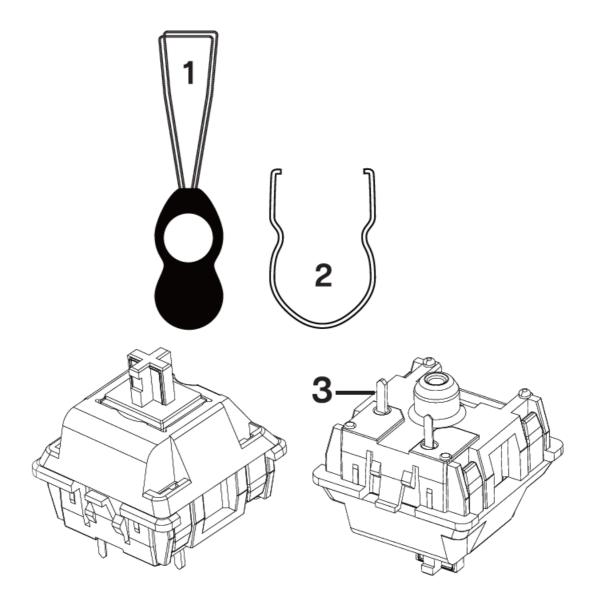

- 1. Keycap Puller
- 2. Switch Puller
- 3. Switch Pins

Before installing switches, be sure the pins are clean and straight. Push the Switch Straight Down into the switch slot.

Please be gentle. Be sure the pins are aligned with the slots.

REMOVE SWITCHES

- 1. Grab your Switch Removal Tool and align the gripping teeth vertically (on the Y-Axis) at the center of the switch, as shown in the example graphic above.
- 2. Grab the switch with the Switch Puller and apply pressure until the switch releases itself from the plate.
- 3. Using firm but gentle force pull the switch away from the keyboard using a vertical motion.

INSTALL SWITCHES

- 1. Check that all the switch metallic pins are perfectly straight and clean.
- 2. Align the switch vertically. The pins should align themselves to the keyboard PCB.
- 3. Press the switch down until you hear a click. This means your switch clips have attached themselves to the

keyboard plate.

4. Inspect the switch to ensure it's properly attached to your keyboard, and test it.

Note: If the key doesn't work its possible you may have bent one of the switches while installing it.

Pull the switch out and repeat the process.

Pins may be damaged beyond repair and need replacement if this process is not done correctly. Never apply excessive force when replacing keycaps or switches. If you cannot remove or install keycaps or switches please contact customer service as soon as possible to avoid damage to the keyboard due to operating errors.

WARRANTY

KiBOOM's Warranty covers any factory defects that might affect the proper functionality of your purchase. It doesn't cover any damage that may occur from normal wear and tear. If your product is defective we will send you a replacement unit. Replacement units might require you to send the defective unit back to KiiBOOM.

We provide a 1 year warranty for our products when bought from our website (KiBOOM.com). Your item will not be covered by your 1 year warranty if the inspection shows any sign of modification or changes unsupported by the original product, these include: Changing internal components, Assembling and reassembling the product, Replacing Batteries, etc. We will ONLY cover the item if it is bought from our official stores. You do not have a warranty with us if you bought the item from another reseller or likewise. Please contact the store that you bought your product from to resolve issues.

Contact

Manufactured in China by KiBOOM.



OST_EU_20220711000049 eVatmaster ConsultingGmbH

- Bettinastr.30 60325 Frankfurt am Main, Germany
- contact@evatmaster.com



OST_UK_20220711000015 EVATOST CONSULTING LTD

- Suite 11, First Floor, Moy Road Business Centre, Taffs Well, Cardiff, Wales, CF15 7QR
- contact@evatmaster.com

KiiBOOM.com

Scan





Documents / Resources



KiiBOOM Breeze75 Mounted Mechanical Keyboard With Rotary [pdf] Instruction Manual Breeze75, 64, Breeze75 Mounted Mechanical Keyboard With Rotary, Breeze75, Mounted Mechanical Keyboard With Rotary, Keyboard With Rotary, With Rotary, Rotary

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.