



## killerbody 48766 LED Light System with Control Box Instructions

[Home](#) » [killerbody](#) » killerbody 48766 LED Light System with Control Box Instructions 

### Contents

- [1 killerbody 48766 LED Light System with Control Box](#)
- [2 Specific Functions](#)
- [3 Wires Distribution](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

 


### killerbody 48766 LED Light System with Control Box



Not all the Radio Controller System compatible with this LED control box. Due to limited wire length of the LED


lights set, please pre-check proper fixture location before using 3M double-sided tape to fix it. We suggest to fix the LED lights set at the nearest area to the signal receiver which on the bottom of the chassis.

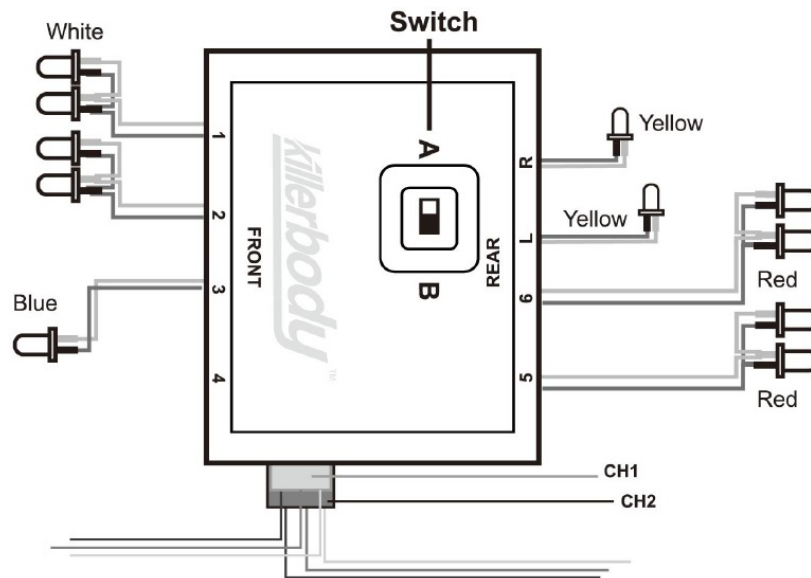


## Specific Functions


1. Red indicator light will light up when power connected, LED light control system is power on.
2. System power on and all lights will light up when keeping turning L by remote controller for over 10 seconds.
3. System power on and all lights will light off when keeping turning R by remote controller for over 10 seconds.
4. All lights will flash when stop control for over 10 seconds; all lights will light up dimly when receiving any signals.
5. A" light mode is normal cars light mode.
6. B" light mode is keeping flashing mode.
7. Port 1/2/3/4 on the box is for FORWARD.
8. Port 5/6 on the box is for BACKWARD.
9. Port L/R on the box is for TURN L/R.
  
## Wires Distribution

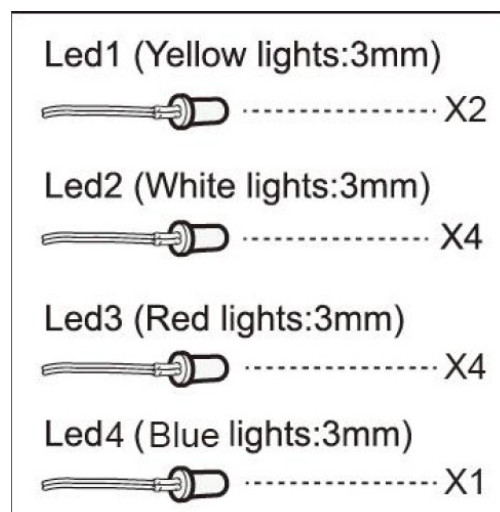

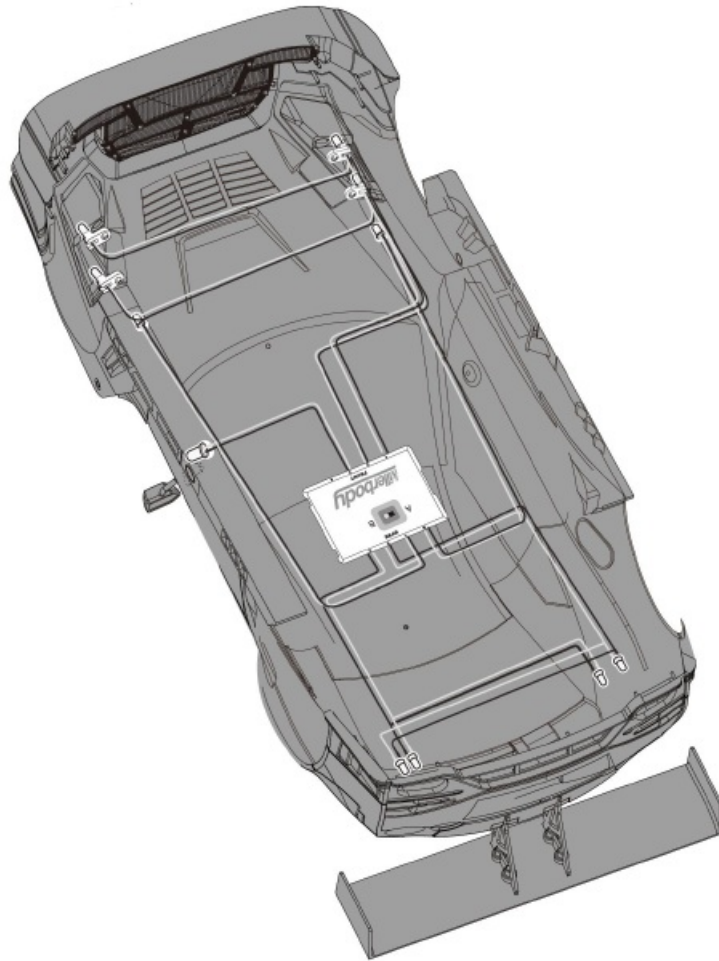

## Documents / Resources

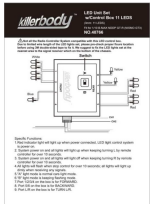 

[killerbody 48766 LED Light System with Control Box](#) [pdf] Instructions  
48766, LED Light System with Control Box, LED Light System, Light System with Control Box,  
Light System, 48766