

KIRSTEIN 00096490 S Concat Basic Control Owner's Manual

Home » KIRSTEIN » KIRSTEIN 00096490 S Concat Basic Control Owner's Manual




Contents

- 1 KIRSTEIN 00096490 S Concat Basic Control Owner's
- Manual 2 KIRSTEIN 00096490 S Concat Basic
- 3 BASS
- **4 POWER INPUT**
- 5 Read More About This Manual & Download PDF:
- 6 Documents / Resources
 - **6.1 References**

KIRSTEIN 00096490 S Concat Basic Control Owner's Manual



KIRSTEIN 00096490 S Concat Basic

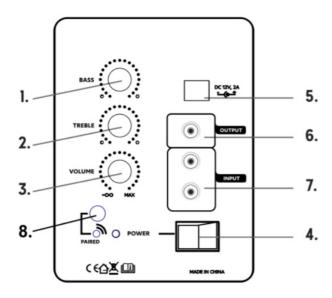

BASS

Use the bass control for low frequency adjustment, turn left for decreasing low frequencies and turn right for increasing low frequencies.

TREBLE

Use the treble control for high frequency adjustment, turn left for decreasing high frequencies and turn right for increasing high frequencies.

VOLUME

With the volume control it's possible to adjust the input sensitivity, turn left for decreasing the input sensitivity and turn right for increasing the input sensitivity.

POWER SWITCH

Turns the loudspeaker on/off. Make sure the volume knob is set to minimum before turning it on!

POWER INPUT

Connect the included power adapter to this input and connect the other end of the cable to a power source.

OUTPUT

RCA connector for slave speaker (right).

INPUT

RCA input left and right.

Bluetooth:

To pair with Bluetooth, first press the Bluetooth button until the Bluetooth blinks, then turn on the Bluetooth Settings on your mobile device, search the list of "MTO3B" devices, select it, and complete the pairing process. Once the pairing is complete, the Bluetooth button will be fixed in blue and you can enjoy the transmission from your mobile device. If you press the bluetooth button again, it will turn off.

Read More About This Manual & Download PDF:

Documents / Resources



KIRSTEIN 00096490 S Concat Basic Control [pdf] Owner's Manual 00096490 S Concat Basic Control, 00096490, S Concat Basic Control, Concat Basic Control, B asic Control, Control

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.