



KitchenAid Built In Convection Microwave Oven User Guide

[Home](#) » [KitchenAid](#) » KitchenAid Built In Convection Microwave Oven User Guide 

Contents

- [1 KitchenAid Built In Convection Microwave Oven](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Built-In Convection Microwave Oven Quick Start Guide](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)

KitchenAid

KitchenAid Built In Convection Microwave Oven



Product Information

The Built-In Convection Microwave Oven is a versatile appliance that combines the functions of a microwave and an oven. It is designed to provide efficient and convenient cooking options for your kitchen.

Important Safety Instructions

Before operating the appliance, please read the IMPORTANT SAFETY INSTRUCTIONS located in your appliance's Owner's Manual. These instructions are crucial to ensure your safety and to prevent fire, electric shock, or injury to persons.

Product Usage Instructions

Using Your Oven

1. Select the desired oven function.
2. Set the temperature for cooking.
3. Press the Start button.
4. Once the set temperature is reached, place the food inside the oven and close the door.
5. (Optional) Enter the desired cook time.
6. The Cancel button can be used to cancel the function during or after the cook time.

Note: For more detailed instructions on specific functions, please refer to the online Control Guide.

Start/Add 1 Minute Function

The Start/Add 1 Minute keypad on the microwave oven controls two separate functions: Start and Add 1 minute.

Start

The Start/Add 1 Minute keypad initiates any upper or single oven cooking function once enough data has been entered and the door is closed. If not touched within 5 minutes after touching another keypad, the programmed function will be canceled. If cooking is interrupted by opening the door, touching Start/Add 1 Minute after closing the door will resume the preset cycle.

Add 1 Minute

When the microwave oven is off, touching Start/Add 1 Minute will start 1 minute of cook time at 100% power. To use this feature, ensure that the display shows the time of day and the lower oven is off (for combination models only). When the microwave oven is operating, touching Start/Add 1 Minute will add 1 minute of cook time to the current cycle. Multiple minutes can be added by repeatedly touching Start/Add 1 Minute.

Using Aluminum Foil and Metal

When using aluminum foil or metal in the microwave oven, it is important to follow these guidelines to prevent damage

- Always use oven mitts or pot holders when removing dishes from the microwave oven.
- Do not allow aluminum foil or metal to touch the inside cavity walls, ceiling, or floor of the microwave oven.
- Always use the turntable when placing food inside the oven.
- Avoid contact with another metal object during microwave cooking.

Approved items for use in the microwave oven include racks and bakeware supplied with the appliance (on some models), aluminum foil for shielding, and approved meat thermometers. However, metal cookware and bakeware, gold, silver, pewter, non-approved meat thermometers, skewers, twist ties, foil liners such as sandwich wrappers, staples, and objects with gold or silver trim or a metallic glaze should not be used in the microwave oven.

Microwave Oven Cancel Function

The Cancel keypad can be used to stop any microwave oven or lower oven function (except for the Clock, Timer, and Control Lock). When the door is opened, the element(s) and fan will turn off, but the oven light will remain on. To resume the preset cycle, simply close the door and touch the Start button.

Built-In Convection Microwave Oven Quick Start Guide

OPERATING INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS, located in your appliance's Owner's Manual, before operating this appliance.

Using Your Oven

- Step 1. Select oven function.
- Step 2. Set the temperature.
- Step 3. Press Start.
- Step 4. Place food inside the oven once set temperature is reached. Close the oven door.
- Step 5. (Optional) Enter time to cook.
- Step 6. The Cancel button can be used to cancel the function during or after cook time.

NOTE: For more detailed instructions on specific functions, see the online Control Guide.

START/ADD 1 MINUTE

The Start/Add 1 Minute keypad controls 2 separate functions for the built-in microwave: Start and Add 1 minute.

Start

- The Start/Add 1 Min keypad begins any upper or single oven cooking function once enough data has been entered and the door is closed.
- After enough data has been entered and the door is closed, "Start?" will appear on the oven display as a reminder. If the Start keypad is not touched within 5 minutes after touching another keypad, the oven display will return to
- the inactive mode and the programmed function will be canceled.
- If cooking is interrupted by opening the door, touching Start/Add 1 Minute after the door is closed again will resume the preset cycle.

Add 1 Minute

Touching Start/Add 1 Minute when the microwave oven is off will start 1 minute of cook time at 100%power. To use this feature the display must be in the time of day visualization, and the lower oven must be off (combination models only). Touching Start/Add 1 Minute while the microwave oven is operating will add cook time to the current cycle by 1 minute. Multiple minutes can be added by repeatedly touching Start/Add 1 Minute.

ALUMINIUM FOIL AND METAL

Always use oven mitts or pot holders when removing dishes from the microwave oven.

Aluminum foil and some metal can be used in the microwave oven. If not used properly, arcing (a blue flash of light) can occur and cause damage to the microwave oven.

OK for Use

Racks and bakeware supplied with the microwave oven (on some models), aluminum foil for shielding, and approved meat thermometers may be used with the following guidelines

- To avoid damage to the microwave oven, do not allow aluminum foil or metal to touch the inside cavity walls, ceiling or floor.
- Always use the turntable.
- To avoid damage to the microwave oven, do not allow contact with another metal object during microwave cooking.

Do Not Use


Metal cookware and bakeware, gold, silver, pewter, non-approved meat thermometers, skewers, twist ties, foil

liners such as sandwich wrappers, staples and objects with gold or silver trim or a metallic glaze should not be used in the microwave oven.

MICROWAVE OVEN CANCEL

- The Cancel keypad stops any microwave oven or lower oven function except for the Clock, Timer, and Control Lock.
- The oven will also turn off when the door is opened. When the door is opened, the element(s) and fan will turn off, but the oven light will remain on. Close the door and touch START to resume the preset cycle.
- The oven cooling fan may continue to operate even after an oven function has been canceled or completed, depending on the oven temperature.

POSITIONING BAKING TRAY

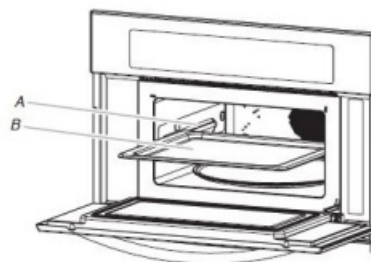

A. Slide rail
B. Baking tray

Baking tray can only be used with convection cooking and broiling. To avoid damage to the microwave oven, do not use baking tray in combination with microwave cooking.

Place baking tray on slide rails as shown below. Push in tray to stop position. Check that the baking tray is level. For best cooking results, use baking tray only in the recommended position.

Online Ordering Information

- For detailed installation instruction and maintenance information, winter storage, and transportation tips, please see the Owner's Manual included with your machine.
- For information on any of the following items, the full cycle guide, warranty, detailed product dimensions, or for complete instructions for use and installation, please visit
- <https://www.kitchenaid.com/service-and-support>, or in Canada
- <https://www.kitchenaid.ca/service-and-support>. This may save you the cost of a service call.



MAJOR APPLIANCES
SCHEDULE SERVICE



PRODUCT REGISTRATION



MY APPLIANCES



QUICKSTART GUIDES



PRODUCT HELP



HOW TO FIND MY
MODEL NUMBER



FIND REPLACEMENT
PARTS

However, if you need to contact us, use the information listed below for the appropriate region.

United States

- 1-800-253-1301
- KitchenAid Brand Home Appliances Customer eXperience Center
- 553 Benson Road
- Benton Harbor, MI 49022-2692
- **IMPORTANT:** Retain this guide for future use.
- Canada
- 1-800-807-6777
- KitchenAid Brand Home Appliances Customer eXperience Centre 200-6750 Century Ave. Mississauga, Ontario L5N 0B7

Documents / Resources

	<p>KitchenAid Built In Convection Microwave Oven [pdf] User Guide Built In Convection Microwave Oven, Convection Microwave Oven, Microwave Oven, Oven</p>
--	---

References

- [Service & Support Owners Center | KitchenAid](#)
- [Customer Service | KitchenAid](#)

