

KitchenAid KBSD702MSS Built-In Side-by-Side Refrigerator



KitchenAid KBSD702MSS Built-In Side-by-Side Refrigerator User Guide

[Home](#) » [KitchenAid](#) » KitchenAid KBSD702MSS Built-In Side-by-Side Refrigerator User Guide 

Contents

- 1 KitchenAid KBSD702MSS Built-In Side-by-Side Refrigerator
- 2 Product Information
- 3 Product Usage Instructions
- 4 OPERATING INSTRUCTIONS
 - 4.1 Turning Refrigerator Cooling On/Off
 - 4.2 Adjusting Temperature
 - 4.3 Water Filter Indicator and Reset
 - 4.4 Max Cool/Max Freeze
 - 4.5 Alarm Functions
 - 4.6 Miscellaneous
- 5 Online Ordering Information
- 6 Documents / Resources
 - 6.1 References

KitchenAid®

KitchenAid KBSD702MSS Built-In Side-by-Side Refrigerator



Product Information

Specifications:

- **Model:** Built-in SXS Non-Dispensing
- **Features:** Max Cool/Max Freeze, Temperature Control UI, Alarm Functions
- **Recommended Settings:** Factory-set recommended temperature points

Product Usage Instructions

Max Cool

The Max Cool feature helps in situations of high refrigerator use or warm room temperatures. To activate Max Cool:

1. Locate the Temperature Control UI inside the appliance above the crisper drawers.
2. Press Max Cool to set both the freezer and refrigerator to the lowest temperature settings.
3. To deactivate Max Cool, press Max Cool again or wait for approximately 12 hours.

Note that changing the refrigerator temperature or activating Vacation Mode while Max Cool is ON will deactivate Max Cool.

Max Freeze

Max Freeze is useful for heavy ice usage periods. To use Max Freeze:

1. Press Max Freeze to set the freezer to the lowest temperature setting.

2. To return to normal freezer settings, press the Max Freeze touchpad again.

Changing the freezer temperature while Max Freeze is ON will deactivate Max Freeze. The feature will shut off automatically after approximately 48 hours.

Alarm Functions

The product includes Door Open and Power Outage alarm functions:

- **Door Open Alarm:** Sounds when a door is left open for 5 minutes. Close the doors to reset the alarm.
- **Power Outage:** The refrigerator cooling can be turned on or off as needed.

Frequently Asked Questions (FAQ)

- **Q: How do I adjust the refrigerator and freezer controls?**

A: To adjust the controls, locate the Temperature Control UI inside the appliance and follow the instructions for Max Cool or Max Freeze settings.

- **Q: How long should I wait before adding food to the refrigerator?**

A: Wait for at least 24 hours after turning on the refrigerator for it to cool completely before adding food to prevent spoilage.

OPERATING INSTRUCTIONS

- **WARNING:** To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS, located in your appliance's Owner's Manual, before operating this appliance.
- **IMPORTANT:** Before operating this appliance, make sure it has been properly installed according to the appliance's Owner's Manual.
- The Temperature Control UI is located inside the appliance above the crisper drawers.
- For your convenience, your refrigerator and freezer temperature controls are set to the recommended set points at the factory. When you first install your refrigerator, make sure the temperature controls are still set to the recommended set points. The recommended set points are 37°F (3°C) for the refrigerator and 0°F (-18°C) for the freezer.

IMPORTANT:

- The recommended settings should be correct for normal household refrigerator use. The controls are set correctly when milk or juice is as cold as you like and when ice cream is firm.
- **NOTE:** Areas such as a garage, basement, or porch may have higher humidity or extreme temperatures. You may need to adjust the temperature away from the recommended settings to accommodate these conditions.
- When the power is on, the temperature display shows the set point temperature of the compartment.
- Wait 24 hours for your refrigerator to cool completely before adding food. If you add food before the refrigerator has cooled completely, your food may spoil.
- **NOTE:** Adjusting the refrigerator and freezer controls to a colder-than-recommended setting will not cool the compartments any faster.
- If the temperature is too warm or too cold in the refrigerator or freezer, first check the air vents to be sure they are not blocked before adjusting the controls.

- Wait at least 24 hours between adjustments. Recheck the temperatures before other adjustments are made.

Turning Refrigerator Cooling On/Off


Your refrigerator and freezer will not cool when cooling is turned off. Follow the directions specific to your model.

Turn ON

Press and hold Mthe ax Freeze and Max Cool buttons at the same time for 3 seconds. The cooling-off icon blinks twice and remains on.

Setting the Temperature °F/°C preset at °F

- Press the °F – °C button to change between Celsius and Fahrenheit.
- When activated, the selected temperature option displays. When deactivated, the LED is Off.

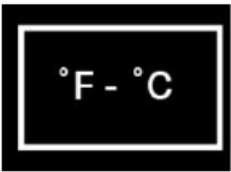

Adjusting Temperature



- The following applies to both the refrigerator temperature button and the freezer temperature button.
- Pressing the Freezer or Refrigerator picture button once will increase or decrease the temperature (1°C, 2°F).
- Once the temp setting reaches the lowest temperature allowed for that zone, the next button press will change the temperature to the highest temperature allowed for that zone (looping).
- The Refrigerator temperature range will be from 33°F to 42°F (1°C to 6°C), with the factory default temperature being 37°F (3°C).
- The Freezer temperature range will be from -8°F to 5°F (-22°C to -15°C), with the factory default temperature being 0°F (-18°C).

CONDITION/REASON	TEMPERATURE ADJUSTMENT
REFRIGERATOR too cold	REFRIGERATOR Control 1°C or 2°F higher
REFRIGERATOR too warm	REFRIGERATOR Control 1°C or 2°F lower
FREEZER too cold	FREEZER Control 1°C or 2°F higher
FREEZER too warm/too little ice	FREEZER Control 1°C or 2°F lower
Water Filter Indicator and Reset (all models)	


Water Filter Indicator and Reset

Water Filter Indicator and Reset (all models)

The water filter indicator, located on the control panel, will help you know when to change the water filter.

Replace status:

When the internal control panel's water filter status displays, this tells you that it is almost time to change the water filter cartridge. Replace the water filter cartridge.

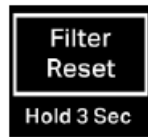

Replace Overdue status:

- When the light turns red on the control panel, this tells you that it is time to change the water filter cartridge.
- It is recommended that you replace the filter when the status light turns red or water flow to your water dispenser or ice maker decreases noticeably.



- **NOTE:** If water flow to your water dispenser or ice maker decreases noticeably, change the filter sooner. The filter should be replaced at least every 6 months, depending on your water quality and usage.
- When dispensing water after the Replace Filter icon is on, the Replace Filter icon blinks for the duration of dispensing. This applies to both the Replace Filter state and Replace Overdue status. Fourteen days after the Replace Filter indicator turns On, it shall enter "Replace Overdue" mode.

Filter Reset

- After changing the filter, press and hold the Filter Reset button for 3 seconds. The button will no longer display once reset.
- See the "Water Filtration System" section in the Owner's Manual for steps to remove and replace the filter.

Max Cool/Max Freeze

Max Cool

The Max Cool feature assists with periods of high refrigerator use, full grocery loads, or temporarily warm room temperature.



- Press Max Cool to set the freezer and refrigerator to the lowest temperature settings.
- Press Max Cool again to return to the normal refrigerator set point.
- **NOTE:** The Max Cool feature will shut off automatically in approximately 12 hours.
- While Max Cool is ON, changing the refrigerator temperature will deactivate Max Cool.
- While Max Cool is ON, activating Vacation Mode will deactivate Max Cool.

Max Freeze

The Max Freeze feature assists with temporary periods of heavy ice use by increasing ice production.



- Press Max Freeze to set the freezer to the lowest temperature setting.
- Press the Max Freeze feature touchpad again to return to the normal freezer set point.
- While Max Freeze is ON, changing the freezer temperature will deactivate Max Freeze.

NOTE: The Max Freeze feature will shut off automatically in approximately 48 hours.

Alarm Functions

Door Open

The Door Ajar Alarm feature sounds an alarm when the refrigerator or freezer door is open for 5 minutes and the product cooling is turned on. The alarm will repeat every 2 minutes. Close both doors to turn it off. The feature then resets and will reactivate when either door is left open again for 5 minutes.



Power Outage

The power outage indicator lets you know if the power supply to the refrigerator has been cut off and the freezer temperature has risen to 18°F (-8°C) or higher. When power has been restored, the button repeatedly flashes and the red Power Outage icon appears. When the indicator is on, all other control and dispenser functions are disabled until you confirm that you are aware of the power outage.

- Press any button to reset the display screen to its normal status.

Miscellaneous

Crisper Menu

There are 4 preset temperatures for the Crisper Menu. Press the crisper menu button to select the desired option. Coldest to Warmest – Meats, Deli, Assorted, Produce.

- MEAT setting is the coldest setting and can be used for defrosting frozen items that need defrosting in the refrigerator.
- PRODUCE setting is the warmest setting and is used for everyday vegetables and fruits.
- The ASSORTED setting is used to keep different items in the same drawer.
- DELI setting is used for Deli meats and cheeses or non-produced items.

Control Lock

Press and hold the [Crisper] button and the Lock indicator will blink twice, play a tone and remain on/off. When the Control Lock is active;

- All other functions are not accessible.

- Pressing any button will play an invalid tone 3 times and lock indicator will blink 3 times.
- Water/Ice paddles are not available, pressing the paddles will play an invalid tone 3 times.

Showroom Mode

Demo mode for the sales floor. Press and Hold the [RC Temp] + [FC Temp] buttons for 5 seconds, and the showroom indicator will blink twice to remain on/off.

Online Ordering Information

- For detailed installation instructions and maintenance information, winter storage, and transportation tips, please see the Owner's Manual included with your appliance.
- For information on any of the following items, the full cycle guide, warranty, detailed product dimensions, or for complete instructions for use and installation, please visit <https://www.kitchenaid.com/service-and-support> , or in Canada <https://www.kitchenaid.ca/service-and-support> . This may save you the cost of a service call. However, if you need to contact us, use the information listed below for the appropriate region.
- To purchase additional bakeware please visit <https://www.kitchenaid.com/kitchenware/bakeware> .

United States:

- 1-800-422-1230
- KitchenAid Brand Home Appliances Customer eXperience Center 553 Benson Road Benton Harbor, MI 49022-2692.


Canada:

- 1-800-807-6777
- KitchenAid Brand Home Appliances Customer eXperience Center 200-6750 Century Ave. Mississauga, Ontario L5N 0B7.




- Get Started with your built-in refrigerator.
- Scan to see top features, tips and how-to videos.

Documents / Resources

	<p>KitchenAid KBSD702MSS Built-In Side-by-Side Refrigerator [pdf] User Guide KBSD702MSS Built-In Side-by-Side Refrigerator, KBSD702MSS, Built-In Side-by-Side Refrigerator, Side Refrigerator, Refrigerator</p>
---	---

References

-  [Service & Support Owners Center | KitchenAid](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.