

ACWO®



EARBUDS

DWOTS TOUCH

Manual



Appearance:

- ① Left Earbud
- ② Right Earbud
- ③ Charging Case
- ④ Left Earpiece Charging Socket
- ⑤ Right Earpiece Charging Socket
- ⑥ Type-C Charging Interface
- ⑦ Multi-Function Touch Area
- ⑧ Reset Button
- ⑨ HD Touch Display

What Will You Find In The ACwO Box?

- Charging Case
- Pair of ANC Earbuds
- Type-C Charging Cable
- Warranty Card
- Scan Me Card
- ACwO X Sunil Chhetri Catalogue
- Comfortable Ear Tips

Product Features:

- HD-Touch Display
- ANC Upto 32dB
- Quad Mic AI-ENC Technology
- Transparency Mode
- Music Playtime Upto 50 Hours (Without ANC)
- Advanced Binaural Technology
- Preset Equalisers - Rock / Pop / Classic / Jazz
- Ultra Low Latency Upto 45ms

- Advanced Bluetooth Version 5.4
- Hall Switch Enabled
- 13mm BasS BooM X™
- Type-C Charging Interface
- Intuitive Touch Controls

Safety Guidelines:

- Please refrain from dismantling the product or attempting to remove its battery. Such actions can pose a fire hazard or cause electrical malfunctions. Seek the services of a qualified technician or the manufacturer for any necessary maintenance or repairs.
- When cleaning the earbuds, exercise caution by using a damp, soft cloth. Avoid using any oily or volatile liquids for cleaning purposes. Additionally, ensure that the earphones are kept away from extreme temperature conditions, both hot and cold.
- Please be aware that any damage to the earbuds that is not attributed to a manufacturing defect will render the product's warranty null and void.
- Do not wear them in situations where it is unsafe, such as when operating a vehicle, crossing streets, or engaging in activities requiring full situational awareness.

- To safeguard your hearing, ensure that the volume on your music player is set at an appropriate level when using the earphones. Prolonged exposure to high noise levels can gradually lead to hearing impairment.
- Do not wear the earbuds for a long period of time as it can lead to possible hearing loss or major hearable issues.

ACwO DwOTS Touch

Kindly Note:

- Please take off the sticker peels attached below the earbuds before you charge them.
- Charge the charging case and the ACwO DwOTS Touch Wireless Earbuds at least 70% before the first usage.

Charging:

Charging Case:

- Connect the type-c charging cable to the charging case to charge your ACwO DwOTS Touch Wireless Earbuds.

Earbuds:

- Place the earbuds in the charged Charging Case to charge the ACwO DwOTS Touch Wireless Earbuds.

Bluetooth Pairing Process:

- Take out the ACwO DwOTS Touch Earbuds from the Charging Case and place them in your ears.

- Go to the Bluetooth settings of your device and switch it on.
- Scan available devices.
- Search For " ACwO DwOTS Touch" from the list of available devices.
- Pair " ACwO DwOTS Touch" from the list and your Earbuds will be connected.

Once you've completed the initial pairing process, the ACwO DwOTS Touch will connect seamlessly to your device every time you open the charging case.

Kindly Note - If the earbuds are not in use and are left outside the charging case, they will automatically turn off after approximately 5 minutes.

Bluetooth Reset Process: ACwO DwOTS Touch

- In case your earbuds encounter pairing issues or if only one earbud is functioning, you can easily perform a reset.
- Clear all Bluetooth data named "ACwO DwOTS Touch" from your device and disable Bluetooth.
- Place the earbuds back into their charging case and then remove them to initiate the Bluetooth pairing process once more.

Reset Button :

- Locate the Reset Button: Find the Reset Button on the bottom of your earbuds near type-c charging interface.
- Press the Reset Button: This action will bring up the power settings menu.

Power Options:

- Power Off: Select this option to turn off your earbuds.
- Reset: Choose this to reset your earbuds to their default settings.
- Factory Reset: This will restore your earbuds to the original factory settings.

How To Use Your ACwO DwOTS Touch?

Touch Controls: The Multi-Functional Touch Area, often referred to as the "Touch Area," is situated on the upper section of the earbud's handle.

Smart Functions ACwO DwOTS Touch

- Play/Pause:
Single Tap on Multi-Function Touch area of either earbud.
- Next Track:
Double Tap on Multi-Function Touch area of either earbud.
- Switch Between Transparency/ ANC/ Normal Mode:
Tap and Hold Left Earbud For 2 Second To On/Off Transparency, ANC and Normal Mode.
- Previous Track:
Triple Tap on Multi-Function Touch area of either earbud.
- To Answer Calls:
Single tap on the Multi-Function Touch Area of either earbud.
- Activate Voice Assistant:
Tap & Hold the Multi-Function Touch Area of the right earbud for 3 seconds.

- To Hang Up Calls:
Single tap on the Multi-Function Touch Area of either earbud.
- To Decline Calls:
Double Tap on the Multi-Function Touch Area of either earbud.
- Power Off Left/Right Earbud:
Tap and hold for 5 seconds on the Multi-Function Touch Area of either earbud.
- Power On Right Earbud:
Tap and hold for 5 seconds on the Multi-Function Touch Area of the right earbud.
- Power On Left Earbud:
Tap and hold for 5 seconds on the Multi-Function Touch Area of the left earbud.

Let's Explore The HD-Touch Display Of ACwO DwOTS Touch

Activate the HD Display

- Open the Charging Case: The HD Touch Display will activate automatically when you open the charging case.
- Swipe Right: Use the swipe right gesture to explore various features on the touch display.
- Check Notification Bar: View essential information such as battery percentage, earbud status, time, and Bluetooth connection from the notification bar at the top of the display.

Time and Date Setup

- Tap on "Setup": Access the time and date configuration settings by tapping on the "Setup" button.
- Configure Time and Date: Follow the on-screen instructions to set the current time and date on your ACwO DwOTS Touch display.

Find My Earphones

- Select Earbud Icon: Tap on the icon for either the right or left earbud to locate it.
- Click on "Start": Initiate the locating process by clicking "Start."
- Locate and Pause Sound: The earbud will emit a sound. Once located, press the "Pause" icon to stop the sound.

Screen Lock

- Choose Screen Lock Image: Select an image from the available options for your screen lock.
- Navigate Images: Use the left and right arrow icons to browse through different screen lock images and make your selection.

Language Switch

- Change Language: Tap the left or right arrow buttons to view and select from the list of available languages.

Light Level

- Adjust Brightness: Modify the display brightness by using the Light Level settings.
- Decrease Brightness: Click the left arrow to reduce the brightness.
- Increase Brightness: Click the right arrow to enhance the brightness.

Equalizer

- Select Audio Mode: Choose from preset equalizer modes to suit your listening preference.
- Navigate Modes: Use the left and right arrow buttons to cycle through audio modes such as Rock, Pop, Classic, and Jazz.

Noise Reduction

- Activate ANC and Transparency Mode: Toggle between normal mode, Active Noise Cancellation (ANC), and Transparency Mode by tapping the respective icons.

Volume Control

- Adjust Volume: Use the HD-Touch Display to control the volume by tapping the appropriate buttons.
- Increase Volume: Click the volume increase button to raise the volume level.
- Decrease Volume: Click the volume decrease button to lower the volume level.

Music Control

- Control Music Playback: Manage your music directly from the HD-Touch Display.
- Play/Pause: Tap the play/pause button to start or stop the music.
- Forward: Click the forward button to skip to the next track.
- Backward: Click the backward button to return to the previous track.

Camera Control and Like Control features may vary in functionality across different devices due to compatibility factors.