

SHARP

OPERATION MANUAL




BLENDER
MODEL EM-14
MODEL EM-M4 (No grinder)

| CONTENTS | PAGE |
|----------------------------|------|
| SAFETY INSTRUCTION | 10 |
| DESCRIPTION OF PARTS | 11 |
| SPECIFIC INFORMATION | 11 |
| HOW TO USE | 12 |
| MOTOR PROTECTION SYSTEM | 12 |
| CLEANING AND MAINTENANCE | 15 |
| HOW TO KEEP THE POWER CORD | 16 |

Please see the date of manufacture marked on the product

Thank you for your trust in products of
Thai City Electric Co., Ltd.
In order to use products in efficiency way.
Please read the instruction manual carefully
before using this appliance.

REV.1-2566

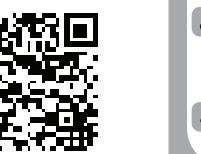

Scan for cookbook

SAFETY INSTRUCTION

Please read the warning and instruction for use carefully before using this appliance and comply strictly for your own safety and to prevent the damage that may occur on your property.

WARNING


- Do not use sharp material such as polished fiber to clean this appliance. Wipe it with soft damp cloth.
- Do not rinse or immerse the motor housing in water because it may cause electric shock and material damage.
- Always switch off before removing the blender jug from jug support.
- Do not plug in if you have wet hands because it may cause injury from leakage current.
- Always handle plug on safety part when plug in or unplug. Never pull the power supply cord to disconnect plug from the wall outlet because it may cause the power cord damage.
- Do not plug in other electronic equipment on the same wall outlet the wall outlet will overheat and lead to fire.
- Keep the appliance out of reach of children to protect them from sharp blades.
- High temperature ingredients should be cool down before filling in the blender jug.
- Do not exceed the maximum capacity of the blender jug.
- Do not place any material or hand inside the blender jug when the unit is operating.
- Always unplug the appliance from the wall outlet before cleaning or when not in use.

INSTRUCTION FOR USE

- The appliance is intended to be used for commercial applications, for example in kitchens of restaurants, canteens, hospitals and commercial enterprises such as bakeries, but not for continuous mass production of food.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- If the power cord or plug is damaged. The power cord must be replaced by the manufacturer, its aftersales service or similarly qualified persons in order to avoid danger a hazard.
- Children should be supervised to ensure that they do not play with the appliance.

*Detail is subject to change without prior notice.

DESCRIPTION OF PARTS

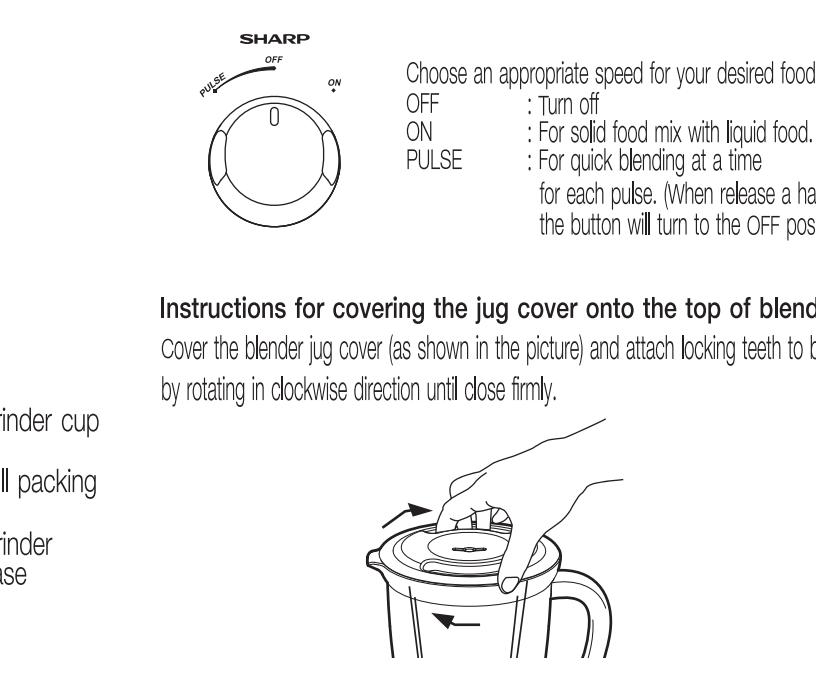

SPECIFIC INFORMATION

| MODEL | EM-14 | EM-M4 |
|----------------------------------|------------------------|-------|
| Blender jug capacity (ml) | 1.000 | |
| Grinder cup capacity (g) | 50 | - |
| Power consumption (W) | 400 | |
| Rated voltage (V) | 220 | |
| Rated frequency (Hz) | 50 | |
| Total weight (Kg) | 1.3 | |
| Product dimension (WxHxD) (mm.) | 198 x 360 x 175 | |
| Switch | 3 modes (PULSE/OFF/ON) | |
| Rust-free stainless steel blades | 4 blades | |
| Accessories | Stirrer | |

MOTOR PROTECTION SYSTEM

In the event of an overload condition, the motor protection system will shut down the motor immediately. To reset the appliance in case of auto stop protection due to overload, follow the steps below:

- Turn off the appliance and then unplug it.
- Remove some of the ingredients or add some liquid to reduce the load.
- Allow the appliance to cool down for 15 minutes.
- Connect the power plug to the power supply.
- Turn on the appliance to start processing again.

11

HOW TO USE

Speed selection




Choose an appropriate speed for your desired food.

- OFF : Turn off
- ON : For solid food mix with liquid food.
- PULSE : For quick blending at a time for each pulse. (When release a hand, the button will turn to the OFF position)


Instructions for covering the jug cover onto the top of blender

Cover the blender jug cover (as shown in the picture) and attach locking teeth to blender by rotating in clockwise direction until close firmly.

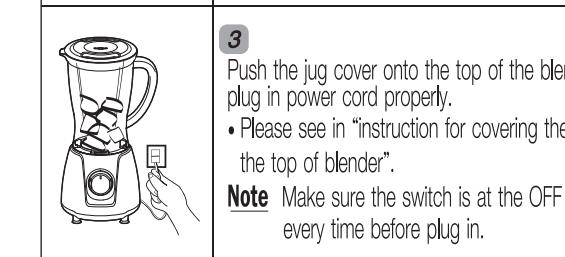

Instructions for using the stirrer

Insert the stirrer through the hold on the jug cover to stir the ingredients in blender jug.

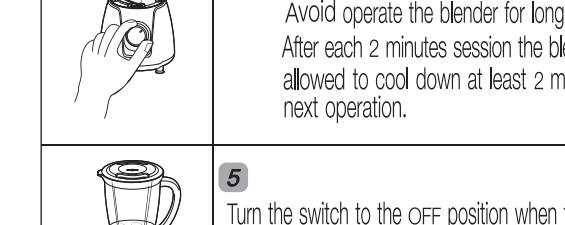

MOTOR PROTECTION SYSTEM

In the event of an overload condition, the motor protection system will shut down the motor immediately. To reset the appliance in case of auto stop protection due to overload, follow the steps below:

- Turn off the appliance and then unplug it.
- Remove some of the ingredients or add some liquid to reduce the load.
- Allow the appliance to cool down for 15 minutes.
- Connect the power plug to the power supply.
- Turn on the appliance to start processing again.

12

USING YOUR BLENDER


USING YOUR GRINDER (Except Model EM-M4)




- Add all required ingredients to the blender jug.
- Note • The maximum capacity of the blender 1,000 ml
• Avoid use the ice cubes.




- Cover with the grinder base turn anti-clockwise to lock tightly.
- Place the blender jug on the motor housing and rotate the jug in clockwise direction until locked.

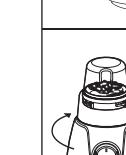

- Place the grinder cup on the motor housing and turn clockwise until it locked.
- Note If the grinder cup is not correctly locked, the motor will not work.

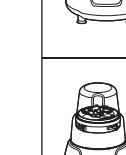

- Push the jug cover onto the top of the blender jug and plug in power cord properly.
- Note Please see in "instruction for covering the jug cover onto the top of blender".
- Note Make sure the switch is at the OFF position every time before plug in.

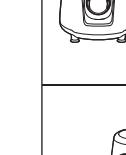

- Turn the switch to the ON, PULSE position to start using the blender.
- Please see in "Speed selection".
- Note Avoid use the blender without the jug cover. Avoid operate the blender for longer than 2 minutes. After each 2 minutes session the blender must be allowed to cool down at least 2 minutes before next operation.



- Turn the switch to the OFF position when finish using.



- Turn the switch to the OFF position when finish using.




- Rotate the grinder cup as anti-clockwise direction and lift it off the motor housing.

13

14

CLEANING AND MAINTENANCE

CLEANING AND MAINTENANCE

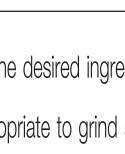

- Fill a half jug blender of water or mix with small amount of dishwashing liquid and cover with the jug cover. Place on the motor housing then turn the switch to PULSE position for a moment and release, repeat it.



- Lift the blender jug away from the base. Rinse with clean water and dry thoroughly with soft dry cloth.

Note
Take care when handing the sharp blade. It may cause injury particularly when cleaning.

Grinder base and grinder cup (Except Model EM-M4)

Rinse with clean water and dishwashing liquid, use soft brush to clean them dry thoroughly with soft dry cloth.



- Turn the switch to the ON, PULSE position to start using the blender.
- Avoid operate the grinder for longer than 2 minutes. After each 1 minute session the grinder must be allowed to cool down at least 2 minutes before next operation.



- Turn the switch to the OFF position when finish using.




- Turn the switch to the OFF position when finish using.

15

HOW TO KEEP THE POWER CORD

HOW TO KEEP THE POWER CORD

After use, keep the power cord into cord storage and insert the power cord into lock position.

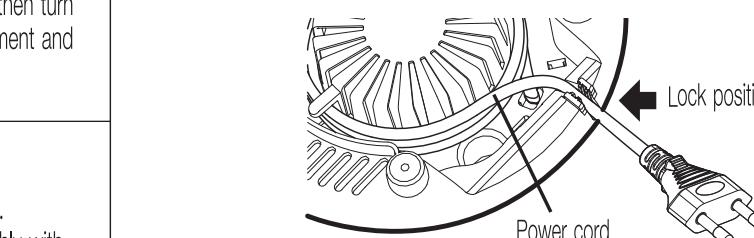

Note
Avoid keep the power cord when the motor housing is still hot. Periodically check the power cord and plug for any sign of damage.

รายชื่อผู้นำเข้าและจัดจำหน่าย
ก่อตั้งในประเทศไทยโดยบุคคลเดียว
www.THAICITY4SOCIAL.COM

Sole Distributor in Thailand
THAICITY ELECTRIC THAI CITY ELECTRIC CO., LTD.
1643/4 New Petchburi Rd., Makkasan, Ratchathewi,
Bangkok 10400 Tel. 0 2393 3111 Call Center 0 2254 5000
E-mail: callcenter@thaicity.co.th

www.thaicity.co.th
www.sharp-weeclub.com
@sharpweeclub

