




- Do not operate this device in a hazardous atmosphere.
- Do not replace or change accessories in a hazardous atmosphere. Contact sparking may occur while installing or removing accessories and cause an explosion or fire.
- Do not disassemble this device in any way that exposed the internal electrical circuits of the unit.
- Make sure to read this manual before using the machine. Please keep it in hand for future reference.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Overview

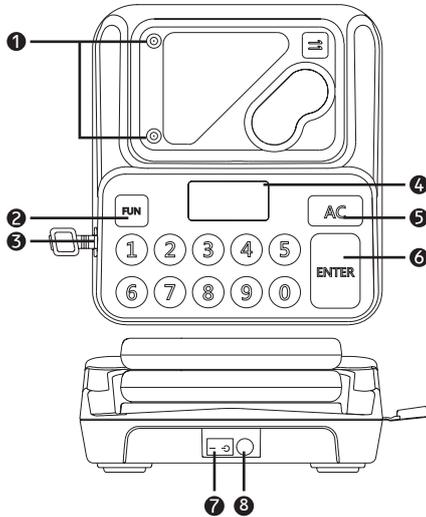


- 1 Charging Contact
- 2 Function
- 3 Micro USB
- 4 Display Screen
- 5 Delete / Back
- 6 Enter / Send
- 7 Power Switch
- 8 Power Supply

★ Frequency : 430~470 MHz
Coverage : 500~700 m

Setting (In Programming Mode)

Set up frequency or channel

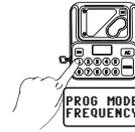

- Press " 1 " and then press " ENTER " to set up the frequency/channel.
- [Frequency] e.g., 453.000 MHz, press 4-5-3-0-0-0-0 and press " ENTER " to save.
- [Channel 1~36] e.g., channel 5, press 0-5 and then press " ENTER " to save.
- ★ It can only be set in frequency OR channel mode.

Set up the button beep sound



- Press " 2 " and then press " ENTER " to set up the button beep sound
- Press " AC " to turn on / off the beep sound.
- Press " ENTER " to save the setting.

Set up screen backlight



- Press " 3 " and then press " ENTER " to set up screen backlight.
- Press " AC " to turn on / off the screen backlight.
- Press " ENTER " to save the setting.

Set up HI / LO power



- Press " 4 " and then press " ENTER " to set up Hi / Lo power.
- Press " AC " to switch HIGH (100mw) / LOW (10mw).
- Choose one type and then press " ENTER " to save the setting.

Range test



- Test the range with No.1 pager.
- Press " 5 " and then press " ENTER " to run a range test.
- Press " ENTER " to start the test, the A08 transmitter will transmit a signal every 15 seconds, the pager will alert until it cannot receive the signal, so that you can know the coverage.

Set up alert type



- Press " 6 " and then press " ENTER " to set up the alert type.
- Press " AC " to switch the alert type.
 1. ALL : Flash+Vibrate+Beep
 2. BEEP / LED : Beep+Flash
 3. Motor / LED : Vibrate+Flash
- Choose one type and then press " ENTER " to save the setting.

Air programming




- Switch on the pager and it will be programmed within 30 seconds. (The LED indicator 2 remains on)
- Press " 7 " and then press " ENTER " to do air programming. In this mode, the settings (such as alert type) can be loaded from A08TCP to A08 pager.
- Press the number (1-99) to set up the number of pager, then press " ENTER " to save the settings, you will hear two beeps when the pager is programmed successfully.

Set up LED sign (optional)



- Press " 9 " and then press " ENTER " to enter LEDsign LDN3 setting.
- Press " AC " to turn on / off the LDN3.
- Press " ENTER " to save the setting.
- ★ This function is available when the A08TCP works with LDN3.

Overview

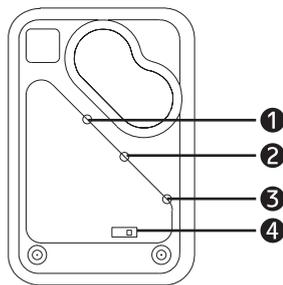

- 1 LED Indicator 1
Flashing : air programming done
 - 2 LED Indicator 2
Remain on : air programming
 - 3 LED Indicator 3
Remain on : charging
Flashing : standby mode
 - 4 Power Switch / Programming hole
- ★ When the pager gets low battery, the alert (Beep+Vibrate+LED) will last for 8 secs. and then three LED indicators remain on. Please charge the pager as soon as possible.
- ★ If you want to use the other GA transmitters with A08 pagers, you can program the pagers via this programming hole. Besides, you can check on the capcode by pressing " 8 " in A08TCP programming mode.

Operation

Calling Pager



- Turn on the power, then you can call the pager that you would like to call.
- For example, to call the customer who is holding the No.9 pager, press " 9 " and " ENTER " .

★ Maximum pagers that can be called are 99 pcs
Coverage : 500~700 m

Air Close



- Press " FUN ", the display will show " Air Close " and then press " ENTER " to turn off the pagers. The pagers will be turned on when they are put back to the charger.

Programming Mode

Programming



- Hold " FUN " and switch on the power
- The display shows " PROG MODE " which means it's already in programming mode.
- Press corresponding number to set up the function.
- Press " FUN " to back to the " PROG MODE " .
- After finishing programming, please turn off and then turn on the device again to save the settings.