



Kmart 43113460 Hungry Dino Set Instruction Manual

[Home](#) » [Kmart](#) » Kmart 43113460 Hungry Dino Set Instruction Manual 

Contents


- [1 Kmart 43113460 Hungry Dino Set](#)
- [2 INSERTING BATTERIES](#)
- [3 HOW TO PLAY](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)



Kmart 43113460 Hungry Dino Set




1 Dino Scorekeeper • 2 Blasters • 16 Indoor Foam Balls

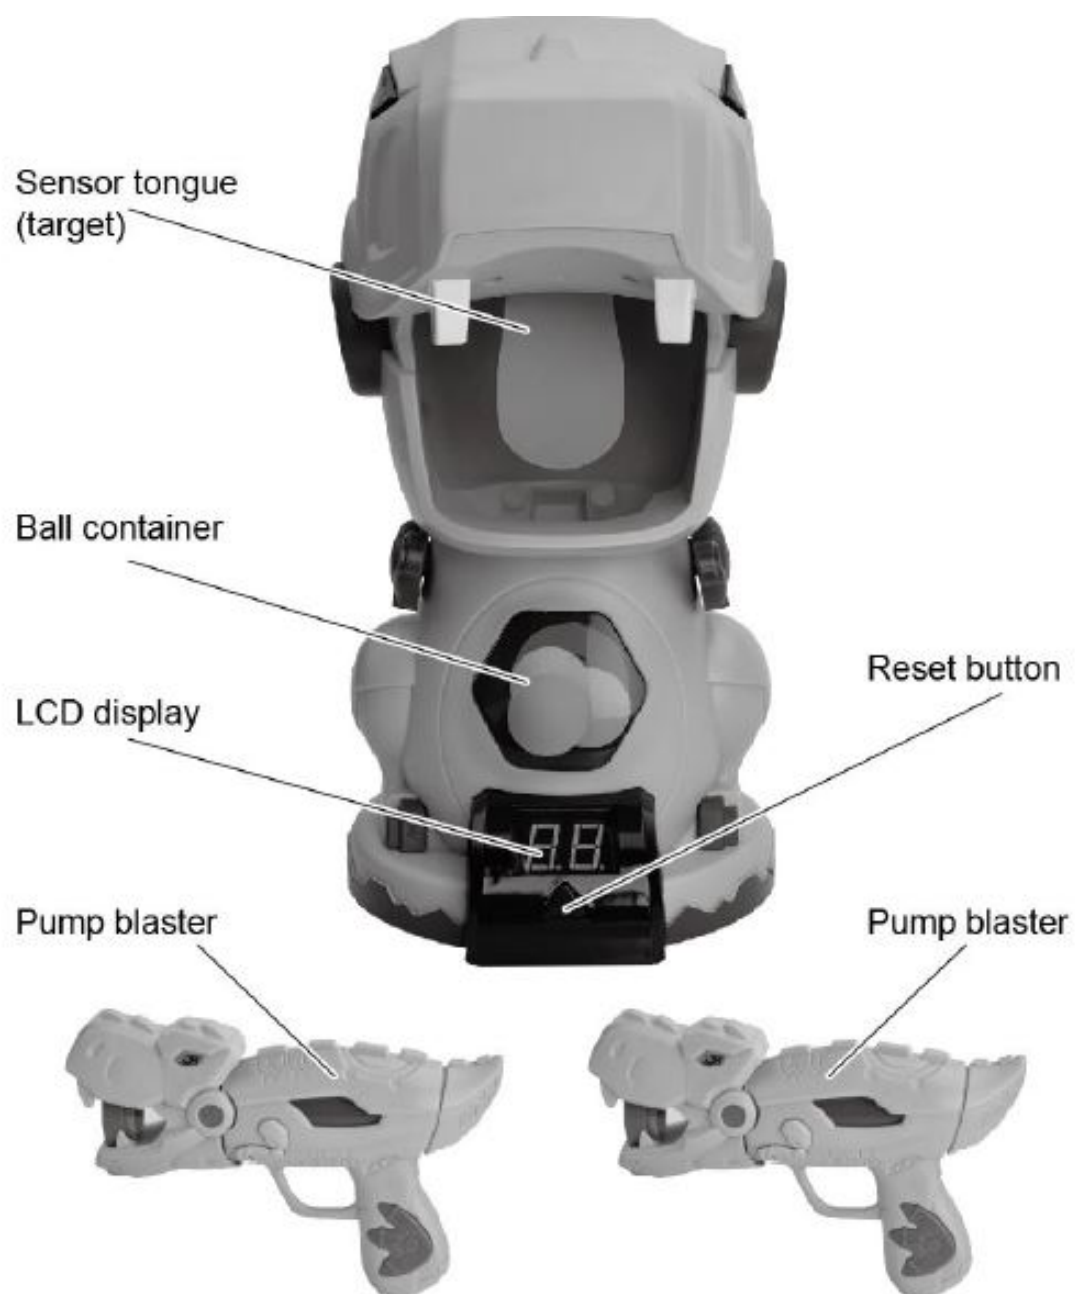

INSERTING BATTERIES

1. Unscrew to open battery cover, insert 2 x 1.5V AA batteries.
2. Replace battery cover.

Attention: Remove batteries after you have finished using your product.

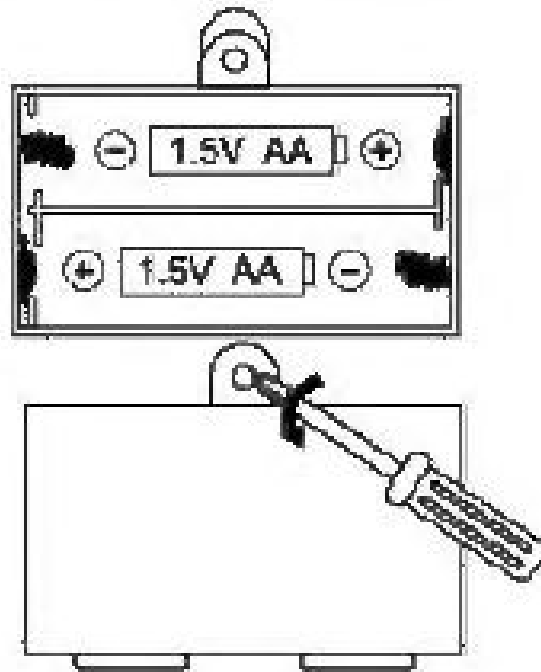

**Requires 2 x 1.5V AA batteries
(Not included)**

HOW TO PLAY

1. Use the pump blaster to aim for the tongue which is the target.
2. The LCD display will show the score for 11•11 each time you hit the tongue. ‘
3. Take the balls out of the dino’s tail to prepare for the next shot.
4. If you want to reset the score, press the reset button.





WARNING:

FOR SAFETY REA.IONS, REMO/E All w;s, LABELS AND PI.ASTIC FASTENERS BEFORE GMNG THIS TOI TO IOUR CHILD.

WARNING:

NOT SUITABLE FOR CHILDREN UNDER 3 YEARS AS FOAM PIECES MAY BREAK OFF AND CAUSE A CHOKING HAZARD.

Documents / Resources



[Kmart 43113460 Hungry Dino Set](#) [pdf] Instruction Manual
43113460, Hungry Dino Set