



kmart 43150182 Hover Shot Floating Target Set Instructions

[Home](#) » [Kmart](#) » kmart 43150182 Hover Shot Floating Target Set Instructions 



HOVER SHOT FLOATING TARGET SET INSTRUCTIONS (6+ years)

Contents


- [1 Contents:](#)
- [2 Battery installation:](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

Contents:

1 X Electric target, 1 X Blaster, 6 X Darts, 5 X Foam balls



Battery installation:

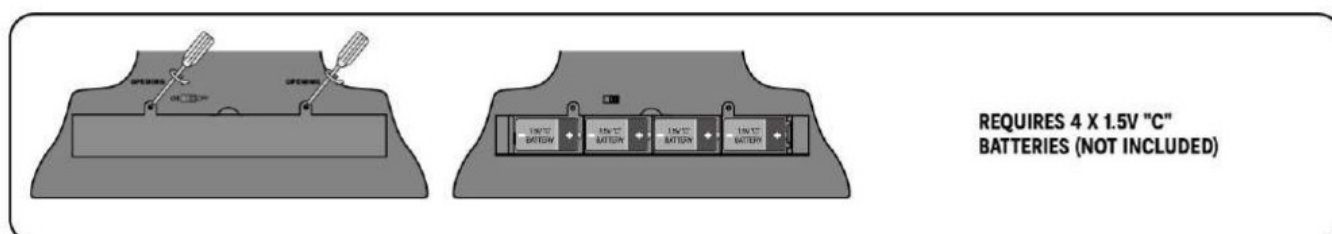

WARNING: DO NOT AIM AT EYES OR FACE DO NOT USE PROJECTILES OTHER THAN THOSE SUPPLIED BY THE MANUFACTURER.

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+AND-) DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

KEYCODE: 43150182

ADULT ASSEMBLY AND SUPERVISION ARE REQUIRED.

THE PRODUCT MAY VARY FROM THE IMAGE SHOWN.

PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE.


WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS, AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD / A



WARNING: CHOKING HAZARD SMALL PARTS AND SMALL BALLS NOT FOR CHILDREN UNDER 3 YEARS



Documents / Resources

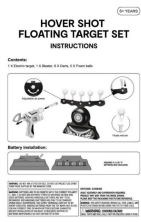

[kmart 43150182 Hover Shot Floating Target Set](#) [pdf] Instructions
43150182, Hover Shot Floating Target Set, 43150182 Hover Shot Floating Target Set