

Kmart ANKO Christmas Magical Switch Controller Instruction Manual

Contents

[1 ANKO Christmas Magical Switch Controller](#)

[1.1 Installation and pairing](#)

[1.2 FAQs](#)

[2 Documents / Resources](#)

[2.1 References](#)


[3 Related Posts](#)

ANKO Christmas Magical Switch Controller

Christmas Magical Switch Controller is the simple and fun solution to turning on and off your Christmas tree lights by flick of the switch.



Magic Switch Controller (requires 3 x AA batteries, not included)

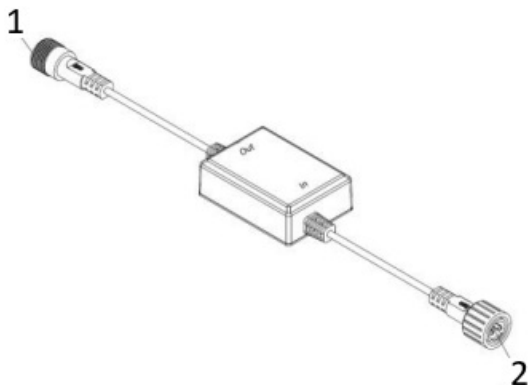


Wireless RF Receiver

1. To String Lights
2. To Low Voltage Power Adaptor

Installation and pairing

1. Plug your Low voltage power adaptor to end marked with **In**.
2. Plug your sting lights to the end marked with **Out**. Plug the adaptor to the wall power outlet and turn the wall power outlet switch on.

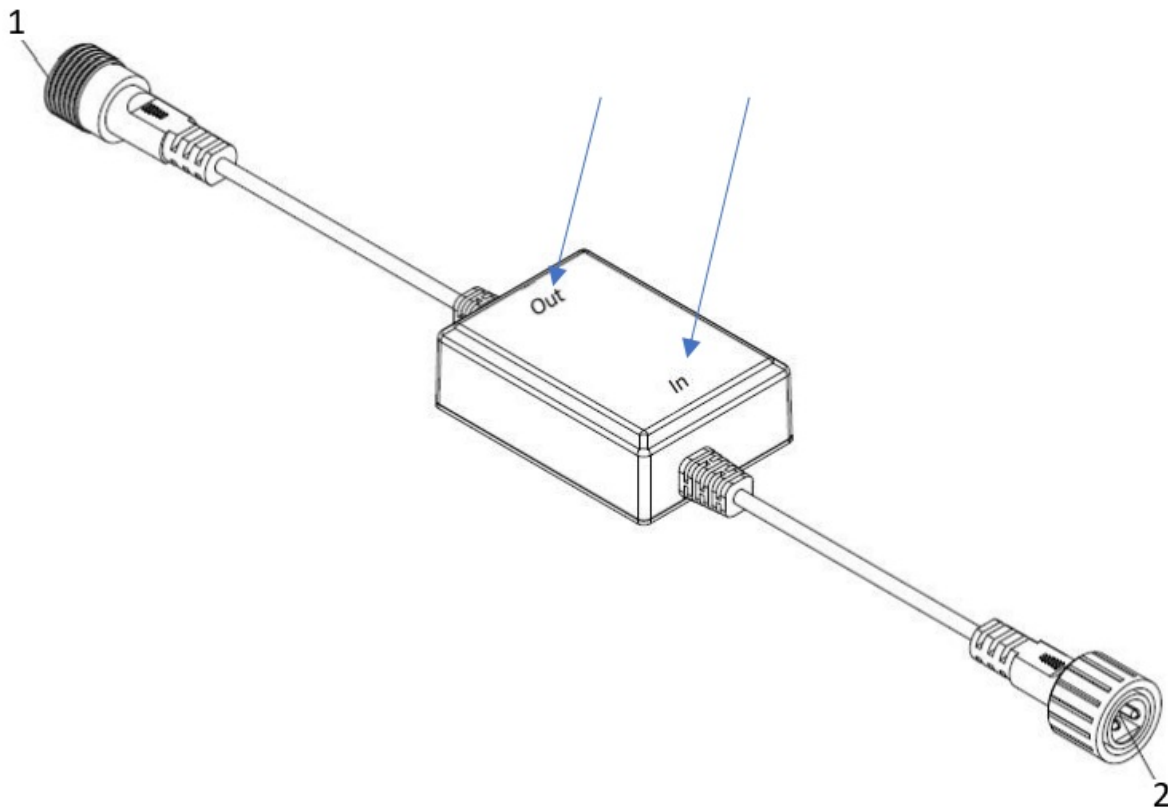

1. To String Lights
2. To Low Voltage Power Adaptor

3. Please Wait for the string light starts to blink 3 times (this can be 5 seconds to 1 min depends on the brand and model of your string lights)
4. now flick the magic switch ON/OFF to finish the pairing process. NOTE: you need to repeat this pair process each time you turn off the main power supply to the low voltage power adaptor.

Enjoy the luxury of having your kids control your Christmas tree lights.
Please allow 5 seconds between engaging and disengaging the lights.

WARNING: 240V mains power adaptor and switch must remain indoors at all times. operation range: Up to 10m in the open space.

Caution

1. **Only use the batteries specified and be sure to match the + – polarity signs**
2. **Do not mix Alkaline, standard Carbon-zinc or rechargeable Nickel-Cadmium batteries.**
3. **Do not mix old and new batteries**
4. **Remove exhausted or dead batteries from the product**
5. **Remove batteries if the product is not to be used for a long time**
6. **Do not dispose of the batteries in fire. Batteries may explode or leak.**

7. Keep the batteries away from children, if swallowed seek for medical attention immediately

FAQs

why the switch controller no longer work or lost the sound function?

when the battery is low, it may not have then enough power to send the ON/OFF signal to the receiver or play the sound effect, We suggest you replacing the battery with premium batteries such as Duracell or Energizer

I have brand new batteries but it doesn't seem to able turn the Christmas light on/off?

this mean the wand controller is not paired/disconnected with the wireless RF receiver, please turn off the main power supply to the low voltage adaptor, wait for 5min, then power on and follow the installation and pairing process.



All trademarks are used for reference purposes only. Made in China

Documents / Resources

	<p>Kmart ANKO Christmas Magical Switch Controller [pdf] Instruction Manual ANKO Christmas Magical Switch Controller, ANKO, Christmas Magical Switch Controller, Magic al Switch Controller, Switch Controller</p>
--	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.