



## Kmart P\_43138913 Portable Pop-Up Projector Screen Instructions

[Home](#) » [Kmart](#) » Kmart P\_43138913 Portable Pop-Up Projector Screen Instructions 

Kmart P\_43138913 Portable Pop-Up Projector Screen Instructions



#### Contents


[1 SET UP](#)

[2 Documents /  
Resources](#)


[3 Related Posts](#)

## SET UP

- Before open the screen, please make sure the place is big enough. Take out all components.  
Open the screen and base.

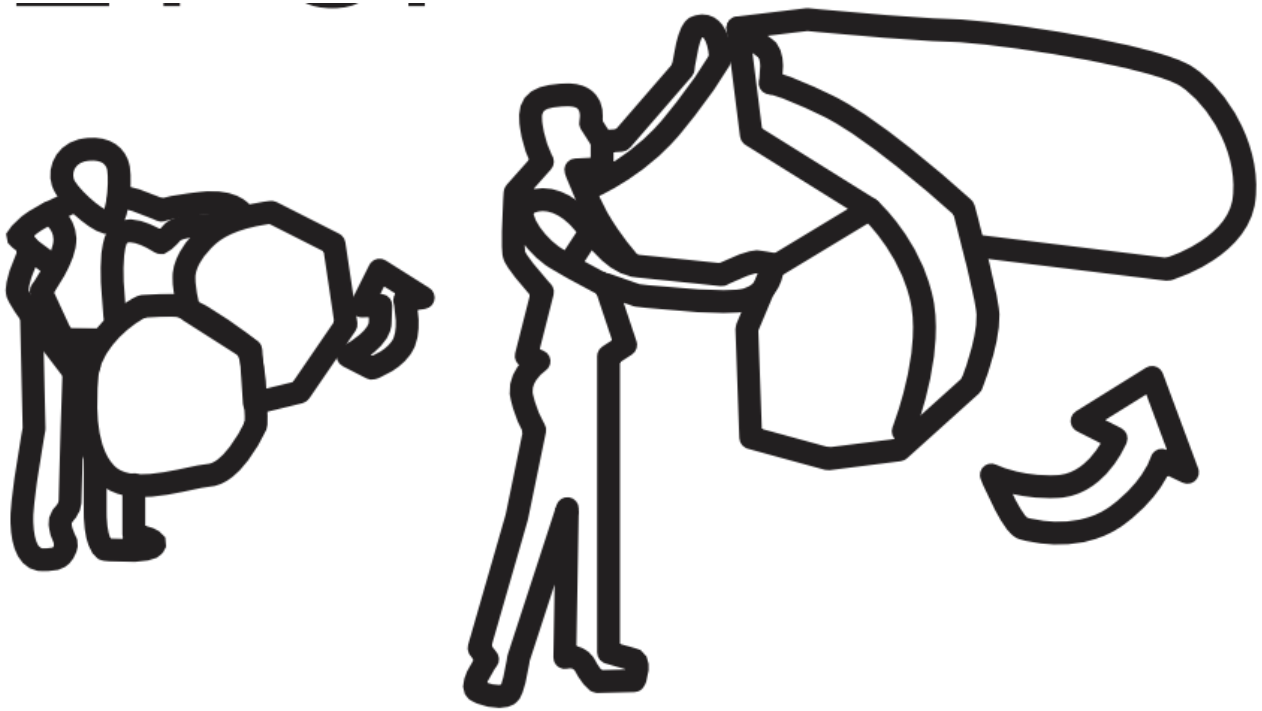


- Fix the two parts by using the hook and loop fasteners on the connected parts. Fix the belly band.  
Connect the support bar and put it into the holes on belly band.  
Adjust the belly band length.

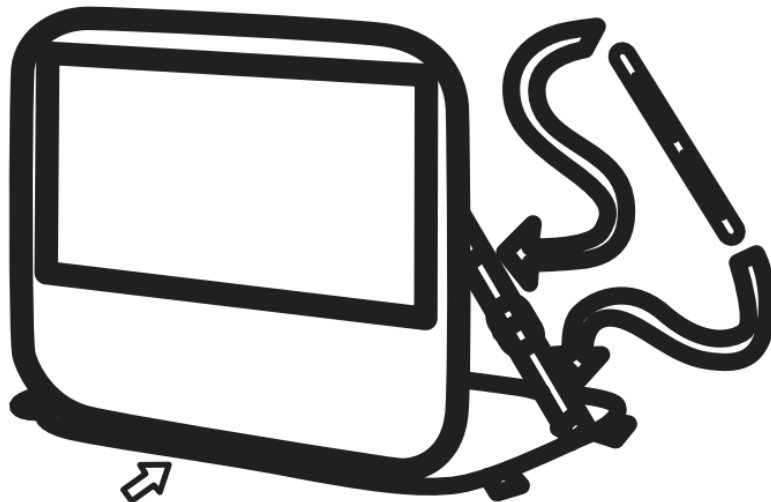


Support Bar

4 Velcro stickers on the bottom

- Using some heavy goods to put on the base to make it strong enough.

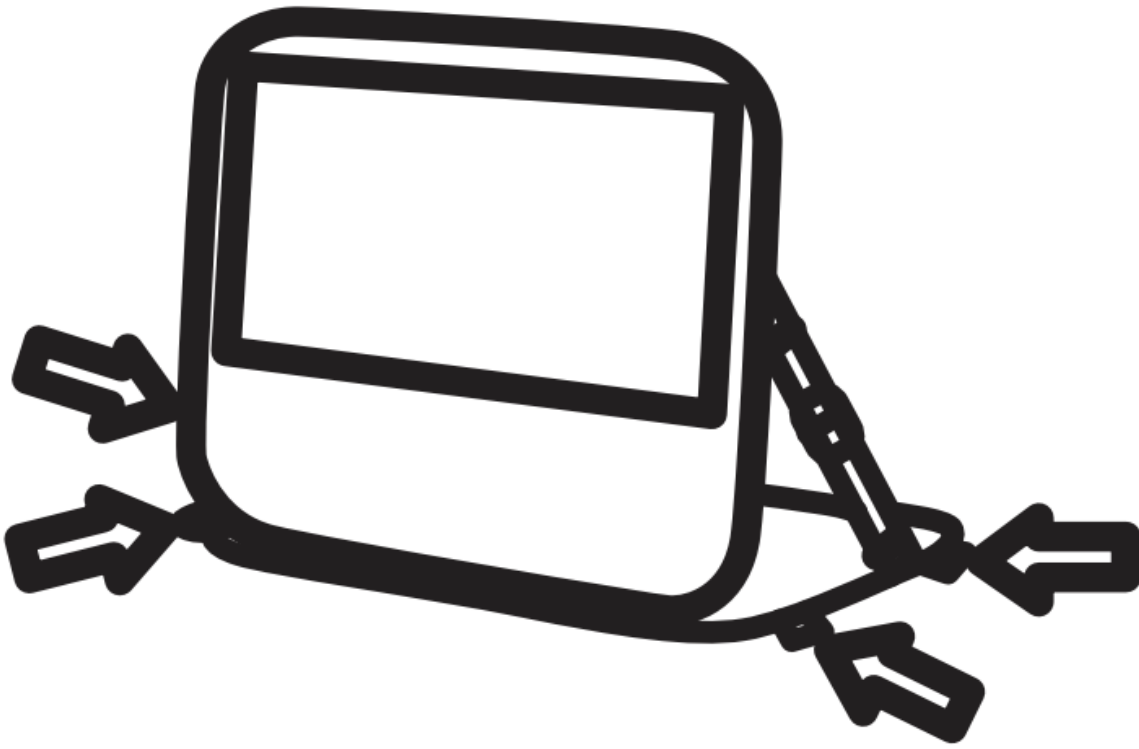


- Take out the metal stick and loose all belly band, separate all components.

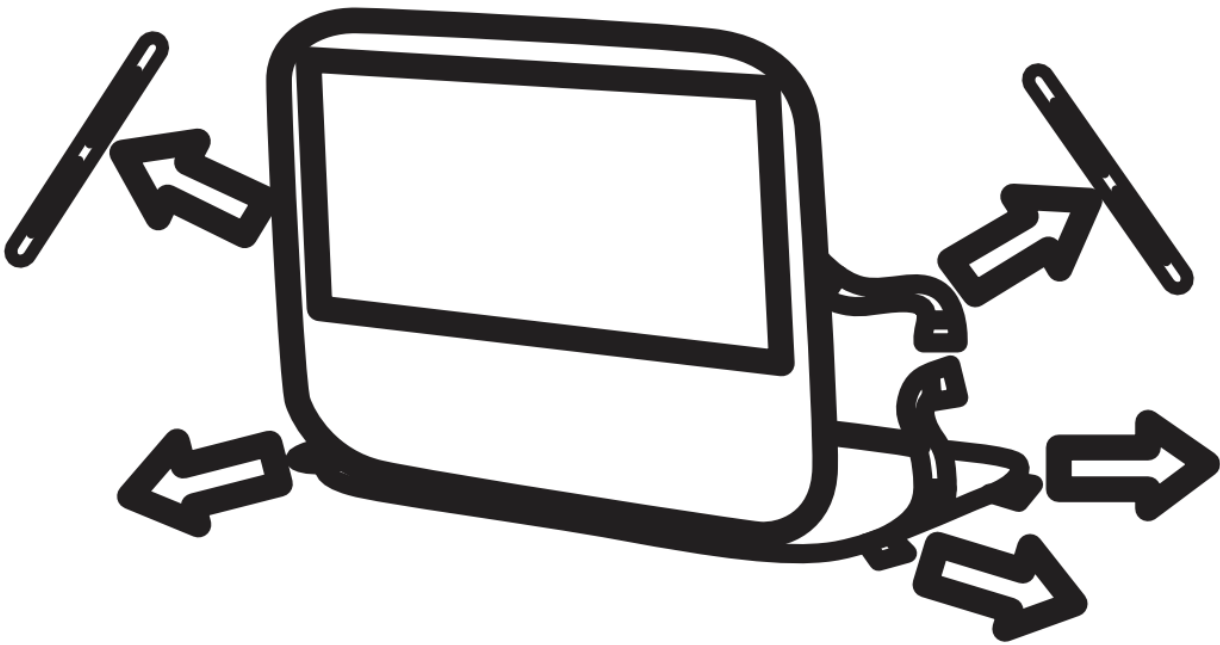


- Turn around to make a circle for the screen and base.




- Put all components into the bag

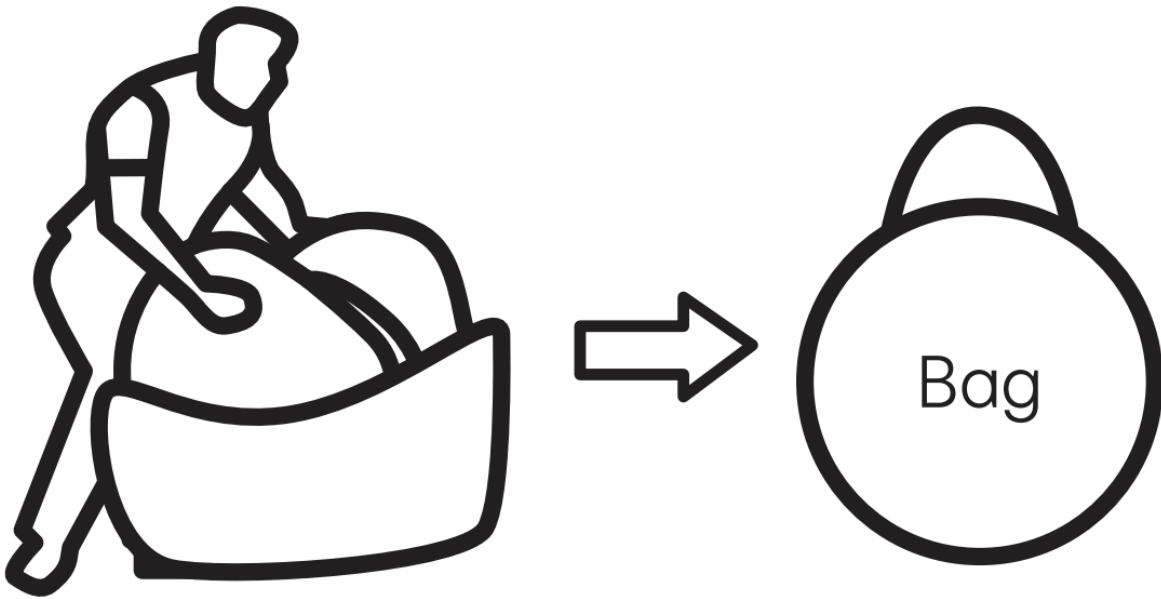

- Twist the pieces together in an "8" shape.

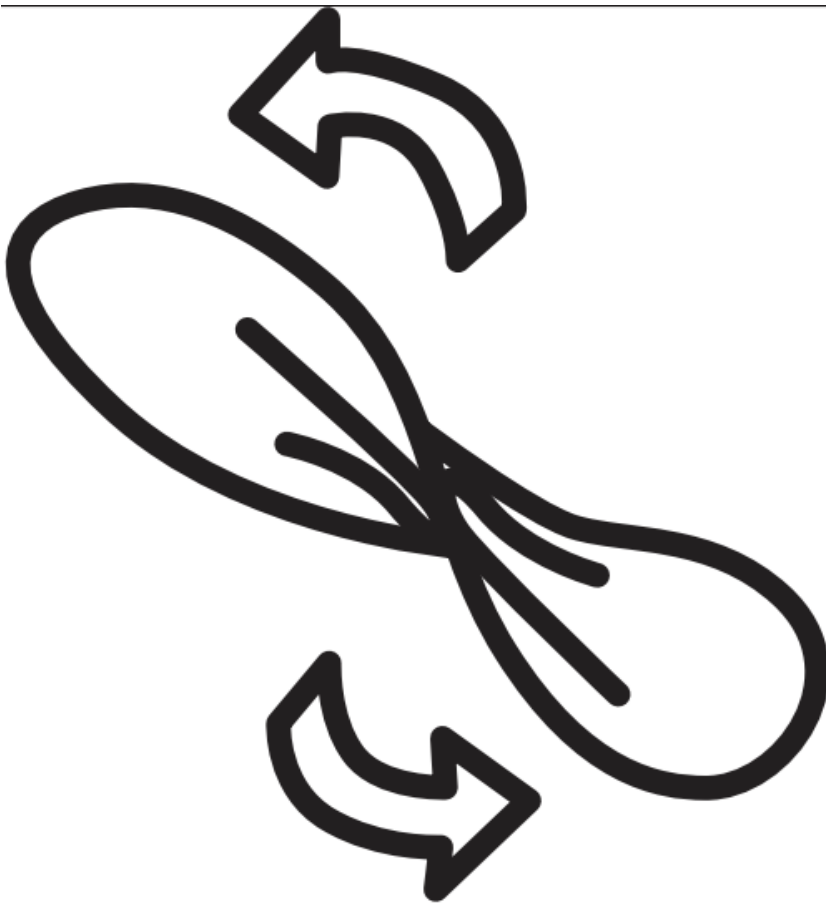

- Turn the figure 8 head to the center

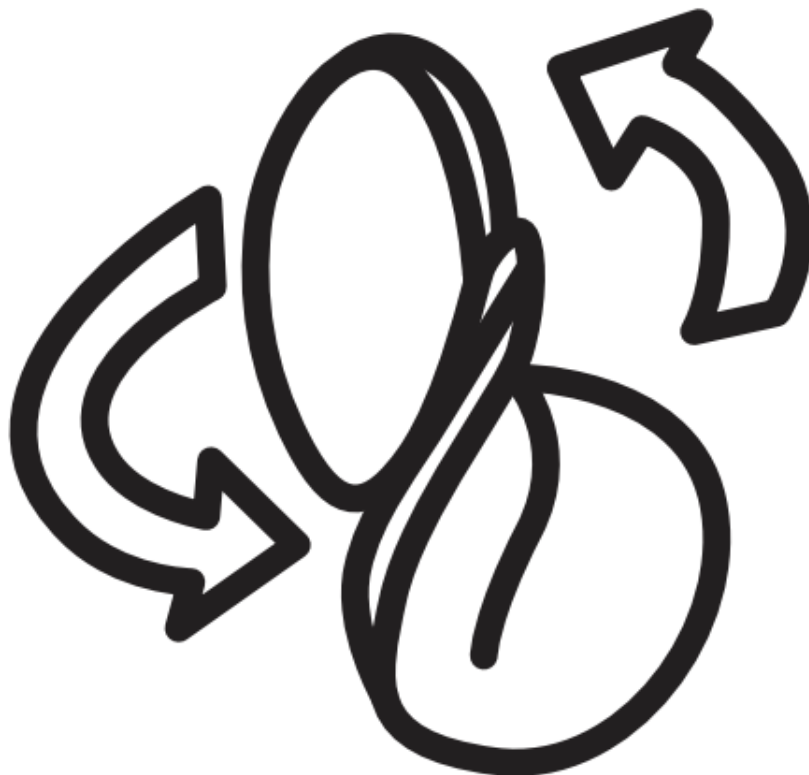


- Compressed up and down, stacked together in 3 layers



#### **WARNING:**

 1. Young children should be supervised to ensure that they don't play with the projection screen.
2. Do not use during a strong wind condition.
3. Keep away from all hot area and naked flames

#### **Documents / Resources**

	<p><a href="#">Kmart P_43138913 Portable Pop-Up Projector Screen</a> [pdf] Instructions P_43138913, Portable Pop-Up Projector Screen, Pop-Up Projector Screen, Projector Screen, P_43138913, Screen</p>
-------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------