

KMC
CONTROLS
BAC-5051-A-E Airflow
Measurement System



KMC CONTROLS BAC-5051-A-E Airflow Measurement System User Guide

[Home](#) » [KMC CONTROLS](#) » KMC CONTROLS BAC-5051-A-E Airflow Measurement System User Guide 

Contents

- 1 KMC CONTROLS BAC-5051-A-E Airflow Measurement System
- 2 Product Information
- 3 Product Usage Instructions
 - 3.1 Point-to-Point Checkout Tasks
- 4 FAQ
- 5 INTRODUCTION
- 6 PREREQUISITES
- 7 ACCESSING THE AFMS PAGES
- 8 POINT-TO-POINT CHECKOUT TASKS
- 9 DAMPER SPAN CALIBRATION TASKS
- 10 LEARNING MODE TASKS
 - 10.1 Manually Starting Learning Mode
- 11 ABOUT TESTING AND BALANCING AFMS
- 12 HANDLING PRECAUTIONS
- 13 SUPPORT
- 14 Documents / Resources
 - 14.1 References
- 15 Related Posts



KMC CONTROLS BAC-5051-A-E Airflow Measurement System



Product Information

Specifications

- **Product Name:** BAC-5051(A)E Pages for Configuring an AFMS
- **Manufacturer:** KMC Controls
- **Model Number:** BAC-5051(A)E
- **Default IP Address:** 192.168.1.252

Product Usage Instructions

Prerequisites

1. Install the AFMS (the controller and all system components).
2. Select the application needed for the equipment on the AFMS controller.
3. Set the AFMS controller's communication parameters.
4. Configure the router and set up routing to the AFMS controller.

Accessing the AFMS Pages

1. Log in to the router using a web browser.
2. Go to Advanced > Balancing / AFMS / ZEC.
3. In Instance Range, enter the device instance set for the AFMS controller and click Discover.
4. Select the AFMS controller's Instance from the list that appears.

Point-to-Point Checkout Tasks

The following are steps for point-to-point checkout tasks:

Set Control Mode to Damper Position Control

1. On the Configure page, in the System Setup group:
 1. For Control Mode, select DMPR POSITION CTRL from the drop-down menu.
 2. Click Save.

Verify Pressure Transducer Settings

Do the following for all pressure transducers (supply and pressure assist) that were installed, following their manufacturer's installation instructions:

1. Verify that the signal output type is set to volts.

FAQ

What is the default IP address of the BAC-5051(A)E router?

The default IP address of the BAC-5051(A)E router is 192.168.1.252.

INTRODUCTION

- This document guides users through checkout and commissioning of an Airflow Measurement System (AFMS). It is designed to aid in completing the tasks on the Note Sheets for AFMS Checkout and Commissioning.
- The BAC-5051(A)E router can be used to configure, control, tune, and monitor the operation of an AFMS. AFMS features are accessible through the Balancing / AFMS / ZEC web page and are active once a valid AFMS controller has been discovered.

NOTE: The default IP address of the BAC-5051(A)E router is 192.168.1.252.

PREREQUISITES

1. Install the AFMS (the controller and all system components).

NOTE: See the AFMS installation guide found on any AFMS controller's product page.
2. Select the application (on the AFMS controller) needed for the equipment.

NOTE: See the AFMS selection guide for a table listing the configuration tools that can be used to select the application. Select the application before configuring other settings. Changing applications after configuration will restore most parameters to their defaults.
3. Set the AFMS controller's communication parameters.

NOTE: See the AFMS selection guide for a table listing the configuration tools that can be used to set the communication parameters.
4. Configure the router and set up routing to the AFMS controller.

NOTE: See the Application and Installation Guide for the BAC-5051AE Router for details.

ACCESSING THE AFMS PAGES

1. Log in to the router using a web browser.

NOTE: See the Application and Installation Guide for the BAC-5051AE Router for details.
2. Go to Advanced > Balancing / AFMS / ZEC.


3. For Instance Range, in Start, enter the device instance that was set for the AFMS controller.

NOTE: End automatically fills with a value, making a range of 50 device instances.

4. Click Discover.

5. Click the circle next to the AFMS controller's Instance.

NOTE: The selected AFMS controller highlights and the AFMS configuration page tabs appear below.

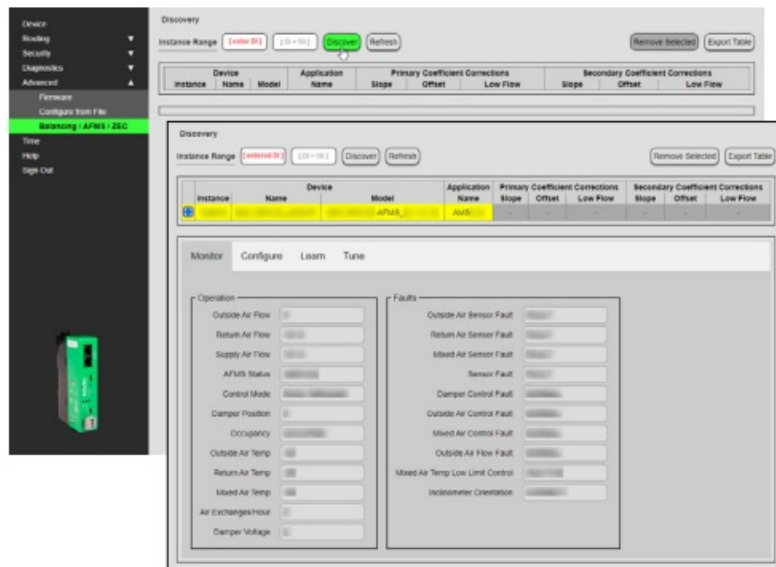


POINT-TO-POINT CHECKOUT TASKS

The steps for each point-to-point checkout task are presented in subsections below. Complete each task/subsection in the order presented.

Set Control Mode to Damper Position Control

On the Configure page, in the System Setup group:

1. For Control Mode, select DMPPR POSITION CTRL from the drop-down menu.
2. Click Save.

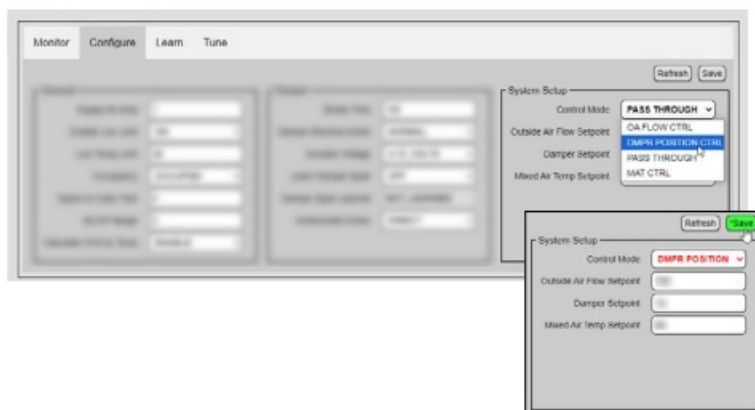

Verify Pressure Transducer Settings

Do the following for all pressure transducers (supply and pressure assist) that were installed, following their manufacturer's installation instructions:

1. Verify that the signal output type is set to volts.
2. Verify that the transducer is set to unipolar mode.

3. If the transducer has several pressure range options, verify that the correct range is set (according to the pressure range of the unit).

Make Pressure Transducer Zero Adjustment

- Zero out all pressure transducers (supply and pressure assist) that were installed, following their manufacturer's installation instructions.
- You will need to expose the transducer high and low ports to ambient pressure by temporarily removing the tubing from the ports. After zeroing the transducer, reconnect each tube to the correct port.

Set the Supply Air Differential Pressure Range (5901- AFMS only)

On the Configure page, in the General group:

1. For SA DP Range, enter the maximum inches of water column that the supply air pressure transducer can measure.

NOTE: For example, a TPE-1475-21, can measure up to 2" wc, so enter 2. A TPE-1475-22 can measure up to 10" wc, so enter 10. (A 9311-AFMS can measure up to 2" wc.) Some AFMS installations may use other pressure transducers.

2. Click Save.

A screenshot of a software configuration interface. At the top, there are four tabs: 'Monitor', 'Configure', 'Learn', and 'Tune'. The 'Configure' tab is active. Below the tabs, there are three main sections. The leftmost section is titled 'General' and contains several input fields: 'Supply Air Area', 'Enable Low Limit', 'Low Temp Limit', 'Occupancy', 'Space in Cubic Feet', 'SA DP Range', and 'Calculate CPM by Temp'. The 'SA DP Range' field is highlighted with a red rectangular box. To the right of this section are two other sections, each with multiple input fields. In the top right corner of the interface, there are two buttons: 'Refresh' and 'Save'.

Set the Supply Air Area

On the Configure page, in the General group:

1. For Supply Air Area:

- If the supply air pickup tubes were installed on the supply air fan bell, enter the square foot measurement of the fan inlet.
- If the supply air pickup tubes were installed in the supply air duct, enter the square foot measurement of the duct cross-section where the tubes are located.

NOTE: For assistance calculating the area, use the Free Area Calculator in the Note Sheets for AFMS Checkout and Commissioning.

2. Click Save.



Inspect Pressure Assist Pickup Tubes (PA only)

For pressure assist applications, ensure that the pickup tubes were installed in the correct location per the AFMS installation guide.

Calibrate the Supply Air Flow

On the Tune page, in the Calibration group:


1. Do any of the following:
 - In the Offset column for Supply Air Flow, enter the CFM offset (determined by a TAB technician) for the supply air pressure transducer.
 - In the Multiplier column for Supply Air Flow, enter the multiplier (determined by a TAB technician) for the supply air pressure transducer.
2. Click Save.




Calibrate OAD/RAD Diff. Pressure (pressure assist only)

For pressure assist applications, on the Tune page, in the Calibration group:

1. In the Offset column for OAD Diff. Pressure / RAD Diff. Pressure, enter the differential pressure offset (determined by a TAB technician) for the pressure assist pressure transducer.
2. Click Save.

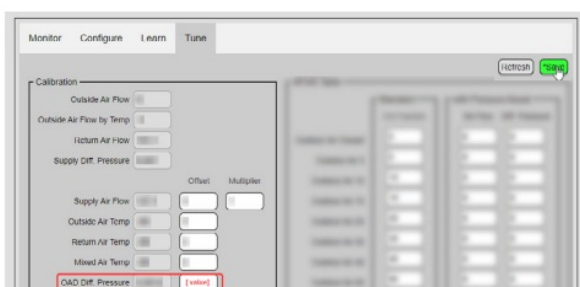

or

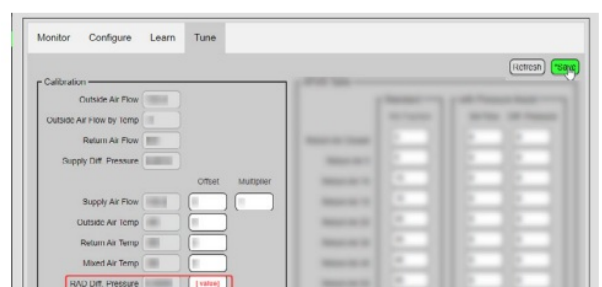

Verify and Calibrate Outside Air Temperature

On the Tune page, in the Calibration group:


1. Locate the OAT sensor's reading, next to Outside Air Temp.
2. Using a NIST-traceable instrument, measure the temperature near the OAT sensor.
3. Compare the two values.
4. Enter the Offset for Outside Air Temp.
5. Click Save.



Verify and Calibrate Return Air Temperature

On the Tune page, in the Calibration group:


1. Locate the RAT sensor's reading, next to Return Air Temp.
2. Using a NIST-traceable instrument, measure the temperature near the RAT sensor.
3. Compare the two values.
4. Enter the Offset for Return Air Temp.
5. Click Save.

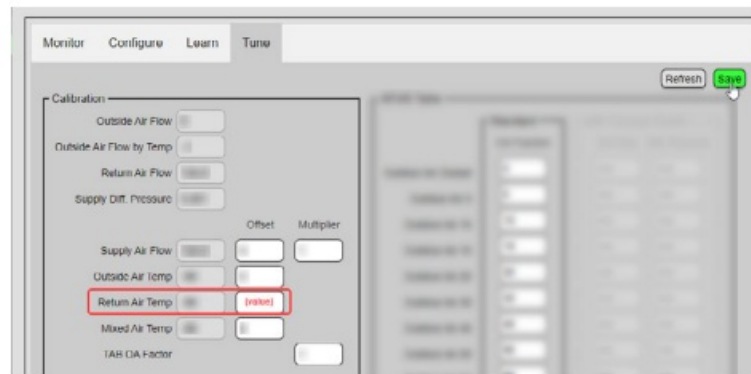

Verify and Calibrate Mixed Air Temperature

On the Tune page, in the Calibration group:

1. Locate the MAT sensor's reading, next to Mixed Air Temp.
2. Using a NIST-traceable instrument, measure the temperature near the MAT sensor.
3. Compare the two values.
4. Enter the Offset for Mixed Air Temp.
5. Click Save.

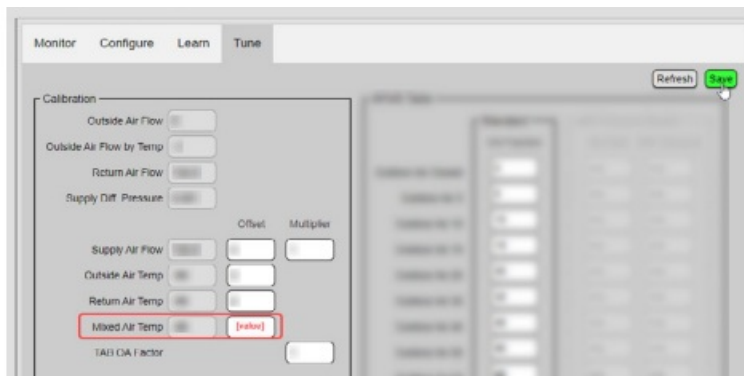


DAMPER SPAN CALIBRATION TASKS

After completing the Point-to-Point Checkout Tasks on page 3, calibrate the damper span. The steps for each damper span calibration task are presented in subsections below. Complete each task/subsection in the order presented.

Set the Damper Stroke Time

On the Configure page, in the Damper group:


1. For Stroke Time, enter the time (in seconds) that it takes for the actuator to move the damper from fully closed to fully open.
2. Click Save.

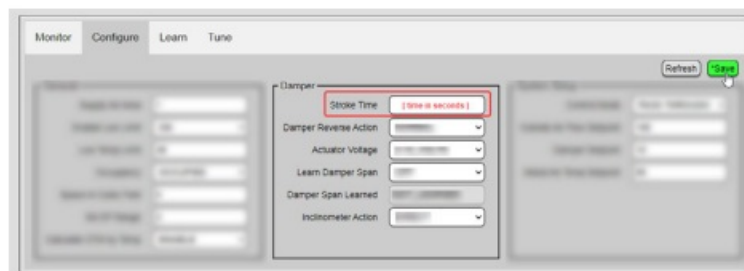

Set the Actuator Voltage Range

On the Configure page, in the Damper group:

1. For Actuator Voltage, select the voltage range of the damper actuator from the drop-down menu (2 to 10 volts or 0 to 10 volts).
2. Click Save.

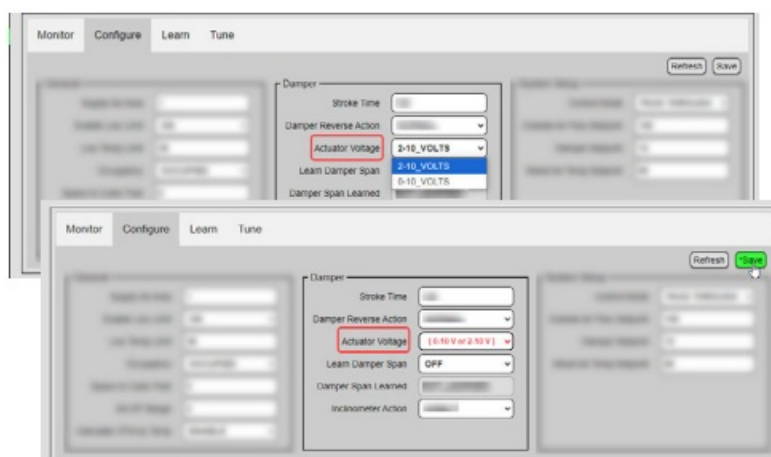

Turn On Learn Damper Span, then Verify

Before the AFMS can run Learn Mode, it must learn the minimum and maximum incline of the damper using the inclinometer. The Learn Damper Span sequence will take 3 to 5 minutes to complete.

On the Configure page, in the Damper group:

1. For Learn Damper Span, select ON from the drop-down menu.
2. Click Save.
3. After 3 to 5 minutes, verify that Damper Span Learned reports LEARNED.

The image shows two screenshots of a web-based configuration interface for a damper system. The interface has tabs for Monitor, Configure, Learn, and Tune. The 'Configure' tab is active. In the 'Damper' section, the 'Learn Damper span' dropdown menu is highlighted with a red box. In the top screenshot, it is set to 'ON' and 'Damper span Learned' is 'NOT_LEARNED'. In the bottom screenshot, after saving, 'Learn Damper span' is set to 'OFF' and 'Damper span Learned' is 'LEARNED'. A 'Save' button is visible in the top right corner of the configuration panel.

Stroke Damper and Visibly Verify Positions

On the Configure page, in the System Setup group:

1. Ensure that DMPR POSITION is set for Control Mode.
2. For Damper Setpoint, enter 0.
3. Click Save.
4. Once the actuator stops moving, visibly verify that the damper is fully closed.
5. For Damper Setpoint, enter 50.
6. Click Save.
7. Once the actuator stops moving, visibly verify that the damper is 50% open/ closed.
8. For Damper Setpoint, enter 100.
9. Click Save.
10. Once the actuator stops moving, visibly verify that the damper is fully open.

If the actuator is moving the damper in reverse (i.e. 10 volts = closed), see the next section, "Set Damper Reverse Action".

Monitor Configure Learn Tune

System Setup

Control Mode: DMPR POSITION

Outside Air Flow Setpoint: 0

Damper Setpoint: 0

Mixed Air Temp Setpoint: 0

Refresh Save

Monitor Configure Learn Tune

System Setup

Control Mode: DMPR POSITION

Outside Air Flow Setpoint: 0

Damper Setpoint: 10

Mixed Air Temp Setpoint: 0

Refresh Save

Monitor Configure Learn Tune

System Setup

Control Mode: DMPR POSITION

Outside Air Flow Setpoint: 0

Damper Setpoint: 100

Mixed Air Temp Setpoint: 0

Refresh Save

Set Damper Reverse Action (if needed)

If visual inspection (see the previous section) revealed that the damper actuator moves in reverse action (i.e. 10 volts = closed), on the Configure page, in the Damper group:

1. For Damper Reverse Action, select REVERSE from the drop-down menu.
2. Click Save.

Monitor Configure Learn Tune

Damper

Stroke Time: 0

Damper Reverse Action: REVERSE

Actuator Voltage: 0

Learn Damper Span: 0

Damper Span Learned: 0

Inclinometer Action: 0

Refresh Save

(if needed)




Stroke Damper and Verify that Reported Damper Position Follows


1. Go to Configure > the System Setup group:
2. Ensure that DMPR POSITION is set for Control Mode.
3. For Damper Setpoint, enter 0.
4. Click Save.
5. Once the actuator stops moving, visibly verify that the damper is fully closed.
6. Go to the Monitor tab.
7. Verify that Damper Position (in the Operation group) reports a value within $\pm 1\%$ of 0.

NOTE: The inclinometer can detect very small movements of the damper assembly.

8. Go to the Configure tab again.
9. For Damper Setpoint, enter 50.
10. Click Save.
11. Once the actuator stops moving, visibly verify that the damper is 50% open/ closed.
12. Go to the Monitor tab again.
13. Verify that Damper Position reports a value within $\pm 1\%$ of 50.
14. Go to the Configure tab again.
15. For Damper Setpoint, enter 100.
16. Click Save.
17. Once the actuator stops moving, visibly verify that the damper is now fully open.
18. Go to the Monitor tab again.
19. Verify that Damper Position reports a value within $\pm 1\%$ of 100.

If Damper Position reports values that are the opposite of the entered Damper Setpoint, see the next section, “Set Inclinometer Action to Reverse”.

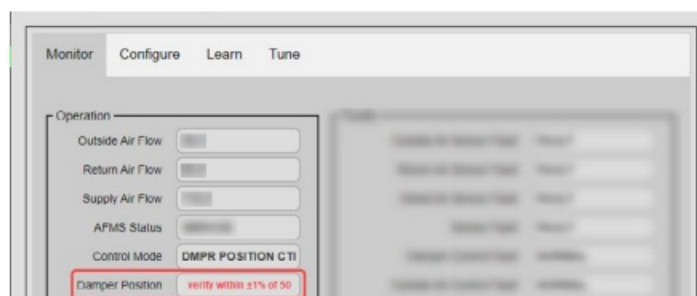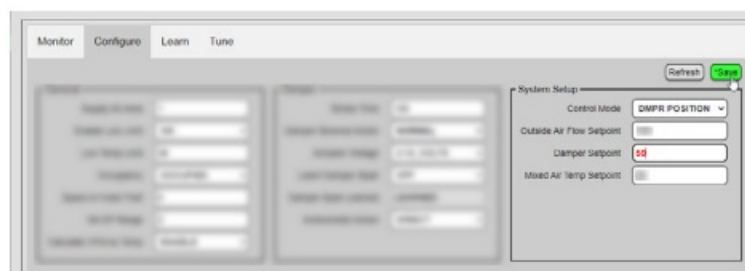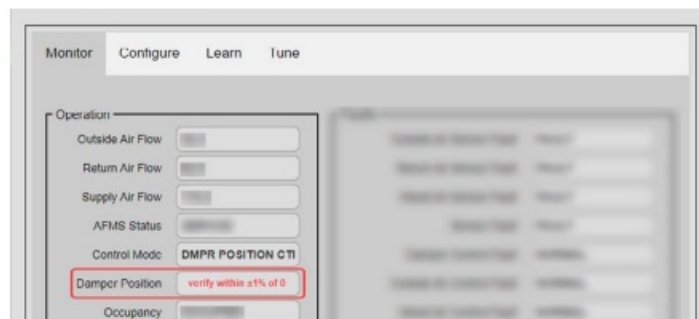

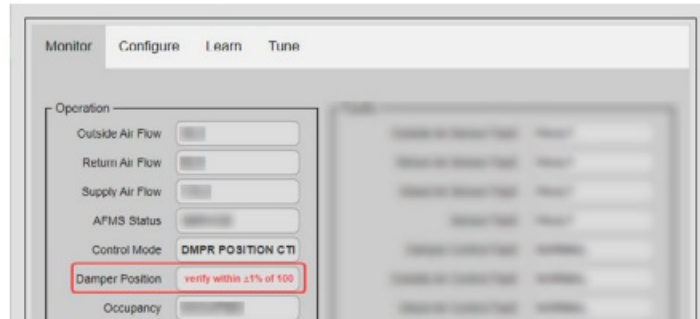


Set Inclinometer Action to Reverse (if needed)

For the standard (AMSO) application or OAD Pressure Assist (AMSOP) application, if the inclinometer was mounted on a horizontal return air damper blade because the outside air damper blades are vertical, then you need to set Inclinometer Action to REVERSE.

If testing revealed that Damper Position reports values that are the opposite of the Damper Setpoint (see the previous section), on the Configure page, in the Damper group:

1. For Inclinometer Action, select REVERSE from the drop-down menu.
2. Click Save.

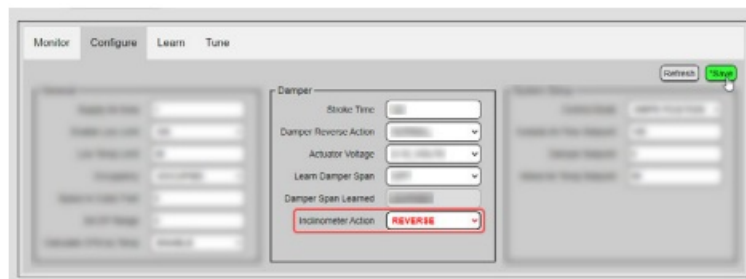

(if needed)

LEARNING MODE TASKS

The steps for each learning mode task are presented in subsections below. Complete each task/subsection in the sequence presented.

Prerequisite Tasks

Before starting Learning Mode, for valid results, ensure that:

- The sensors are calibrated (Point-to-Point Checkout Tasks on page 3).
- AFMS is configured properly (Damper Span Calibration Tasks on page 6).
- The supply air fan is running at a normal, steady rate (without hunting or sporadic spikes).
- If the unit has a heat recovery wheel, it is turned off.
- If any heating or cooling sources are located upstream of the MAT sensor, they are turned off.

- If the unit has a bypass damper, it is set to 100% open.

Starting Learning Mode

1. Go to the Learn tab.
2. Note whether Learn Ready reports READY or NOT READY.

If READY is displayed, Learning Mode can be started manually. Otherwise, see Enabling Learning Mode to Auto Start on page 10.

NOTE: In special cases, you may consider the Alternative to Running Learning

The screenshot shows a web-based control interface with four tabs: Monitor, Configure, Learn, and Tune. The 'Learn' tab is active. In the top right corner of the 'Learn' tab, there are 'Refresh' and 'Save' buttons. Below these is a section titled 'Learn Parameters' which contains several sliders and dropdown menus. The sliders are for 'Min Delta Temp', 'Auto Start Delta Temp', 'Outside Air Return Air Delta Temp', 'Time Between Samples', 'Date of Last Learn', and 'Outside Air Temp When Learned'. Below the sliders, there is a 'Learn Ready' status indicator which is highlighted with a red rectangular box and displays the text '[READY or NOT READY?]'.

Manually Starting Learning Mode

1. Go to the Learn tab.
2. Note whether Learn Ready reports READY or NOT READY.

If READY is displayed, Learning Mode can be started manually. Otherwise, see Enabling Learning Mode to Auto Start on page 10.

NOTE: In special cases, you may consider the Alternative to Running Learning

Manually Starting Learning Mode

1. Leave Min Delta Temp set to the default or adjust if needed.

NOTE: If the ΔT becomes less than Min Delta Temp, the AFMS controller will abort Learning Mode. This is to ensure that the controller does not receive unusable learning samples. Setting Min Delta Temp at a 15°F or larger difference is recommended.

2. Leave Time Between Samples (Seconds) set to the default or adjust it if needed.

NOTE: Most often, Time Between Samples (Seconds) can be left on the default (60 seconds). You might increase the value if the damper Stroke Time is longer than that of a typical unit, or if the damper actuator requires extra time to respond. You might decrease it if a large ΔT is present and time at the site is limited. However, too little time between samples could result in inaccurate measurements.

3. For Learning Mode, select ACTIVE.
4. Click Save.

5. Wait for Learning Mode to complete.

NOTE: To calculate the total time (in minutes) that Learning Mode should take to complete, multiply Time Between Samples (Seconds) by 91, then divide by 60.

The screenshot shows a web-based control interface with four tabs: Monitor, Configure, Learn, and Tune. The 'Learn' tab is active. Below the tabs is a 'Learn Parameters' section enclosed in a red rectangular box. This section contains several input fields and buttons. At the top right of the interface, there are 'Refresh' and '*Save' buttons. The 'Learn Parameters' section includes: 'Min Delta Temp' with a value of '≥15 recommended' (highlighted with a red box); 'Auto Start Delta Temp' with a value of '20'; 'Outside Air Return Air Delta Temp' which is empty; 'Time Between Samples' with a value of '60' and a note '(or adjust if needed)' (highlighted with a red box); 'Date of Last Learn' which is empty; 'Outside Air Temp When Learned' which is empty; 'Learn Ready' with a value of 'READY'; 'Auto Learn Enable' with a dropdown menu set to 'OFF'; and 'Learning Mode' with a dropdown menu set to 'ACTIVE' (highlighted with a red box).

Enabling Learning Mode to Auto Start

If Learn Ready reports NOT READY because of currently unfavorable temperatures, you may enable the AFMS to automatically start Learning Mode when it detects favorable temperatures later (overnight is likely).

1. Leave Min Delta Temp set to the default or adjust it if needed.

NOTE: If the ΔT becomes less than Min Delta Temp, the AFMS controller will abort Learning Mode. This is to ensure that the controller does not receive unusable learning samples. Setting Min Delta Temp at a 15°F or larger difference is recommended.

2. Leave Auto Start Delta Temp set to the default, or adjust it if needed.

NOTE: When the ΔT reaches the Auto Start Delta Temp, Learning Mode will start. Learning Mode will complete if the ΔT remains greater than the Min Delta Temp for the entire duration. An Auto Start Delta Temp that is at least 20°F more than Min Delta Temp is recommended.

3. Leave Time Between Samples (Seconds) set to the default or adjust it if needed.

NOTE: Most often, Time Between Samples (Seconds) can be left on the default (60 seconds). You might increase the value if the damper Stroke Time is longer than that of a typical unit, or if the damper actuator requires extra time to respond.

4. For Auto Learn Enable, select ON.

5. Click Save.

6. Wait for Learning Mode to complete during favorable temperatures (overnight is likely).

Monitor Configure **Learn** Tune

Refresh **Save**

Learn Parameters

Min Delta Temp

Auto Start Delta Temp

Outside Air Return Air Delta Temp

Time Between Samples

Date of Last Learn

Outside Air Temp When Learned

Learn Ready **NOT READY**

Auto Learn Enable **ON** ▼

Learning Mode **OFF** ▼

Verify that AFMS Status is in Learning Mode

On the Monitor page, in the Operation group, verify whether AFMS Status reports LEARN MODE.

Monitor **Configure** Learn Tune

Operation

Outside Air Flow

Return Air Flow

Supply Air Flow

AFMS Status **LEARN MODE**

Control Mode

Verify Learning Mode Completed and Record Date

After the AFMS completes Learning Mode (approximately 2 hours), on the Learn page:

1. Locate the Date of Last Learn (YYMMDD).
2. Enter the date into the Note Sheets for AFMS Checkout and Commissioning.

Monitor Configure **Learn** Tune

Refresh Save

Learn Parameters

Min Delta Temp

Auto Start Delta Temp

Outside Air Return Air Delta Temp

Time Between Samples

Date of Last Learn **(record date that is here)**

Outside Air Temp When Learned

Alternative to Running Learning Mode

- While not ideal, the damper characterization data can be calculated and entered manually in the AFMS Table.

This should only be done if—in the allotted time for setting up the AFMS—the ΔT is unlikely to remain greater than the Min Delta

- Temp for the duration of Learning Mode.
- To make the calculations, use the %OA/%RA equations found in ASHRAE Standard 111, section 7.6.3.3, “Flow Rate Approximation by Temperature Ratio”.
 1. Go to the Configure tab.
 2. For Damper Setpoint, enter the first damper position (Closed, i.e. 0) found in the AFMS Table (on the Tune tab).

NOTE: Note: Each subsequent time through this process, enter the next damper position from the table: 5, 10, 15, 20, 30, 40, 50, 60, 70, 80, 90, 100.
 3. Click Save.
 4. Go to the Monitor tab.
 5. Allow the Outside Air Temp, Return Air Temp, and Mixed Air Temp to stabilize.
 6. Depending on the application, calculate either the OA Fraction or RA Fraction, using the temperature readings and either the %OA or %RA equation from the standard.
 7. Go to the Tune tab.
 8. Enter the result into the OA Fraction column/ RA Fraction column (depending on the application).

NOTE: For Pressure Assist applications, also enter the Supply Air Flow reading into the SA Flow column and the OAD Diff. Pressure / RAD Diff. Pressure reading into the Diff. Pressure column.
 9. Select Save.

Access the AFMS Table and Record Data

On the Tune page, in the AFMS Table group:

1. Locate the Characterized Airflow Performance™ data, found in:
 - The OA Fraction column (for both standard and outside air damper pressure assist applications)
 - The RA Fraction column (for return air damper pressure assist applications only)
 - The SA Flow column (for both types of pressure assist applications only)
 - The Diff. Pressure column (for both types of pressure assist applications only)
2. Record the data into the Note Sheets for AFMS Checkout and Commissioning:
 - For standard applications, use the AFMS Post Table.
 - For pressure assist applications, use the AFMS PA Post Table.

The top screenshot shows the 'AFMS Table' with columns for 'Standard', 'SA Fraction', 'SA Flow', and 'Diff. Pressure'. The bottom screenshot shows the same table with a red box highlighting the 'Standard' column and the 'SA Fraction' column.

Set Control Mode

On the Configure page, in the System Setup group:

- For Control Mode, select from the drop-down menu the option that will be the AFMS's normal mode for this installation:
 - OA FLOW CTRL: The AFMS modulates the damper actuator to maintain the Outside Air Flow Setpoint (CFM).
 - PASS THROUGH: The AFMS passes control of the damper actuator to another controller. (The AFMS measures and monitors only.)
 - MAT CTRL: The AFMS modulates the damper actuator to maintain the Mixed Air Temp Setpoint ($^{\circ}\text{F}/^{\circ}\text{C}$).
- Click Save.

The screenshot shows the 'System Setup' group in the 'Configure' page. The 'Control Mode' dropdown menu is open, showing options: OA FLOW CTRL, DAMPER POSITION CTRL, PASS THROUGH, and MAT CTRL. The 'PASS THROUGH' option is highlighted. A red box highlights the 'Control Mode' dropdown menu.

ABOUT TESTING AND BALANCING AFMS

- If everything was installed and configured correctly prior to running Learning Mode, the AFMS Table data is very reliable. The AFMS uses the same method from ASHRAE Standard 111 (Section 7.6.3.3, “Flow Rate Approximation by Temperature Ratio”) that a good tester and balancer should use. Furthermore, as the AFMS performs the method, it takes the OAT, RAT, and MAT measurements simultaneously and several times for reliable averages, increasing the reliability of the data.
- However, should verification be required, the following guidelines should be observed:
 - Make measurements using NIST-traceable instruments.
 - Use the method from ASHRAE Standard 111, Section 7.6.3.3, “Flow Rate Approximation by Temperature Ratio” to calculate the table data.
 - Should an adjustment be needed, adjust single data items from the AFMS Table rather than making a linear adjustment.

NOTE: TAB OA Factor (found in the Calibration group under Tune) should be at 1 and not adjusted.

- If large adjustments need to be made to the AFMS Table data, one or more of the sensors may have been installed incorrectly and/or a setting was misconfigured prior to running Learning Mode. The problem should be corrected by fixing the installation and/or configuration, then running Learning Mode again.

HANDLING PRECAUTIONS

For digital and electronic sensors, thermostats, and controllers, take reasonable precautions to prevent electrostatic discharges to the devices when installing, servicing, or operating them. Discharge accumulated static electricity by touching one’s hand to a securely grounded object before working with each device.

IMPORTANT NOTICES

- KMC Controls® and NetSensor® are all registered trademarks of KMC Controls.
- KMC Conquest™, KMC Connect™, KMC Converge™, and TotalControl™ are all trademarks of KMC Controls. All other products or name brands mentioned are trademarks of their respective companies or organizations.
- The material in this document is for information purposes only. The contents and the product it describes are subject to change without notice.
- KMC Controls, Inc. makes no representations or warranties with respect to this document. In no event shall KMC Controls, Inc. be liable for any damages, direct or incidental, arising out of or related to the use of this document.
- The KMC logo is a registered trademark of KMC Controls, Inc. All rights reserved.
- The KMC Connect Lite™ app for NFC configuration is protected under United States Patent Number 10,006,654. Pat. <https://www.kmccontrols.com/patents/>

SUPPORT

Additional resources for installation, configuration, application, operation, programming, upgrading and much more are available on the KMC Controls web site (www.kmccontrols.com). Viewing all available files requires logging in to the site.

Documents / Resources



[KMC CONTROLS BAC-5051-A-E Airflow Measurement System](#) [pdf] User Guide

BAC-5051-A-E, BAC-5051-A-E Airflow Measurement System, Airflow Measurement System, Measurement System, System

References

- [KMC Controls | Building Automation and Control Solutions](#)
- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.