

Knightsbridge
FPR9940BC
Switched
Socket with
Dual USB



Knightsbridge FPR9940BC Switched Socket with Dual USB Instruction Manual

[Home](#) » [Knightsbridge](#) » Knightsbridge FPR9940BC Switched Socket with Dual USB Instruction Manual 

Contents

- [1 Knightsbridge FPR9940BC Switched Socket with Dual USB](#)
- [2 INSTALLATION](#)
- [3 BLUETOOTH AUDIO SPECIFICATION](#)
- [4 BLUETOOTH CONNECTION](#)
- [5 DIMMER SWITCHES](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)

Knightsbridge

Knightsbridge FPR9940BC Switched Socket with Dual USB

**Supplied By:**

- (UK) Manufacturer ML Accessories Ltd, Unit E Chiltern Park, Boscombe Road, Dunstable LU5 4LT, www.mlaccessories.co.uk
- (EU) SLV Lighting Group, Daimlerstraße 21-23, 52531 Übach-Palenberg, Germany
- Email: eprel@group.slv.com

Made in China

These instructions should be read carefully and retained after installation by the end user for future reference and maintenance.

SAFETY

- This product must be installed by the latest edition of the IEE Wiring Regulations (BS7671) and current Building Regulations. If in any doubt, consult a qualified electrician
- Please isolate mains before installation or maintenance
- Check the total load on the circuit (including when this product is fitted does not exceed the rating of the circuit cable, fuse, or circuit breaker)
- Do not overload this accessory or subject it to conditions outside its rating
- Please note the IP (Ingress Protection) rating of this product when deciding the location for installation
- This product is for indoor use only

INSTALLATION

- • Connect the accessory as per the diagram in this manual, ensuring the correct polarity is observed (terminal positions may vary)
- L – LIVE – Brown
- N – NEUTRAL – Blue
- EARTH – Green and yellow

- All earth connections must be made and maintained. Use green/yellow sleeving on-earth conductors that are not insulated.
- Check all electrical connections are secure with all exposed copper within the terminal and no loose strands of cable. If using the flex outlet, secure the flex with the cord grip provided
- Fit the unit into a suitable wall box taking care not to compress, damage, or trap any cables, and secure it with the screws provided. If using metal mounting boxes with four lugs, remove the top and bottom lugs or bend fully back

FLAT PLATE, SCREWLESS AND RAISED EDGE FIXING

- Always ensure the wall surface is flat and smooth
- This unit is fitted with a gasket – this MUST NOT be removed, this gasket is to stop discolouration of the plate due to natural moisture in some wall finishes
- This product must be fitted only after painting and decorating is complete.
- Screwless products only – remove the front plate by placing a medium-sized flat-head screwdriver in the notch at the side and lever off gently. After wiring and fitting to the wall box as per the instructions in this document, clip the front plate onto the main assembly ensuring the screwdriver notch is at the side.

METAL CLAD FIXING

- Remove the front faceplate and mount the rear box in a suitable location. The back box has multiple 20mm cable entry points to aid installation.
- Wire as per the instructions in this document, and fix the plate to the back box using the screws provided

OUTLETS WITH USB CHARGING FUNCTION

These products are designed for charging portable USB devices only and contain a short circuit and overload protection feature. If there is no power from the USB socket unplug the connected device. Check to ensure the USB socket and USB device have not come into contact with water, liquid, or debris and the cable to the device is not damaged. With no device connected to the USB socket, it will automatically reset and be ready for use.

 
 
WARNING

USB or Bluetooth products, dimmers, shaver sockets, and products with LED or neon indicators must be disconnected from the circuit if subjected to any high voltage or insulation resistance testing. Irreparable damage will occur if this instruction is not followed. Please note this kind of damage will void the warranty. Please note that we do not recommend our 13A sockets be used for Electric Vehicle (EV) charging for prolonged periods.



WARNING

This unit should NOT be subject to any insulation resistance testing, failure to follow this instruction could cause damage to the USB circuit and void the warranty. Clean with a soft dry cloth only, do not use aggressive cleaning products or solvents that may damage the product and invalidate the warranty.

13A SWITCHED SOCKET

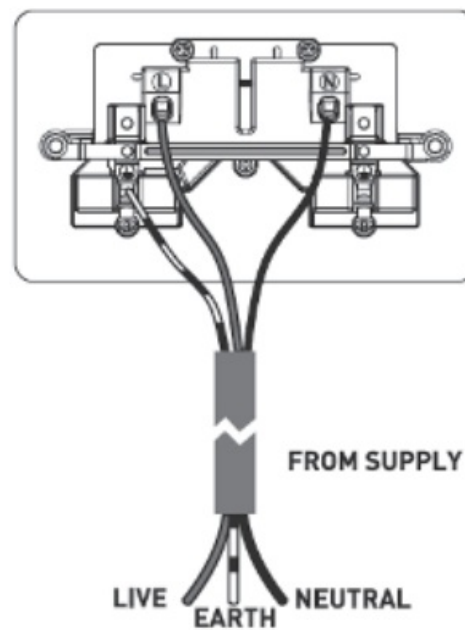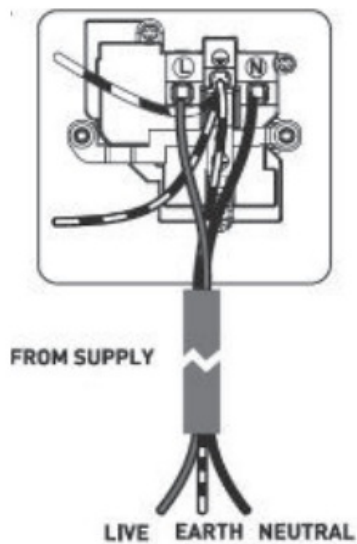


13A SOCKET WITH USB CHARGER

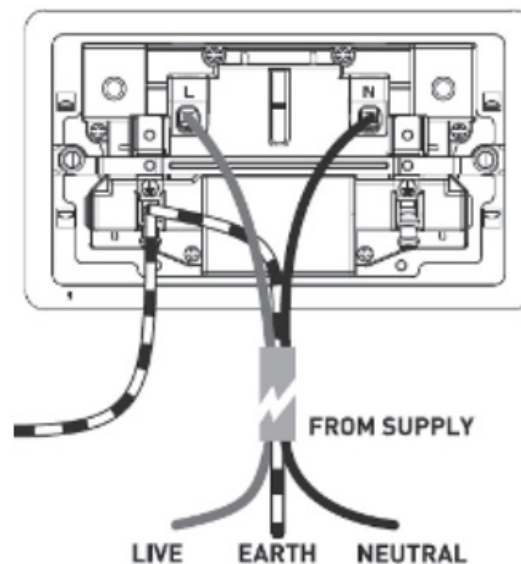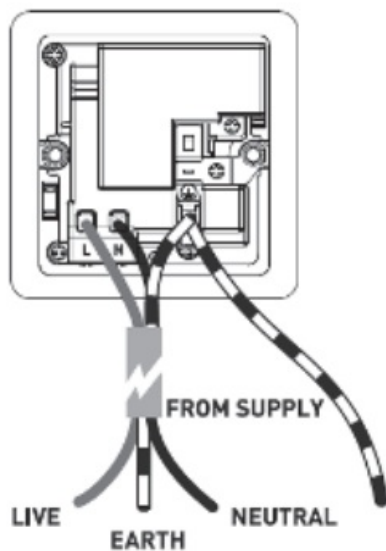  


CHARGING INDICATOR

Products with LED chargers will change color depending on the level of current drawn by the connected device. The Red/Green status indicator gives an approximate charge reading – please refer to the device battery level for a true reading.

 13A SOCKET WITH QUAD USB CHARGER / QUAD USB CHARGER

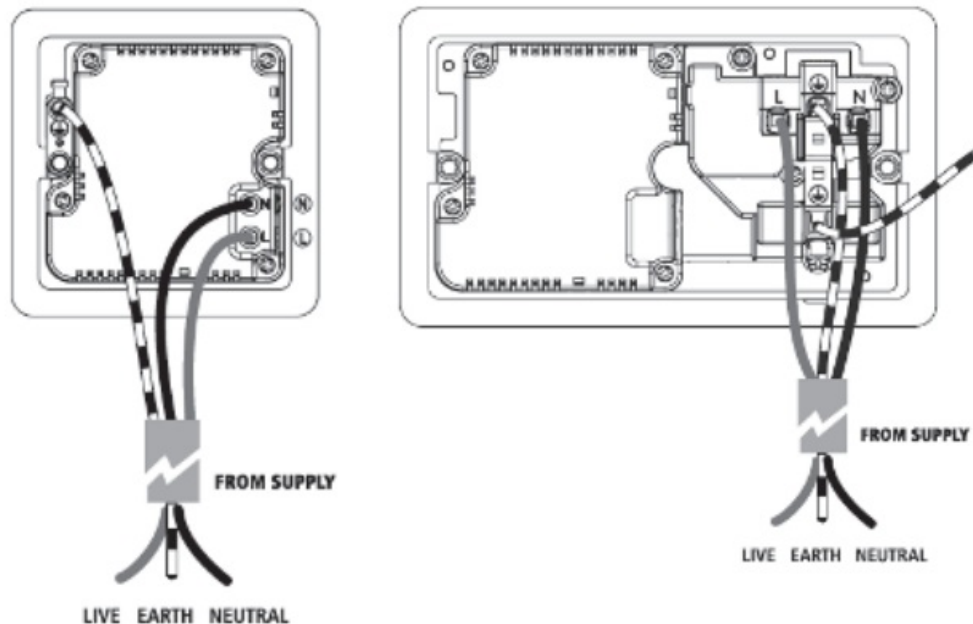

 13A SOCKET WITH USB AND BLUETOOTH SPEAKER / STAND ALONE BLUETOOTH SPEAKER

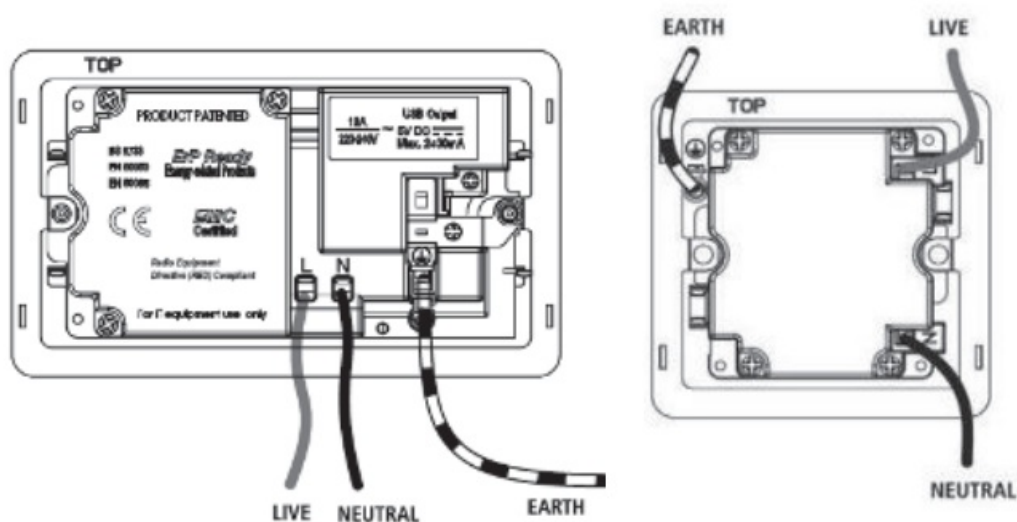

BLUETOOTH AUDIO SPECIFICATION

 
- Output Power: Max. 3W RMS
- Sensitivity: L/R 380MV
- SNR: >80dB
- Speaker Frequency Range: 29047 – 16KH

BLUETOOTH CONNECTION

- Press the power button directly under the speaker
- The bluetooth indicator will begin to flash
- Activate Bluetooth pairing on your mobile device and scan for Bluetooth devices.
- Connect to the devices named SPEAKER, SPEAKER01, SPEAKER,02 etc.
- Once a connection has been established you will hear a “beep” sound and the Bluetooth indicator will flash at a


different frequency to confirm

DUAL VOLTAGE SHAVER SOCKET / 5A UNSWITCHED ROUND PIN SOCKET

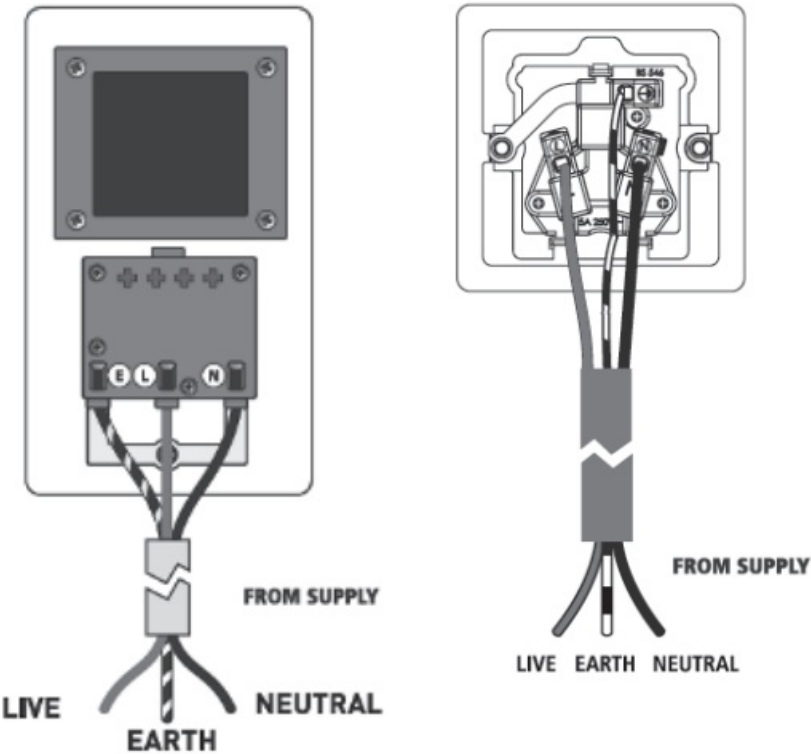


IOAX 2-WAY SWITCH

 Terminal positions may alter

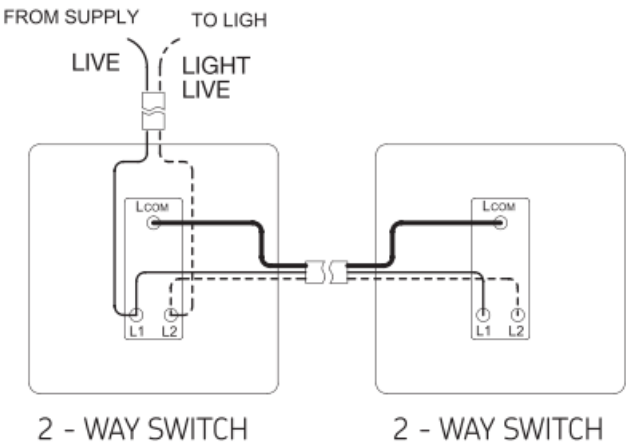


IOAX INTERMEDIATE SWITCH

 
Terminal positions may alter

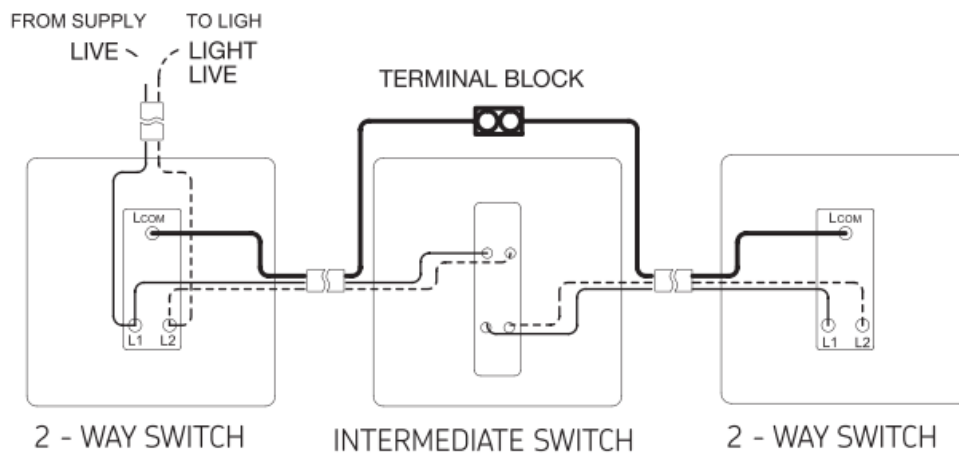

10AX FAN ISOLATOR

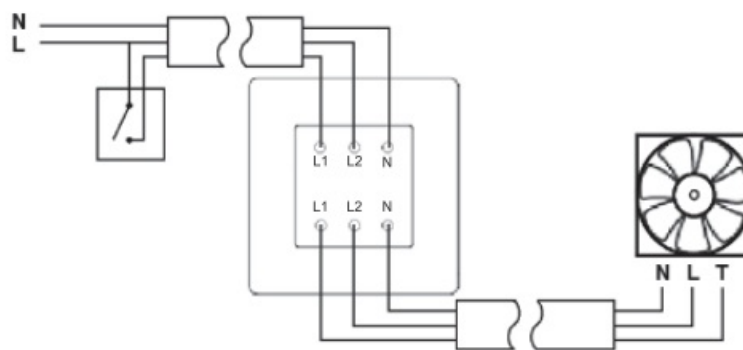 

DIMMER

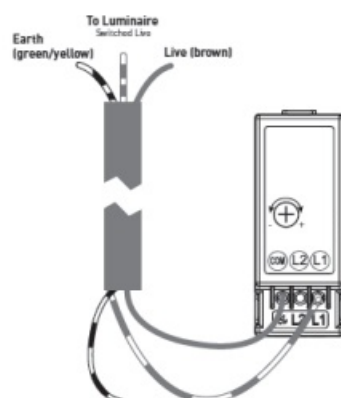 

DIMMER SWITCHES

 
- For a multiple gang dimmer repeat the wiring method for each dimmer unit
- Two-way switching with a dimmer can only be achieved when there is only one dimmer in the system. Two-way dimming cannot be achieved

- Please check with the LED lamp manufacturer for compatibility.
- Ensure a mixed load is not selected, i.e. incandescent mixed with LED. Consider the minimum and maximum range of the dimmer according to the type of load installed.
- A small audible buzz may be emitted when using certain products. This is normal.


DIMMING ADJUSTMENT

If flicker can be seen in the dimming range at the lowest point, this can be eliminated by adjusting the potentiometer dial on the back of the unit (see Fig. X) To adjust the potentiometer dial, isolate the power and rotate the dimmer switch to its minimum position. With the aid of a small flat-head screwdriver, rotate the potentiometer to adjust the low end of the dimming range. Switch on and check for correct operation. Note – The dial has a stop position. Rotating past the stop position will not achieve further adjustment and may damage the unit.


2-WAY DIMMER

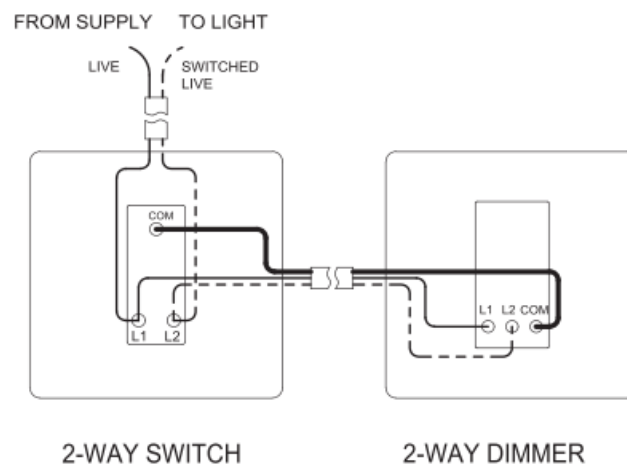

13A FUSED SPUR/ 20A SWITCH

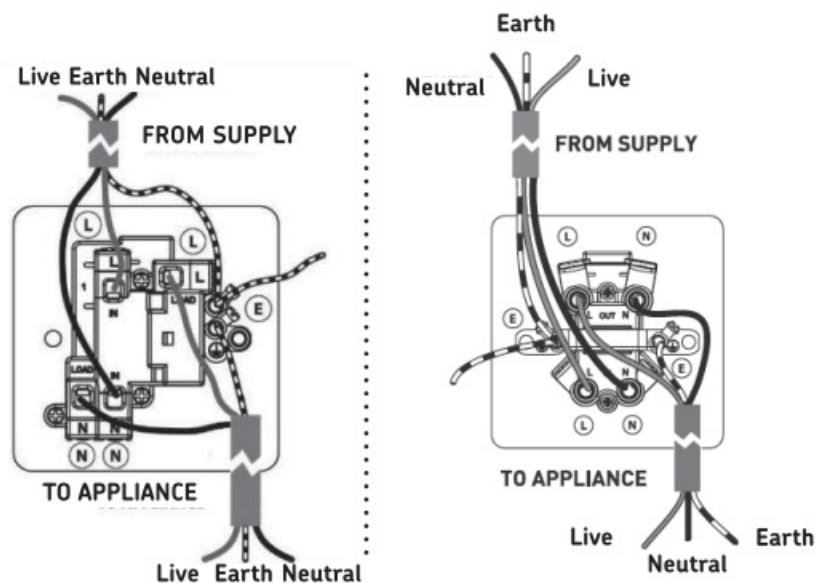 


45A SWITCHES

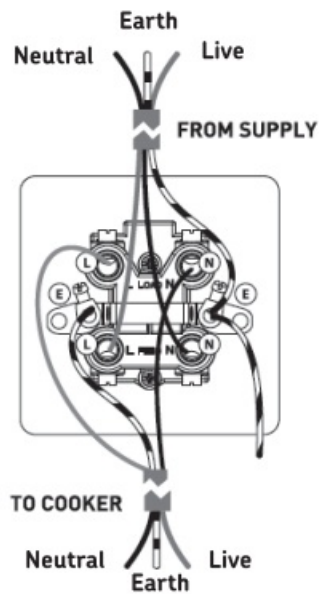 


These products have no cable entry and should only be used for hard-wired installations.

 COOKER CONTROL UNIT

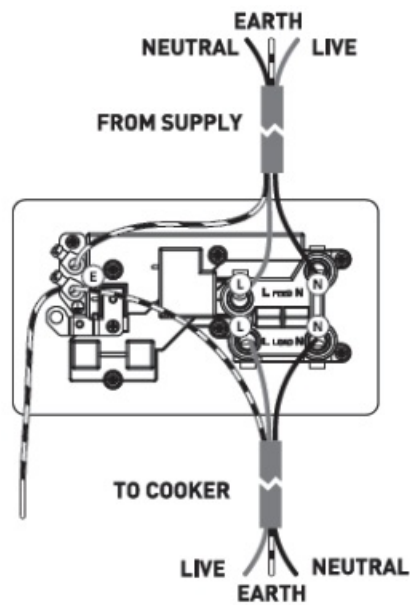

Documents / Resources

	<p>Knightsbridge FPR9940BC Switched Socket with Dual USB [pdf] Instruction Manual 1665538, 120822, FPR9940BC Switched Socket with Dual USB, FPR9940BC, Switched Socket with Dual USB, Socket with Dual USB, with Dual USB, Dual USB, USB</p>
---	--

References

- [User Manual](#)