

 


# knog Bilby and Bilby Run User Guide

[Home](#) » [knog](#) » knog Bilby and Bilby Run User Guide 

*knog Bilby and Bilby Run User Guide*

## BILBY & BILBY RUN QUICK START GUIDE

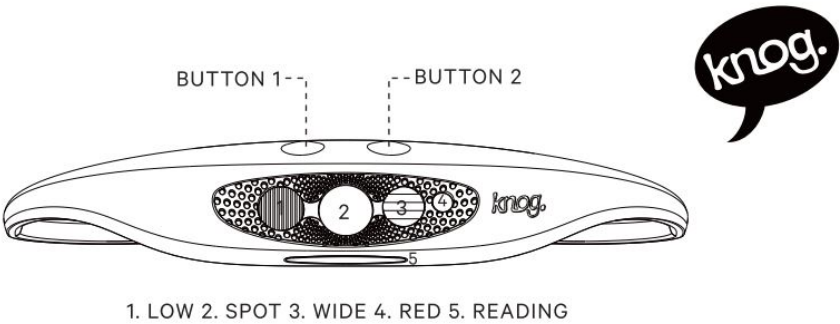

## Contents

- 1 GET STARTED
- 2 OPERATION
- 3 WHEN LIGHT IS ON
- 4 WHEN LIGHT IS OFF
- 5 CHARGING
- 6 ADJUSTABLE HEADSTRAP
- 7 CHECKING BATTERY LEVEL
- 8 LOCK
- 9 MODES
- 10 BRIGHTNESS
- 11 BOOST MODES
- 12 LOW BATTERY
- 13 TILT FUNCTION
- 14 MODE MAKER
- 15 CARE & MAINTENANCE
- 16 WARRANTY
- 17 Documents / Resources
- 18 Related Posts

## GET STARTED

Bilby comes locked To unlock hold both buttons for 3 seconds

## OPERATION

**Turn On:** Long press of button 1

**Turn Off:** Press and hold both buttons

## WHEN LIGHT IS ON

OPERATION	BUTTON 1	BUTTON 2
Short Press	Change Mode	Change Brightness
Long Press	Tilt Beam Down	Tilt Beam Up
Double Press	Boost Mode 1	Halo Mode*
Press & Hold both buttons	Turn Off	

 
\*Halo Mode only available with Bilby Run

## WHEN LIGHT IS OFF

OPERATION	BUTTON 1	BUTTON 2
Short Press	Battery Charge Status	Battery Charge Status
Long Press	Turn Light On	-
Double Press	-	-
Press & Hold both buttons	Lock/Unlock Light	


## CHARGING

Fully charge the Bilby before the first use. Pop out the inner pod to access the USB. Then charge in any USB charge port. Charge time; 4 hr.

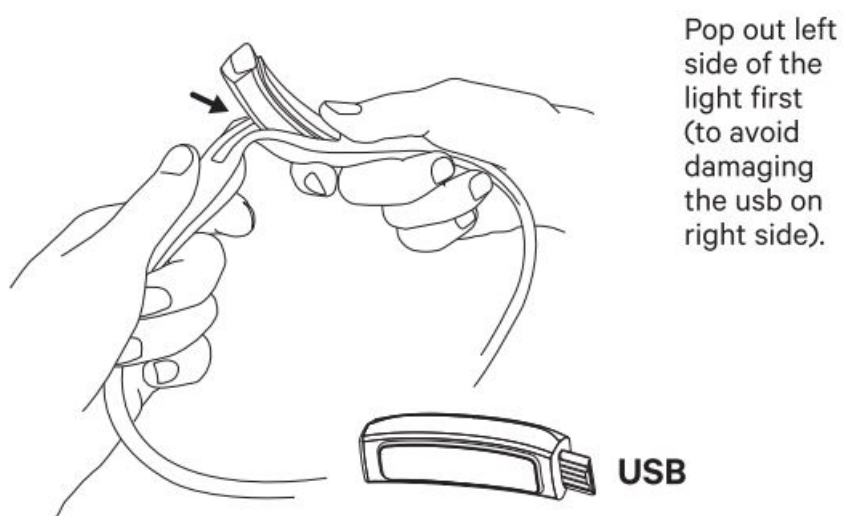


## ADJUSTABLE HEADSTRAP

 The silicone strap adjusts with a toggle. Once you've found your size you can set and forget or adjust on the fly

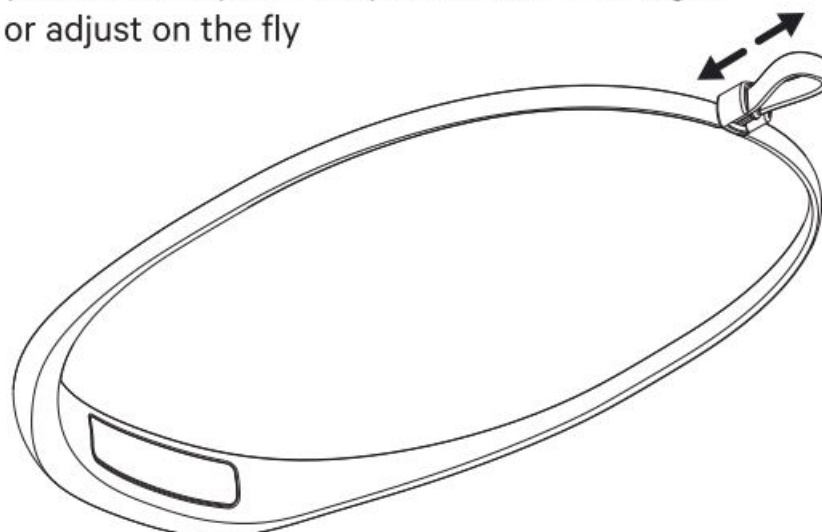


## CHECKING BATTERY LEVEL

 The reading lights show the battery level. When Bilby is turned off, quick press any button.

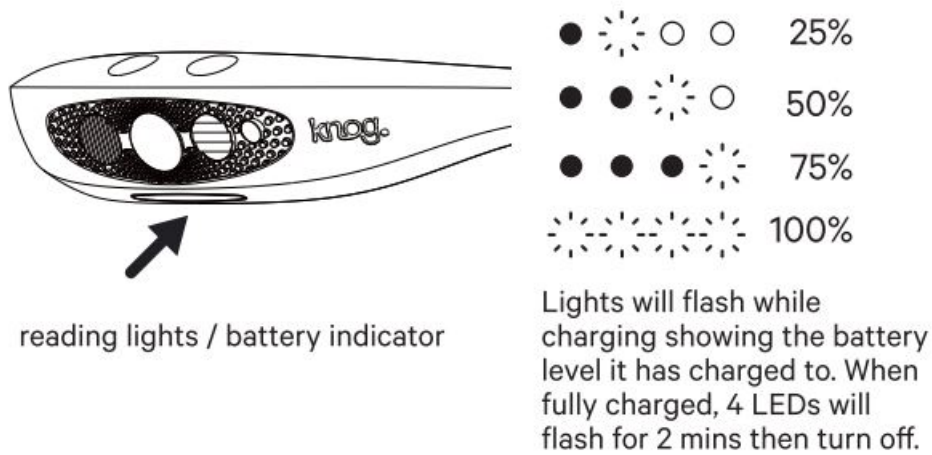

## LOCK

 If you accidentally press any button when the Bilby is locked the red light will flash twice. To lock/unlock: Hold both buttons for 3 seconds. White light will flash twice to show that Bilby is unlocked. Red light will flash twice to show that Bilby is locked.

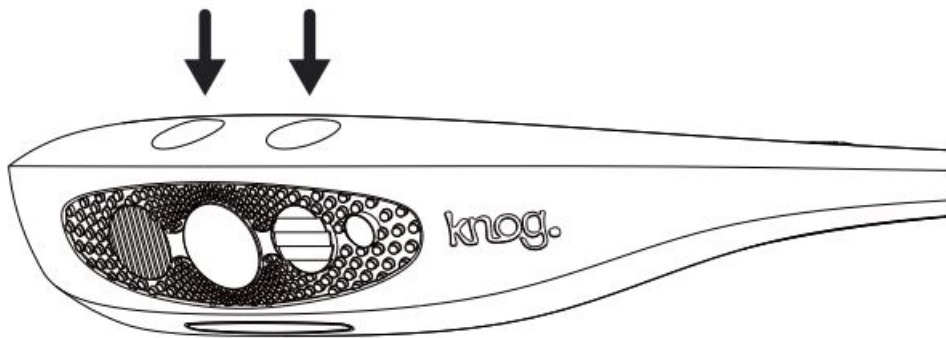

## MODES

Short press of button 1 to scroll through modes. The light will slowly dim to extend runtime, if you wish to go back to full output of your chosen mode press the mode button once.

Modes: Spot, Wide, Low, Red, Reading

## BRIGHTNESS

Short press of button 2 to scroll through brightness settings. Brightness: Max, High, Med, Low

## BOOST MODES

Double click either button to activate boost mode, the Bilby will power up to maximum.

**Button 1** – Spot and low (240 Lm)

**Button 2** – Spot and wide (400 Lm)

The light will slowly dim to extend runtime, to boost to full output double click again.

## LOW BATTERY

When the battery is low the light output will drop to increase runtime.

## TILT FUNCTION

Hold down the button 1 to tilt the light down.

Hold down the button 2 to tilt the light up.

SETTINGS	OUTPUT (LUMEN)	RUNTIME (HOURS)
Boost Right High	400	5
Boost Right Low	50	60
Boost Left High	240	9
Boost Left Low	35	80
Ambient Right High	200	14
Ambient Right Low	25	105
Ambient Left High	48	22
Ambient Left Low	7	98
Spot High	200	14
Spot Low	25	105
Red High	7	32
Red Low	2	103
Reading High	10	17
Reading Low	2	75

## MODE MAKER

The Bilby is compatible with the Mode Maker app to allow customisation of the light modes. Open Mode Maker, plug the USB into your computer, drag and drop the modes that you want and select upload.

 
## CARE & MAINTENANCE

To clean: wipe with cloth, don't use harsh chemicals, air dry, don't sun dry.

## WARRANTY

The light is guaranteed for 2 years against manufacturing defects only. See the website for more details [KNOG.COM](https://www.knog.com)

## Documents / Resources

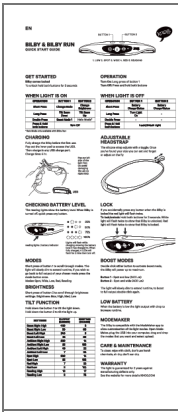

[knog Bilby and Bilby Run](#) [pdf] User Guide  
Bilby and Bilby Run