



KOBALT ET-22 Continuity Tester User Manual

[Home](#) » [Kobalt](#) » KOBALT ET-22 Continuity Tester User Manual 

Contents

- [1 KOBALT ET-22 Continuity Tester](#)
- [2 PRODUCT SPECIFICATIONS](#)
- [3 PACKAGE CONTENTS](#)
- [4 OPERATING INSTRUCTIONS](#)
- [5 CARE AND MAINTENANCE](#)
- [6 SAFETY INFORMATION](#)
- [7 TROUBLESHOOTING](#)
- [8 WARRANTY](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)




KOBALT ET-22 Continuity Tester



PRODUCT SPECIFICATIONS

GENERAL SPECIFICATIONS	
Battery	AAA1.5V battery
Operating Environment	32°F to 104°F (0°C to 40°C) at <80% relative humidity
Storage Environment	14°F to 140°F (-10°C to 60°C) at <80% relative humidity
Operating Altitude	7000 ft (2000m) maximum
Net Weight	Approx. 0.081 lb (36g)
Dimensions	Approx. 5.1 x 0.8 x 0.6 in (130 x 21 x 16 mm)


PACKAGE CONTENTS

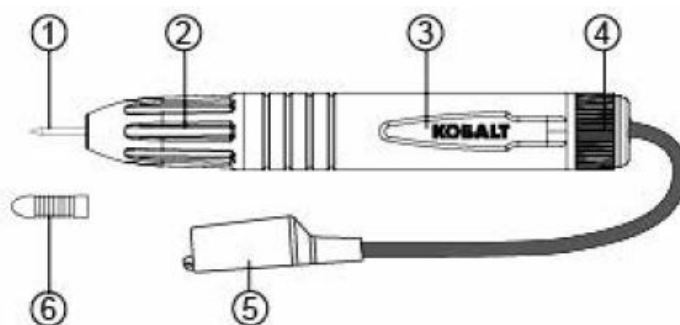

PART	DESCRIPTION
1	Test tip
2	Light indicator
3	Pocket dip
4	Screw battery cover
5	Test alligator
6	Rubber tip

OPERATING INSTRUCTIONS

- Requires one AAA 1.5V battery
- Install battery before using.

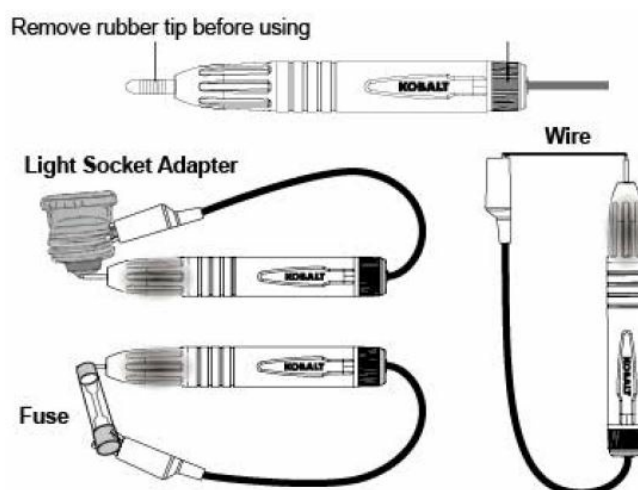

Battery Replacement

- Carefully unscrew battery cap at the rear of the tester.
- Replace batteries with one AAA 1.5V batteries. Observe polarity.
- Screw cover onto tester until it feels tight. Do not use excessive force.
- Verify operation by using the tester within the defined detection range of the tester.



CARE AND MAINTENANCE

Keep the meter dry. If it gets wet, wipe it off.

Keep the meter clean. Wipe the dirt with a soft cloth dampened with water. Do not use chemicals, cleaning solvents, or detergents.

Use and store the meter in normal temperatures. Temperature extremes can shorten the life of the electronic parts and distort or melt plastic parts.

Handle the meter gently and carefully. Dropping it can damage the electronic parts or the case.

Use only fresh batteries of the recommended size and type.

Batteries are to be inserted with the correct polarity. Remove old or weak batteries so they do not leak and damage the unit.

Do not mix old and new batteries. Do not mix different types of batteries such as alkaline, carbon-zinc, or rechargeable batteries

Non-rechargeable batteries are not to be recharged.

If the meter is to be stored for a long period of time, the batteries should be removed to prevent damage to the unit.

SAFETY INFORMATION

WARNINGS

- Please read and understand this entire manual before using this product.
- To avoid electric shock, never test continuity on a live circuit.

Applying voltage to tester will damage tester.

PRODUCT COMPLIANCE

Users of this product are cautioned not to make modifications or changes. Doing so may void the compliance of this product with applicable laws and regulatory requirements and may result in the loss of the user's authority to operate the equipment

"This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Neon light no indication	Run out of battery	Replace battery

LOWes Home Centers LLC
1000 Lowe's Blvd
Mooresville, NC 28117A
1-888-3KOBALT (1-888-356-2258)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

“**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.”

WARRANTY

Three-year warranty. Incidental or consequential damages are excluded from this warranty.

ATTACH YOUR RECEIPT HERE


Serial Number

Purchase Date

Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-888-3KOBALT (1-888-356-2258), 8 a.m. – 8 p.m., EST

Monday Sunday. You may also contact us anytime at www.lowes.com

Documents / Resources

	<p>KOBALT ET-22 Continuity Tester [pdf] User Manual ET-22 Continuity Tester, ET-22, Continuity Tester, Tester</p>
--	---